



REPLACE A LOCK INSTRUCTIONS



# REMOVING A LOCK

## Cylinder Lock Replacement Instructions

### COMPATIBILITY

These instructions are suitable for Asgard's storage with 3 or 5 point locking systems. If you have any problems regarding the lock, please contact us on 08456 580 730.

### TOOLS NEEDED

- 4mm Allen Key
- Small Slotted Screwdriver
- Pozidrive Screw Driver
- 17mm Socket Spanner



1. Push key into lock barrel



2. Remove the inner handle cover plate using a small slotted screwdriver and prise off the internal cover.



3. Remove the centre lock nut from the handle using a 17mm socket spanner (hold the outer handle whilst doing this)



4. The inner handle will come away revealing the lock cover plate.



5. Using a 4mm allen key, remove the 4 bolts. Remove one pozi headed bolt from the centre of the lock cover plate.



6. Remove the lock cover plate. It may need a little wiggle!



7. Remove the single pozi head screw from RH side of the side of the lock housing (this screw holds in the lock barrel)



8. From the front of the door turn the key anti-clockwise to approximately 1 o'clock until the lock barrel is loose.



9. Carefully draw the key backwards, the barrel should slide out from the door, still attached to the key.



10. Your door should look like above from the outside.

# INSERTING A LOCK

## *Cylinder Lock Replacement Instructions*

### COMPATIBILITY

These instructions are suitable for Asgard's storage with 3 or 5 point locking systems.  
If you have any problems regarding the lock, please contact us on 08456 580 730.

### TOOLS NEEDED

- 4mm Allen Key
- Pozidrive Screw Driver
- Small Slotted Screwdriver
- 17mm Socket Spanner



10. Push the new lock back into the door until it is fully located.



10.a When correctly positioned the barrel just sits back from the front of the plastic lock face plate as shown above.



11. Replace the pozi headed bolt which locks in the lock barrel, this must be correctly aligned to engage in the lock barrel, do not over tighten.



12. Replace the lock cover plate as shown.



13. Tighten up the 4mm allen key bolts, ensuring that the pozi head screw is used in the centre of the plate.



14. Replace the inner handle, fit the locking nut but do not over-tighten.



14.a. If the handle doesn't move freely you have over tightened the bolt.



15. Re attach the handle back.



If you have any problems, contact us on 08456 580 730!



Asgard Steel Storage  
1392 Leeds Road, Bradford, BD3 7AE

**08456 580 730**

**Order Online: [www.asgardsss.co.uk](http://www.asgardsss.co.uk)**