

ASGARD 'ADDITION'
PACK CONTENTS:


SELF ASSEMBLY INSTRUCTIONS



ASGARD
ADDITION

PLEASE NOTE THAT FOR SAFETY REASONS THE ASSEMBLY OF THIS SECURE STORAGE UNIT WILL REQUIRE 2 PEOPLE.

ITEM NO	PART DESCRIPTION	QTY
①	32604 TOP PANEL 1832w x 925h	1
②	36443 BASE PANEL 1782.6w x 871.3D	1
③	36557 LH BACK PANEL 893.0 x 1400h	1
④	36558 RH BACK PANEL 920.0w x 1400h	1
⑤	36555 LH SIDE PANEL 875w x 1400h	1
⑥	36556 RH SIDE PANEL 875w x 1400h	1
⑦	36560 LARGE FRT PANEL 507w x 1303h	1
⑧	36561 FASCIA 1222.5w x 140h	1
⑨	32615 RAIN GUARD 1270w x 79.6h	1
⑩	33867 LH DOOR 635.7w x 1195h	1
⑪	36935 RH DOOR 603.5w x 1195h	1
⑫	36934 FRT PNL TRAP PLATE 1268w x 50h	1
⑬	32670 STOPPER BRKT 31.6w x 15h	12
⑭	M5x10 COUNTER SUNK MACHINE SCREW, (DOOR FIXING SCREENS) ZSCREW340	18
⑮	NO 10x5/8 POZIDRIVE SELF TAPPING SCREW, (CARCASE ASSEMBLY) ZSCREW100	130
⑯	M7.5x60 ANCHOR FIXINGS ZSCREW32	4
⑰	PACKING PIECES (FOR LEVELING OF UNIT) ZCOMPPLAS22-23-24	2 at 2mm 2 at 3mm 2 at 5mm
⑱	SELF SEALING PLUGS ZCOMPPLAS02	8

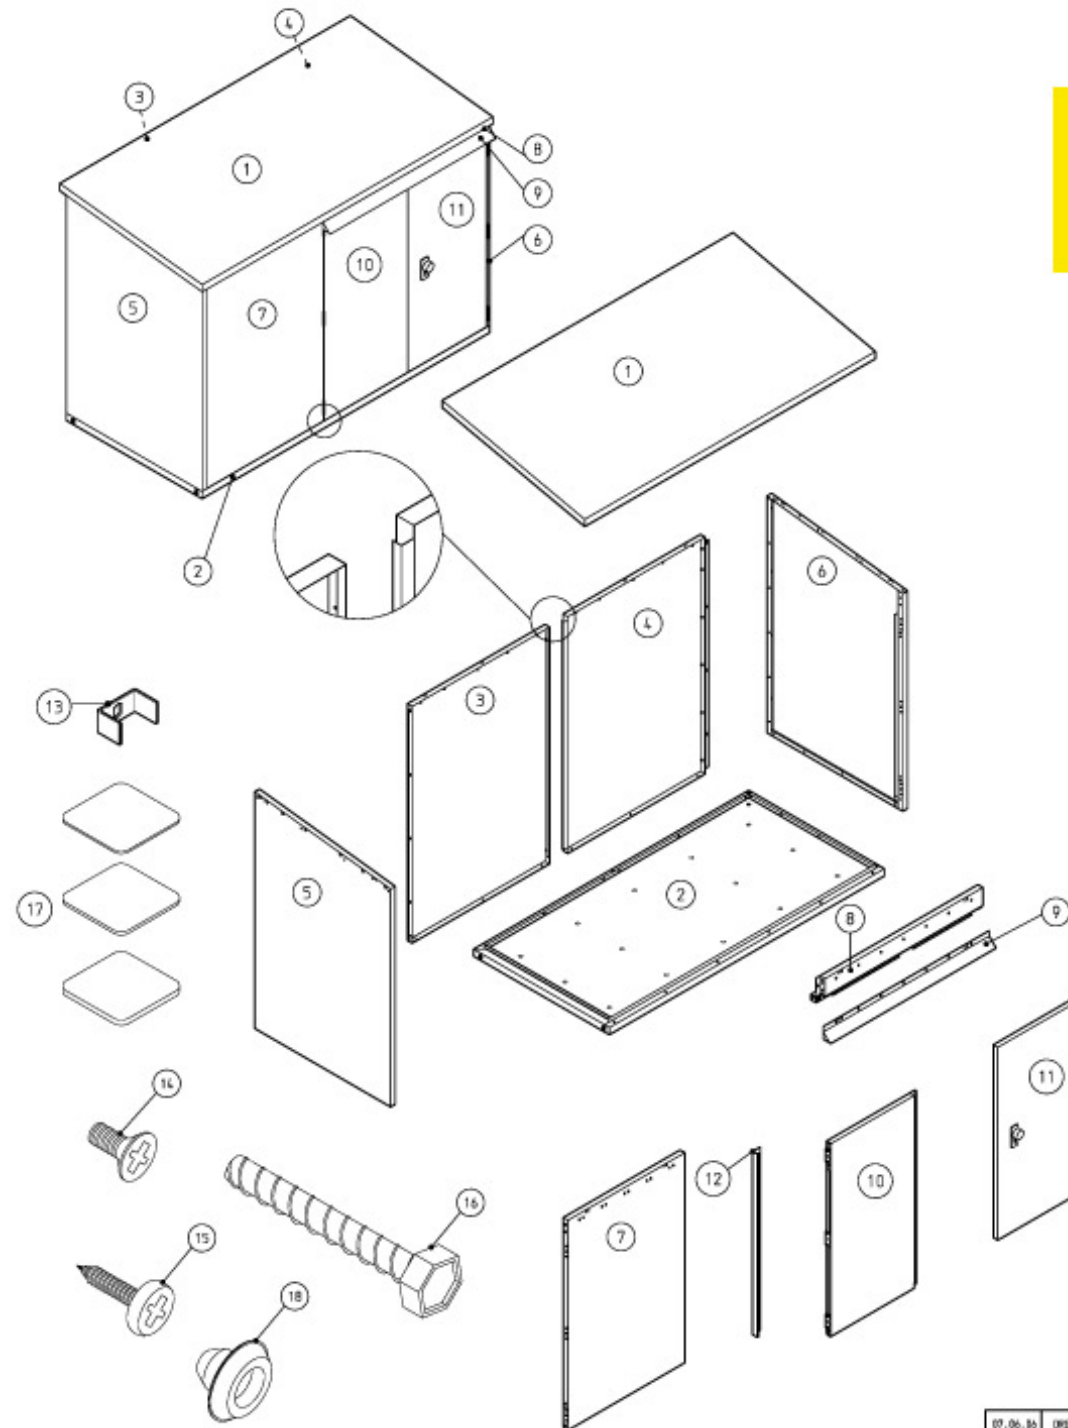

PRIOR TO ASSEMBLY

DECIDE WHICH SIDE YOU WISH TO HANG THE DOORS FROM AS THIS DETERMINES THE POSITION OF FRONT PANEL '7' (STEP 5 OF THE ASSEMBLY)

BASE INSTRUCTIONS

A LEVEL, FIRM SURFACE IS REQUIRED AS A BASE FOR THE UNITS. (EG. CONCRETE, FLAGS) . WE RECOMMEND THE USE OF VIBRATED CAST SLABS, AS THESE WILL GIVE A MORE SECURE FASTENING, WHEN USED IN CONJUNCTION WITH THE 4 ANCHOR SCREWS PROVIDED.

- ANNEXE 1790MMx905MM (70.5"x35.5")
- MINIMUM BASE MEASUREMENT:
- 1990MMx1100MM (78.5"x43.5")

TOOLS REQUIRED

- POZIDRIV SCREWDRIVER AND SLOTTED SCREWDRIVER (POWERDRIVER RECOMMENDED)
- 6MM DIAMETER MASONRY DRILL (FOR ANCHOR FIXINGS).
- 13MM SOCKET SPANNER (FOR ANCHOR FIXINGS)
- SILICONE SEALANT RECOMMENDED

DOOR ALIGNMENT & ANCHORING THE UNIT

IT IS IMPORTANT TO CORRECTLY LEVEL THE UNIT USING THE PACKING PIECES PROVIDED, ONCE ASSEMBLY IN ACCORDANCE WITH THE INSTRUCTIONS OVERLEAF IS COMPLETE AND PRIOR TO FIXING THE UNIT TO THE GROUND.

- SLIDE THE PACKING PIECES UNDER THE CORNERS OF THE UNITS BASE AS REQUIRED UNTIL AN EQUAL GAP HAS BEEN ACHIEVED AROUND THE DOORS. (THIS SHOULD GIVE THEIR SMOOTH OPERATION)
- REMOVE THE RUBBER BASE GROMMITS TO EXPOSE THE FIXING HOLES. DRILL THROUGH, USING 6MM DIAMETER MASONRY DRILL TO A MINIMUM DEPTH OF 70MM. SCREW IN THE ANCHOR FIXINGS. (THESE HAVE A SELF CUTTING THREAD AND SCREW DIRECTLY INTO THE CONCRETE OR FLAGGED BASE)

PLEASE SEE OUR WEBSITE FOR DETAILS OF MAINTENANCE INSTRUCTIONS FOR THIS PRODUCT - WWW.ASGARDSS.CO.UK