

ASGARD GROUND ANCHOR

COMPATIBILITY

All Asgard shed subfloors, excluding the Flexistore and Sentry range.


TOOLS REQUIRED

M10 Ratchet, M17 Spanner, Philips Screwdriver, Marker Pen, 10mm Drill, 10mm masonry drill (for fitting through metal base only).


PLEASE NOTE

Asgard will only fit the ground anchor into our wooden sub floors. If you wish for this to be fitted directly into the metal floor Asgard will not fit as part of our standard installation service. This would be a customer fit only product.


*Included within ground anchor pack

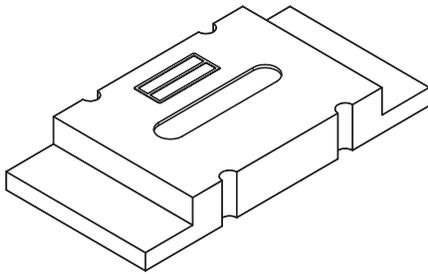

*Cover Plate x1




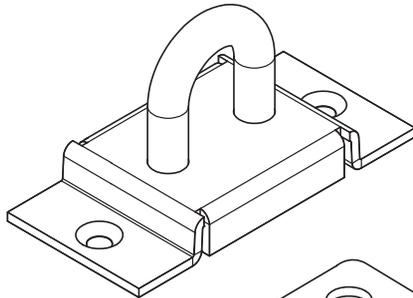


*Hook Plate x1

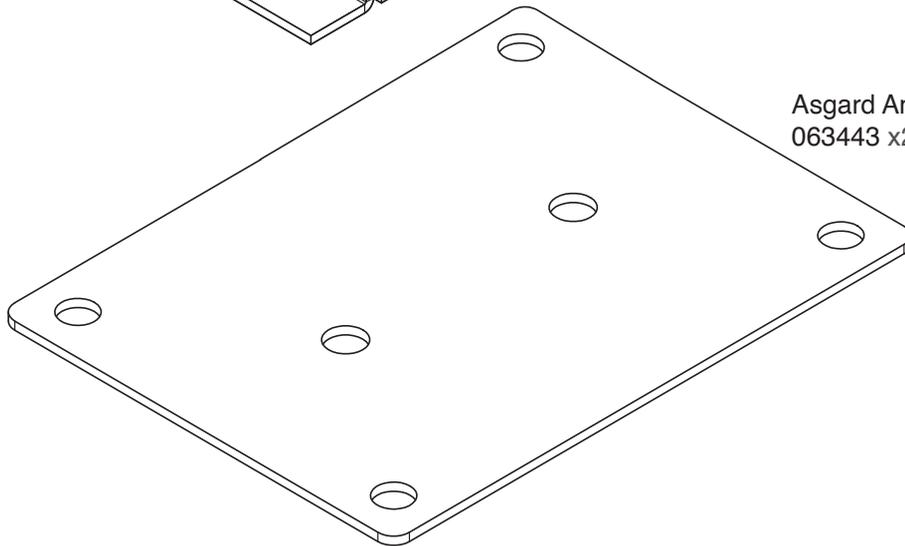


Asgard Anchor Plate
063443 x2

*Base Plate x1

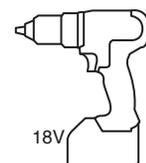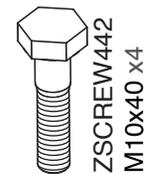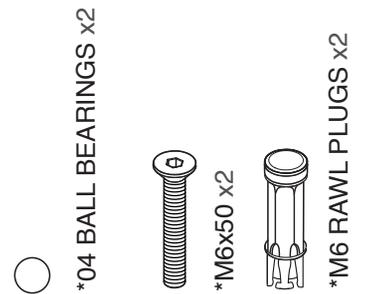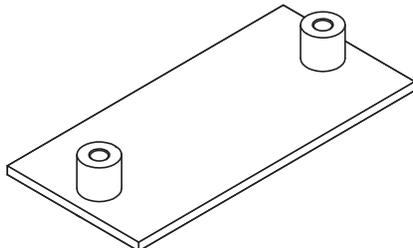


THROUGH SUBFLOOR INSTALLATION


1! INSTALL PRIOR TO FITTING WOODEN SUBFLOOR, IF SUBFLOOR ALREADY INSTALLED, PLEASE REMOVE THE SUBFLOOR OUT OF THE SHED

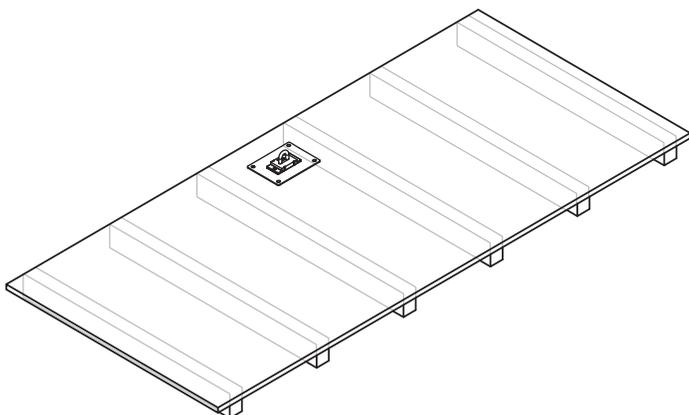


2! USE ANCHOR PLATE AS TEMPLATE TO DRILL 6x M10 HOLES

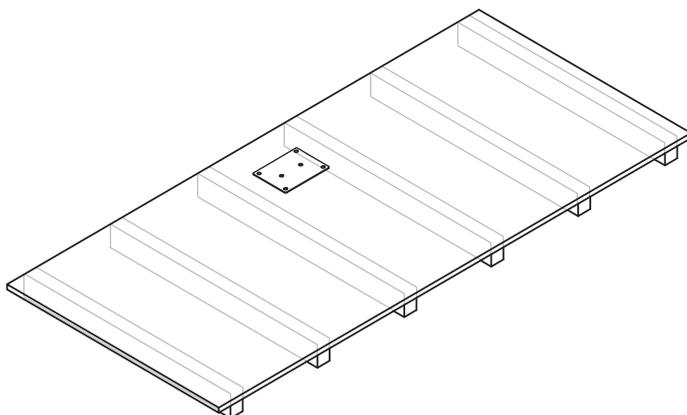


3! PLACE BASE PLATE UNDER ANCHOR PLATE, SLOTTING TOGETHER THE 2 CENTRE HOLES

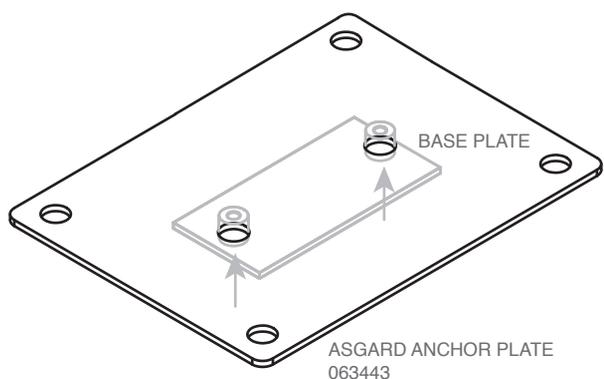


4! PLACE STEP 3 CONFIGURATION UNDER SUBFLOOR. ADD 2ND ASGARD ANCHOR PLATE ON TOP OF SUBFLOOR & CONNECT TOGETHER

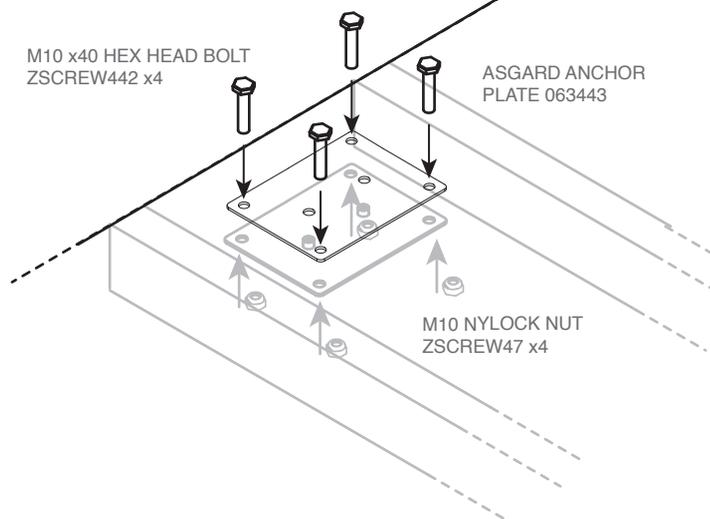

5! CONNECT THE HOOK PLATE TO BASE PLATE USING ZSCREW453

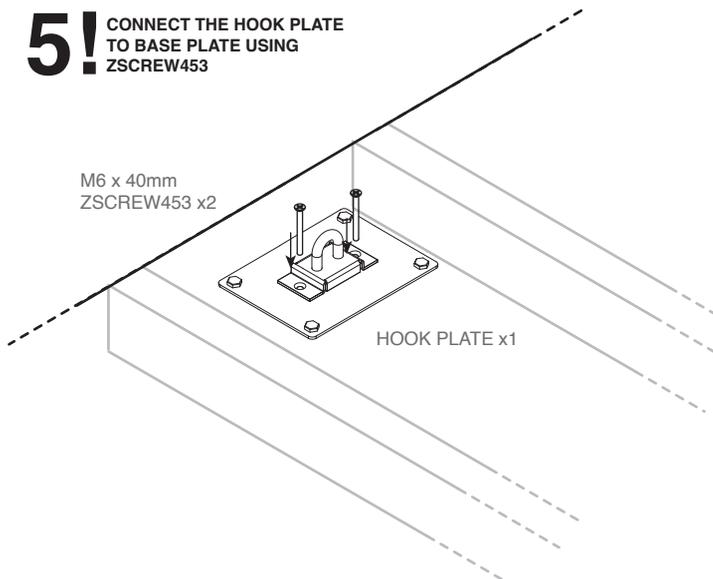


6! INSERT BALL BEARINGS INTO ZSCREW453 & FINISH WITH THE COVER PLATE

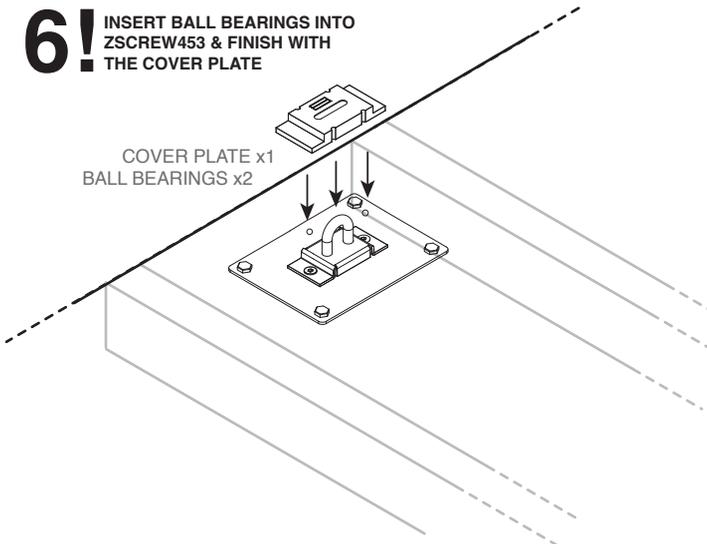


THROUGH METAL BASE INSTALLATION


1 POSITION THE HOOK PLATE IN YOUR SHED AND CIRCLE THE DRILL HOLES WITH A MARKER PEN ONTO THE SHED FLOOR

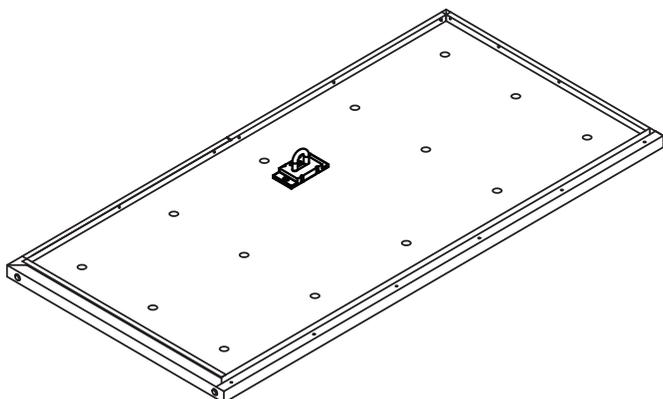


2 DRILL 2X 10MM HOLES THROUGH THE SHED BASE INTO THE GROUND (50MM DEEP). TREAT BASE WITH RUST INHIBITOR

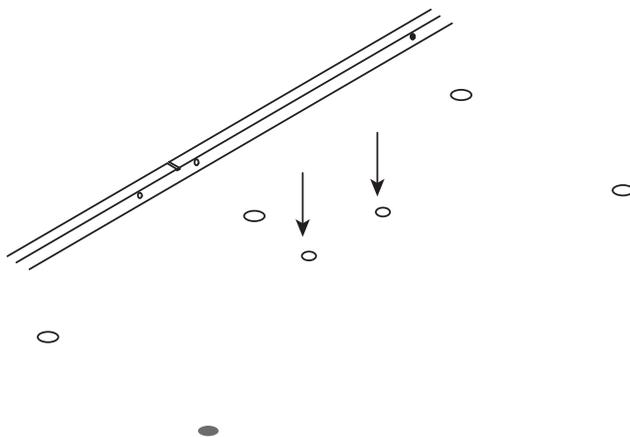

3 DROP IN THE PLUGS INTO THE HOLE

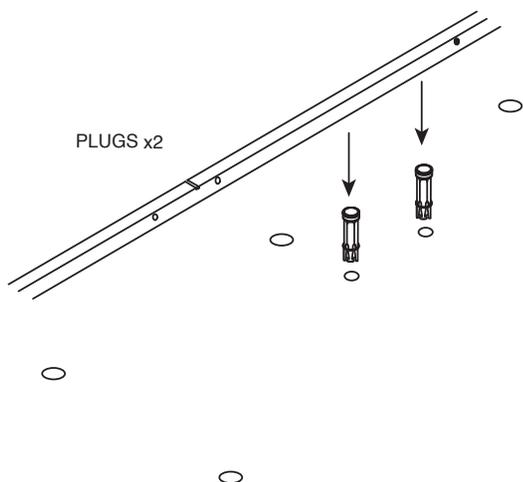

4 CONNECT THE HOOK PLATE TO BASE PLATE USING M6x50MM SCREW

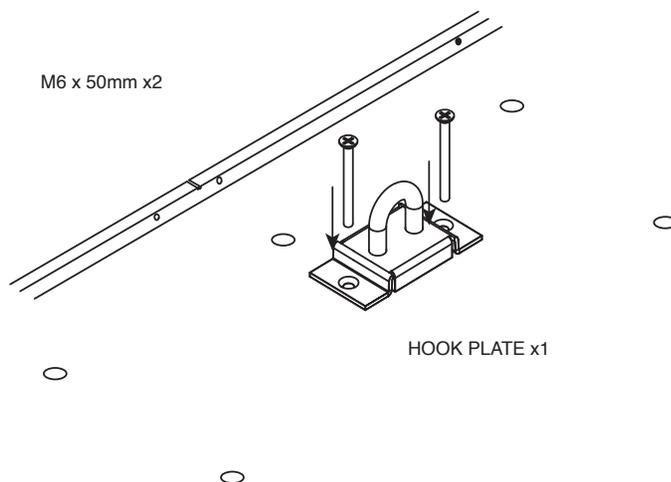

5 INSERT BALL BEARINGS INTO SCREW HEADS & FINISH WITH THE COVER PLATE

