

OUTDOOR PLANTER




COMPATIBILITY

Suitable for all Asgard outdoor planters. Please note, counterbalance trays are only recommended for tall planters.



TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.

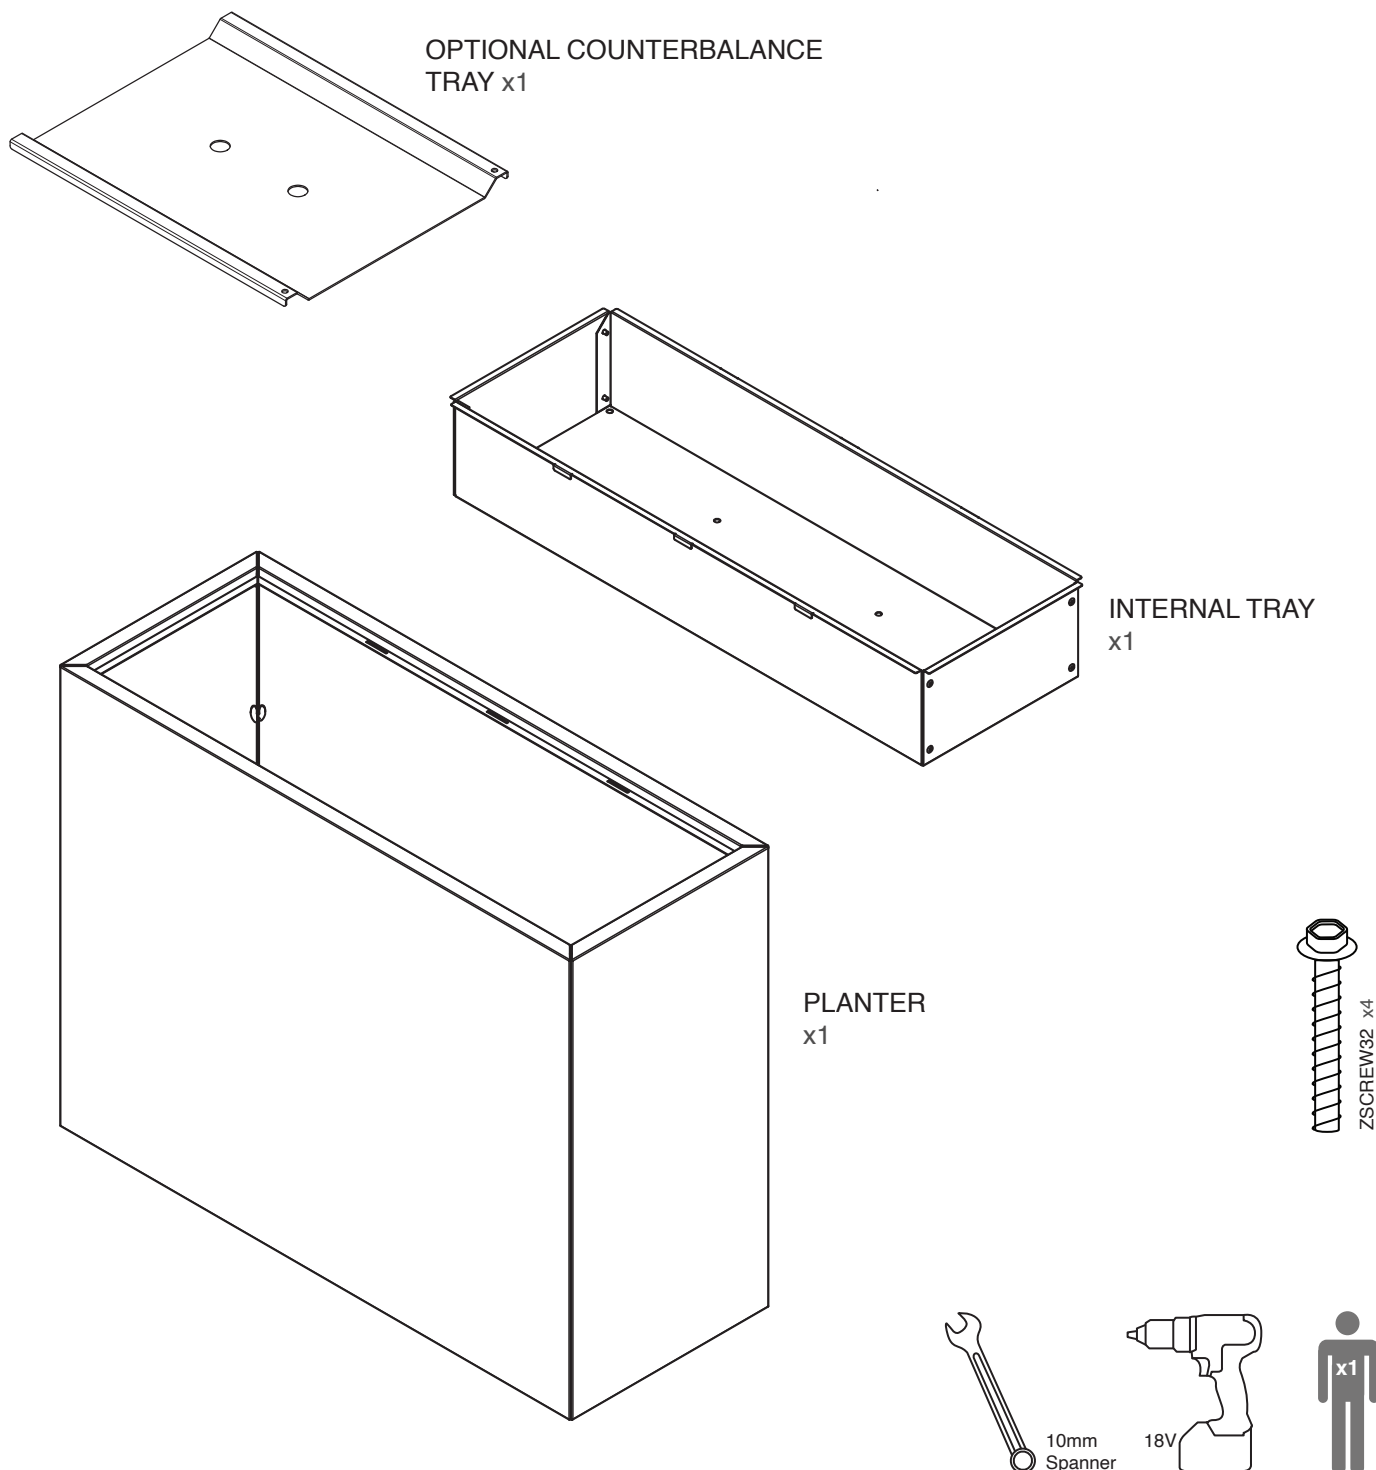


OPTION 1. BOLT TO THE FLOOR

1 USING 4x ZSCREW32, BOLT DOWN THE PLANTER IN ALL 4 CORNERS

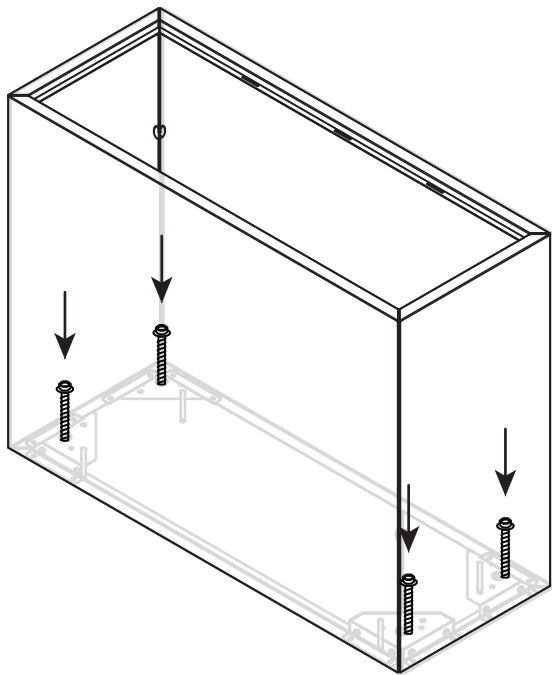


x4

2 SLOT THE INTERNAL TRAY INTO POSITION

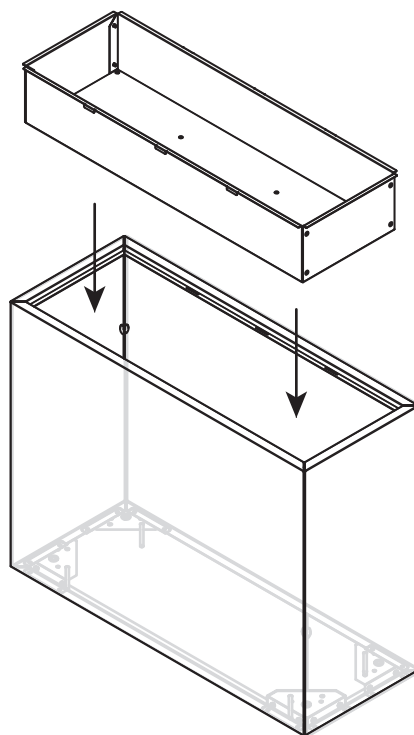

OPTION 2. COUNTERBALANCE WEIGHT

1 PLACE THE COUNTERBALANCE TRAY INTO PLANTER, RESTING ON THE BOTTOM RIM. ADD BRICKS/ SANDBAG/ BREEZE BLOCK AS REQUIRED.

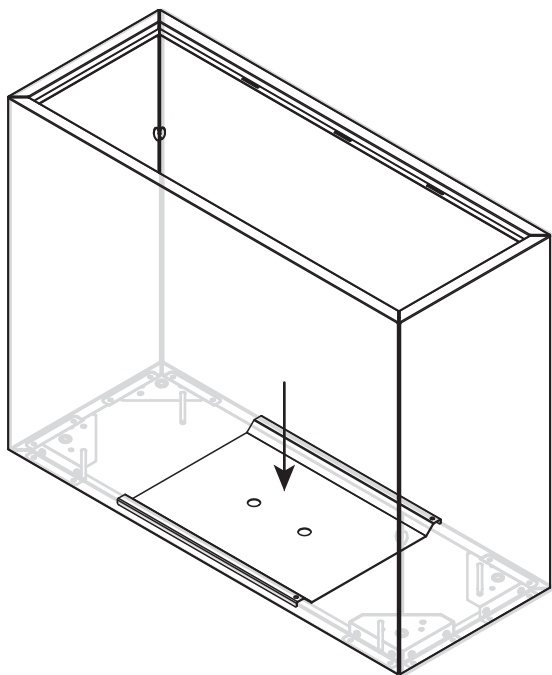

2 ALIGN THE BRACKET WITH THE PRE-DRILLED HOLES & SECURE. REPEAT WITH THE 2ND BRACKET

