ANNEXE PLUS E

BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2400mm x 1250mm x 50mm.

LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor the unit to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to block the fixing holes from underneath. **Please note product must be anchored down to comply with LPS1175.**

TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.

Warning: some panels may weigh over 20Kg. Beware of manual handling

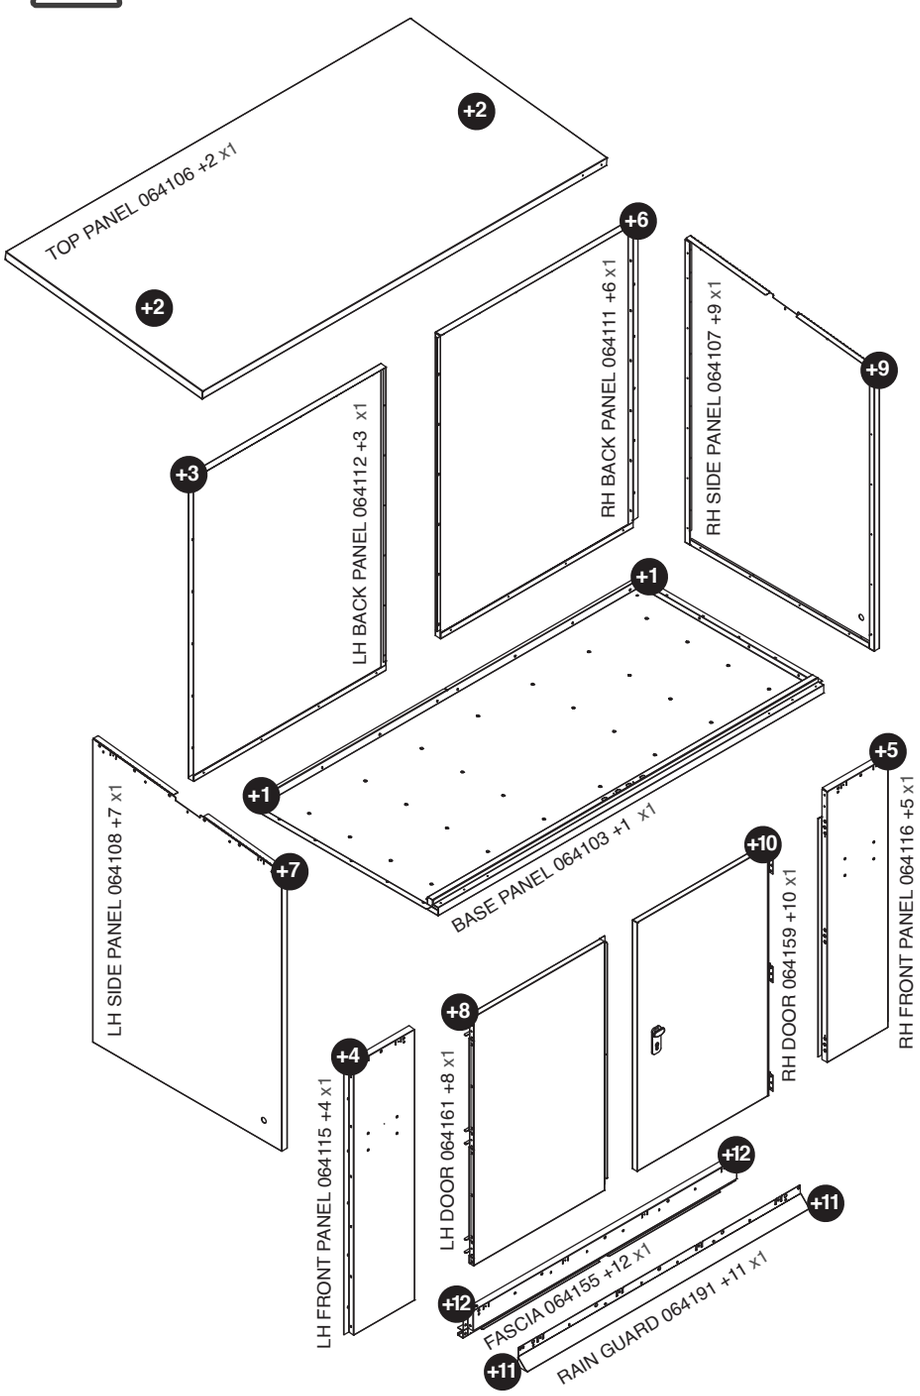

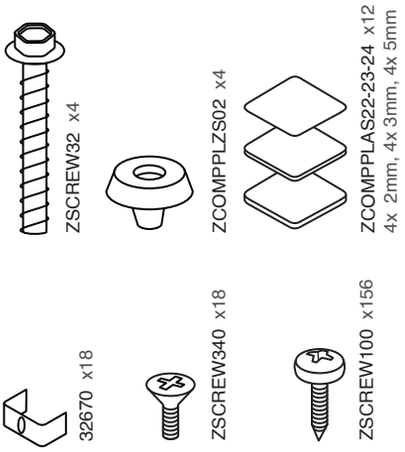

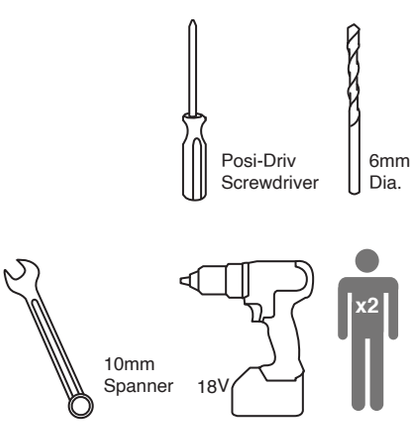

For maintenance instructions of this product visit www.asgardsss.co.uk

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

1!

FIT SELF-SEAL PLUGS: 4X BOTTOM OF BASE IF UNIT IS NOT BEING SECURED TO FLOOR

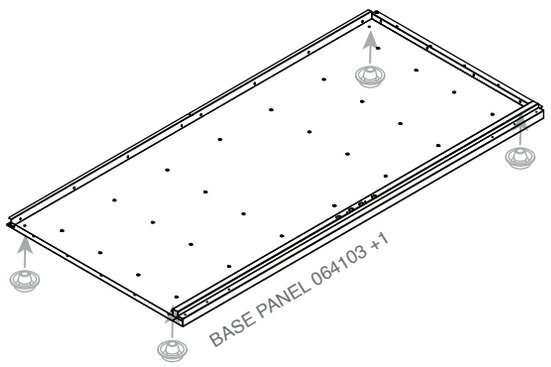

x4

2

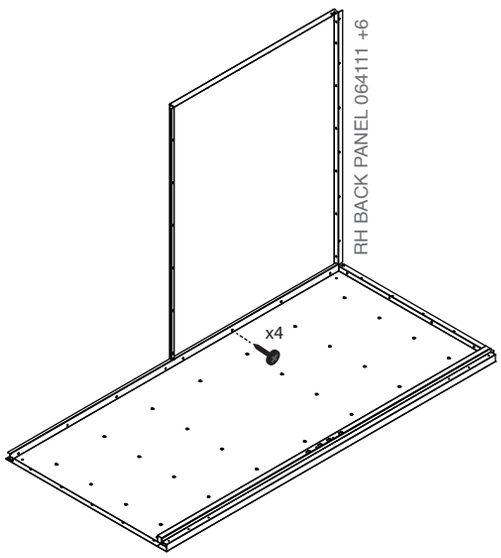

x4

3

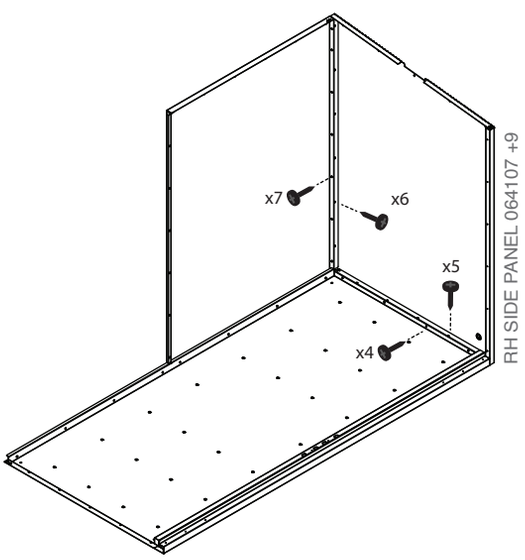

x22

4

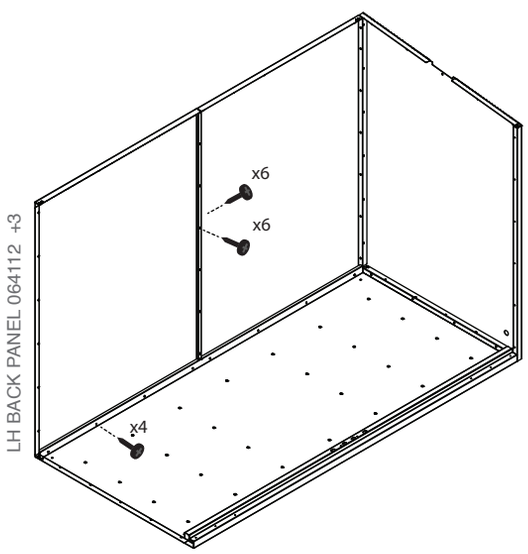

x16

5

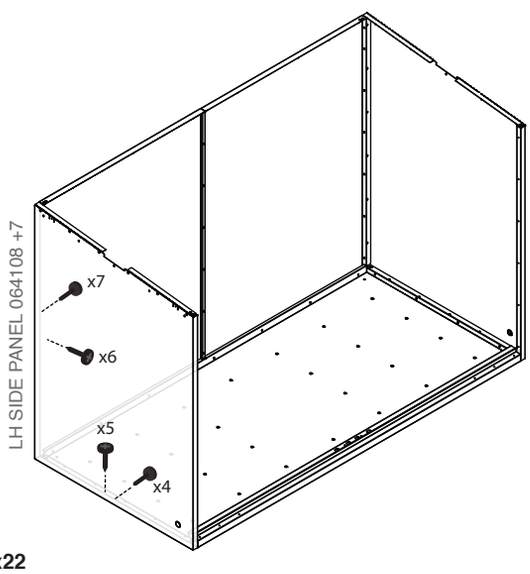

x22

6

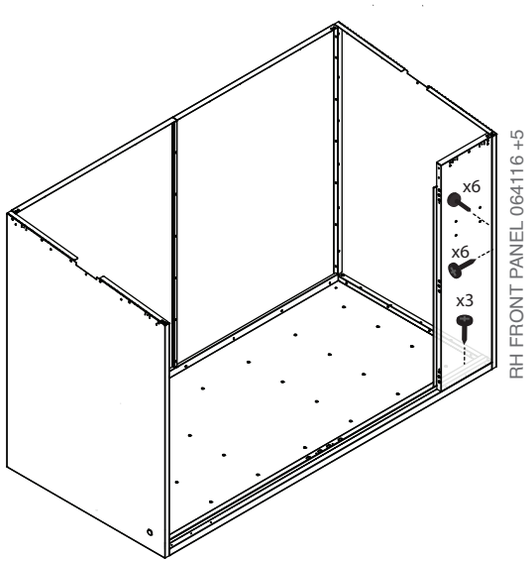

x15

7

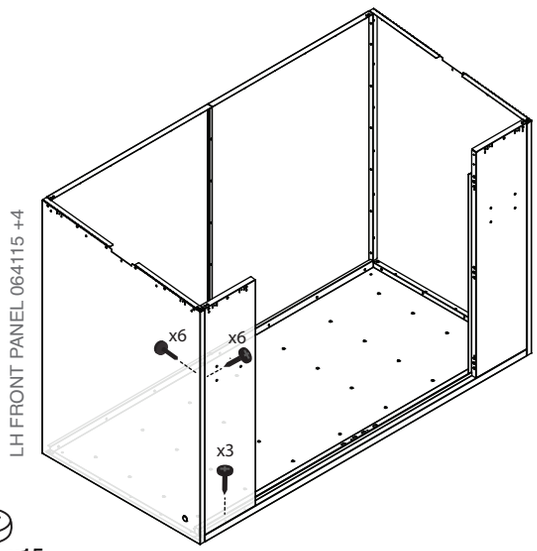

x15

8

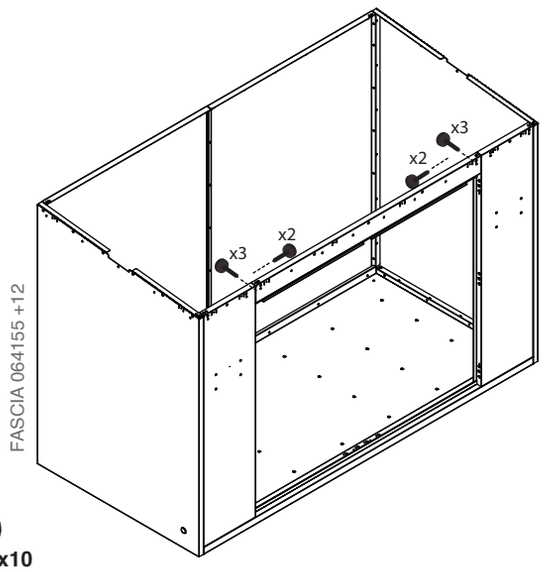

x10

9

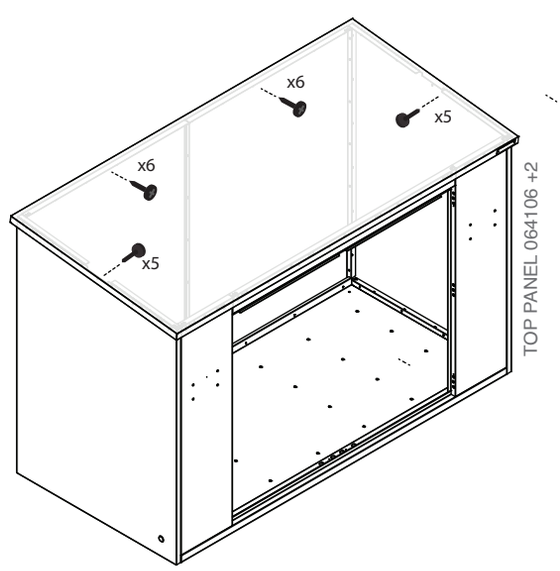

x22

10! SLIDE RAIN GUARD INBETWEEN THE FASCIA & TOP PANEL

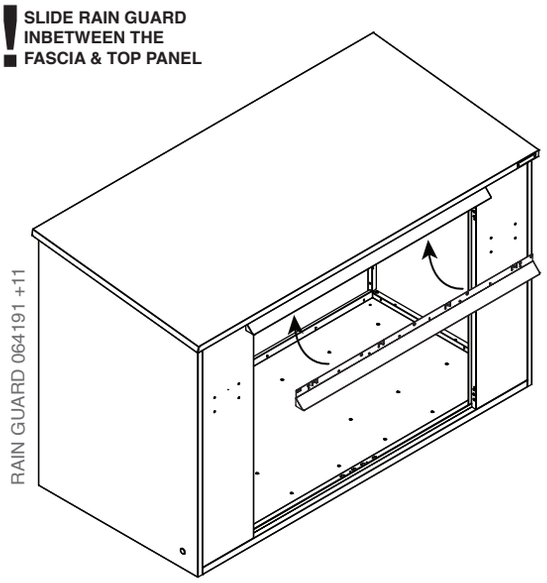

11

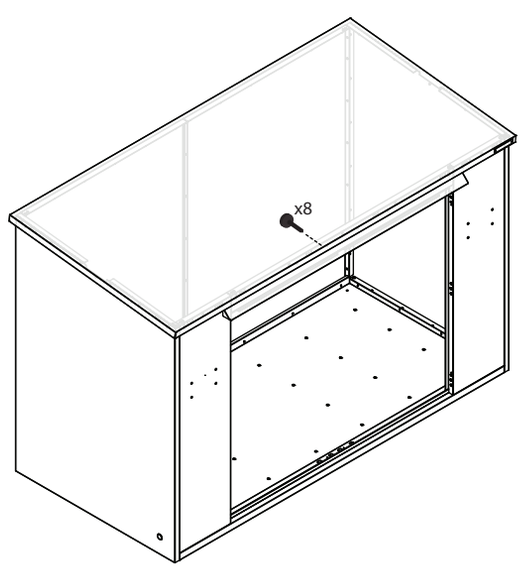

x8

12

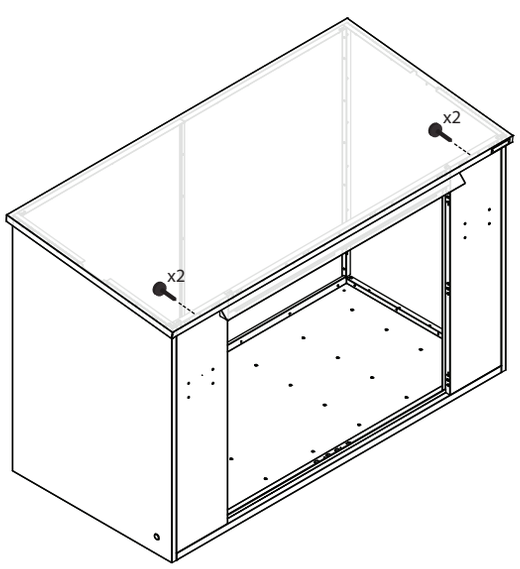

x4

13

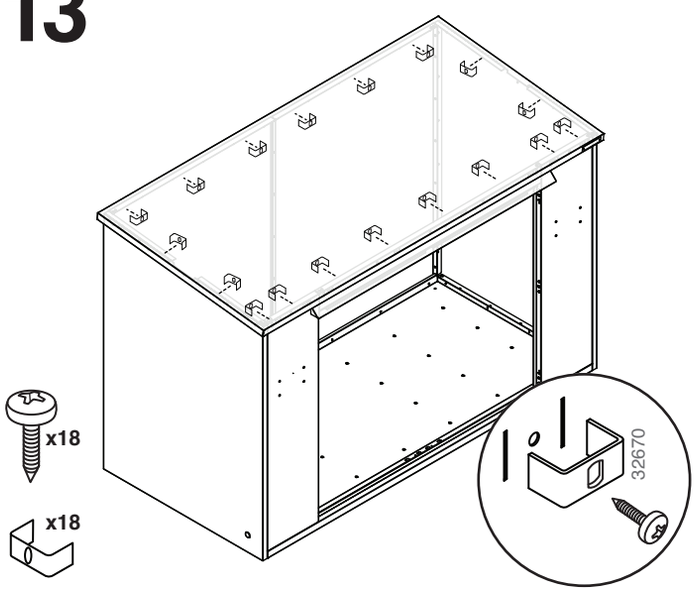

14

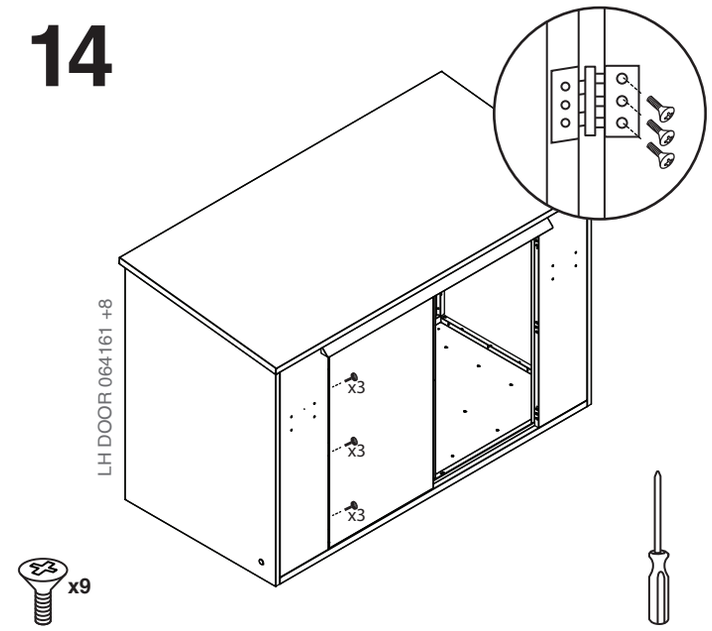

15

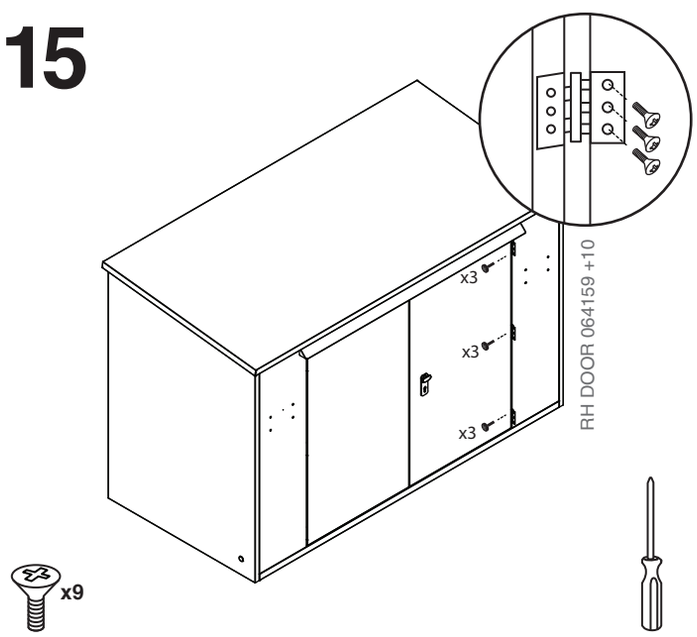

16!

LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

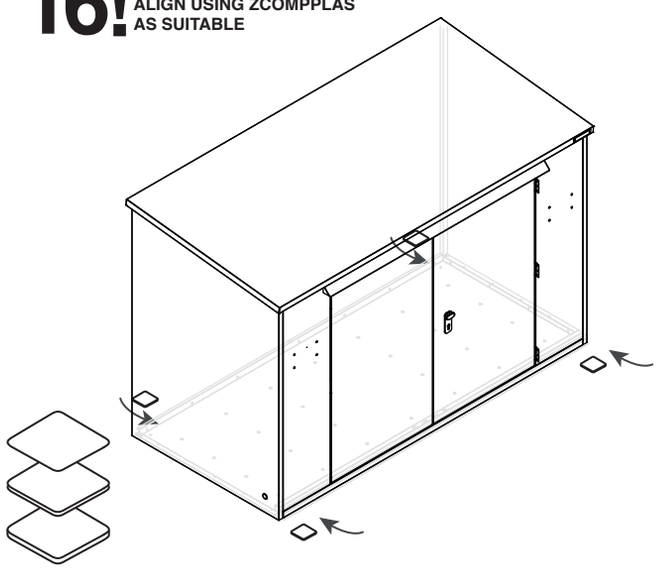

17

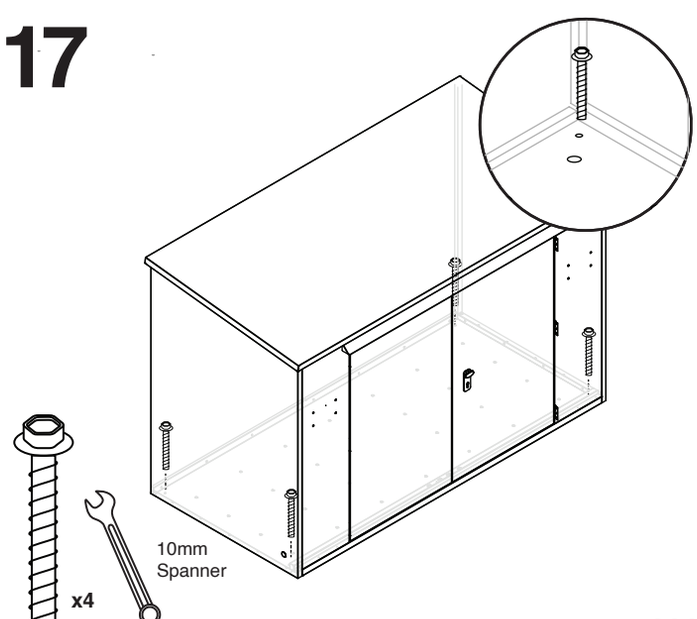

www.asgardsss.co.uk