
GLADIATOR MOTORCYCLE

BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2410mm x 3100mm x 50mm.

LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor the unit in to the ground. Drill through the four holes in each of the bases of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to block the fixing holes from underneath.
Please note, product must be bolted down to comply with LPS1175.


TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.

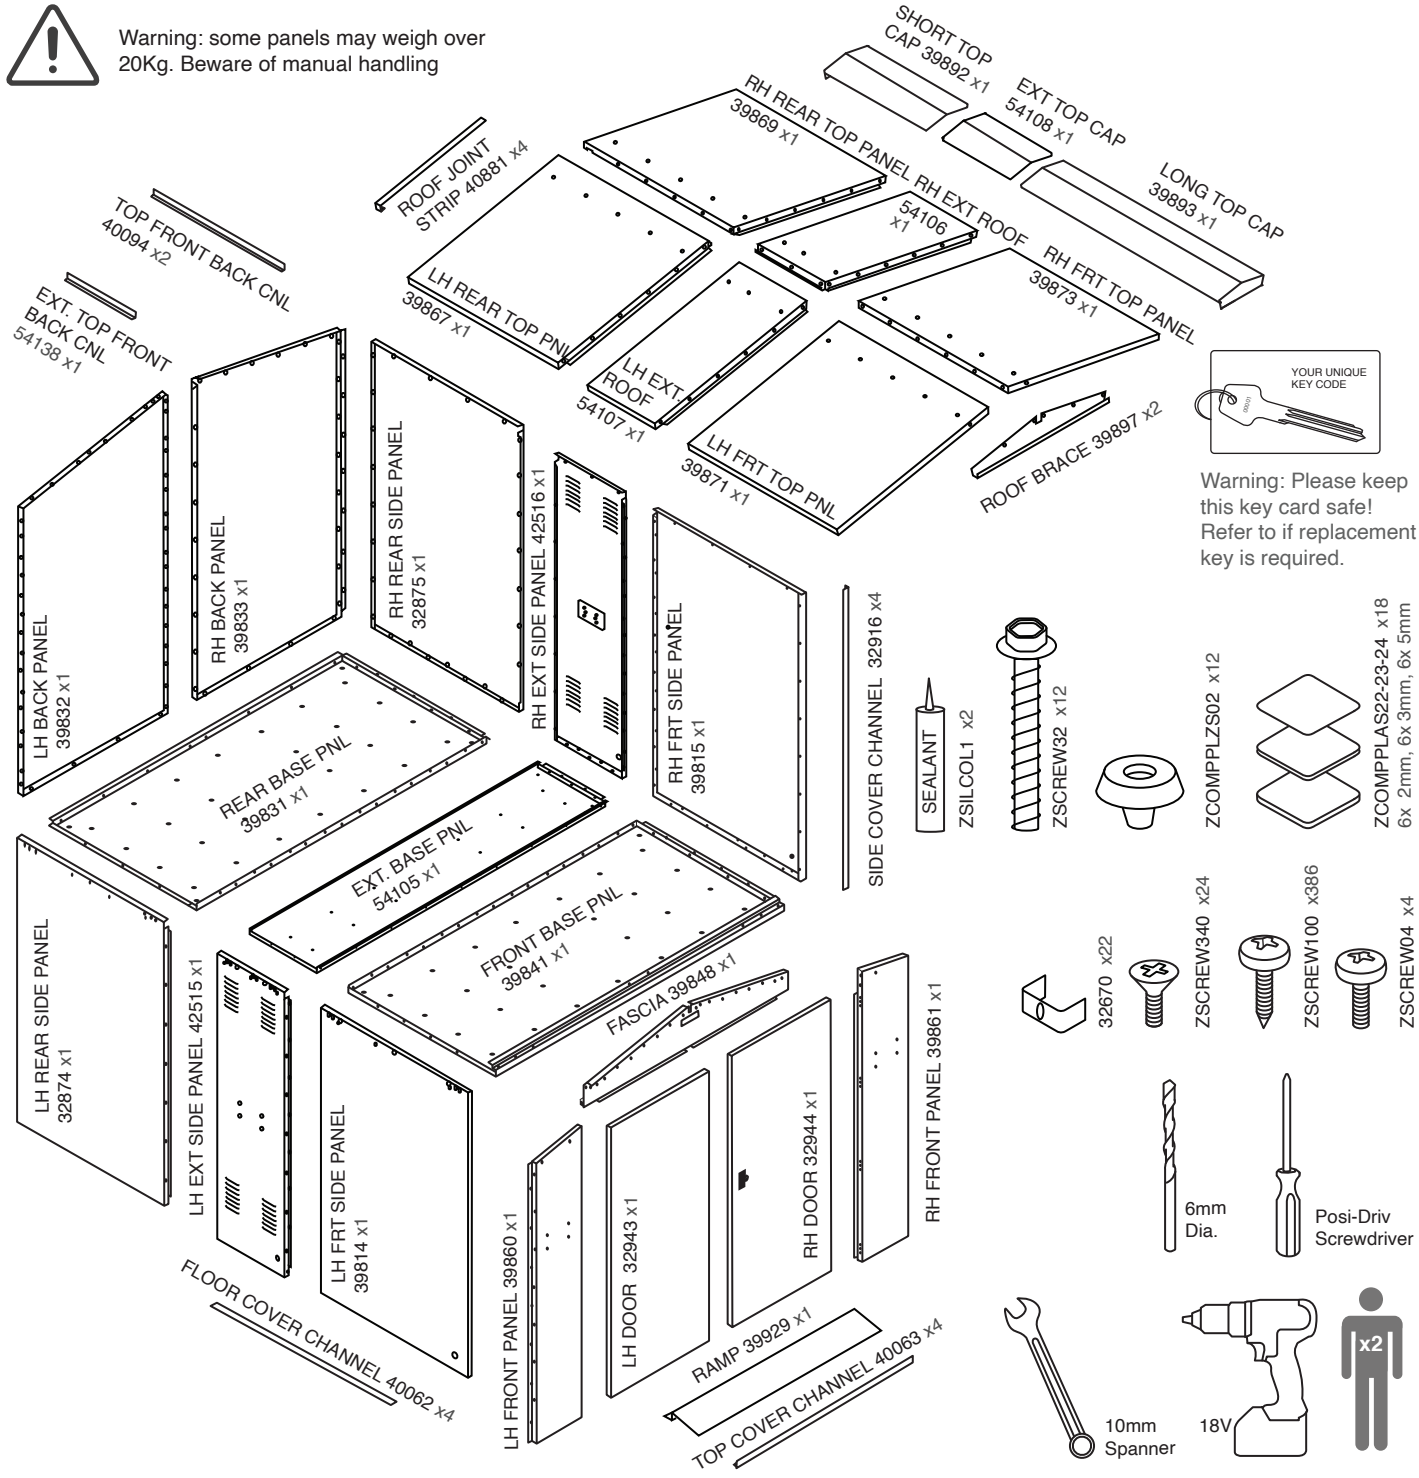

For maintenance instructions of this product visit www.asgardsss.co.uk


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

1

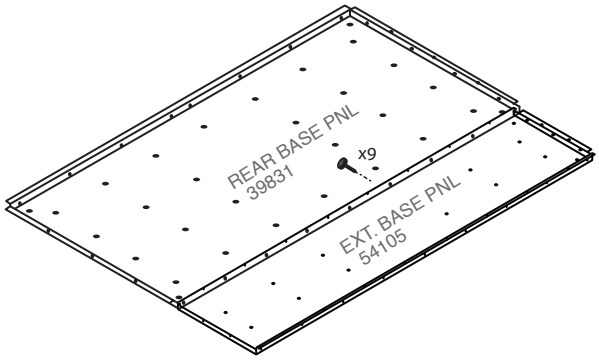



x9

2! IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

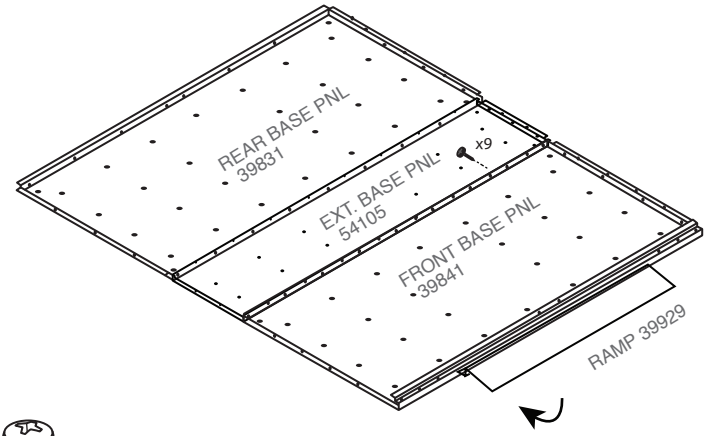



x9

3

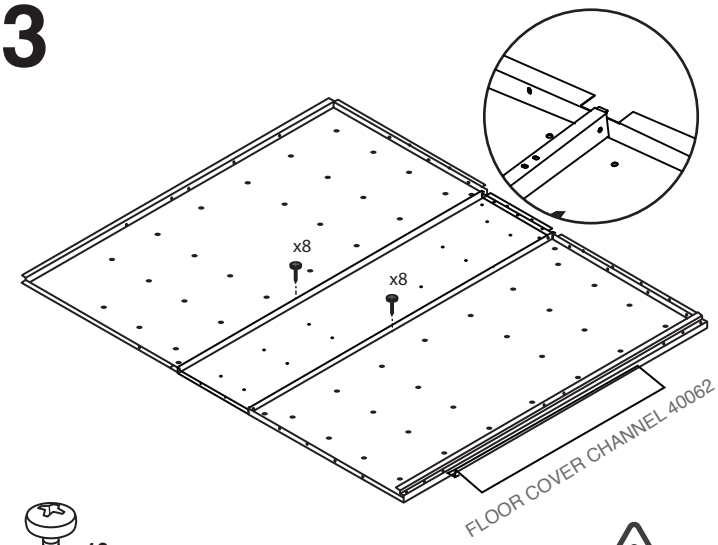



x16

4

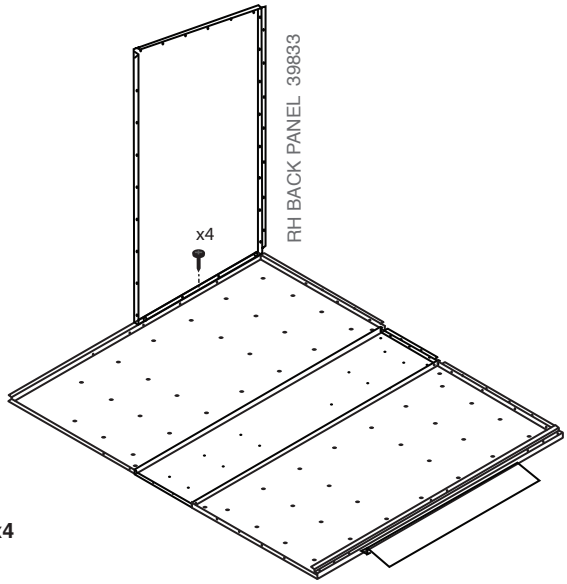



x4

5

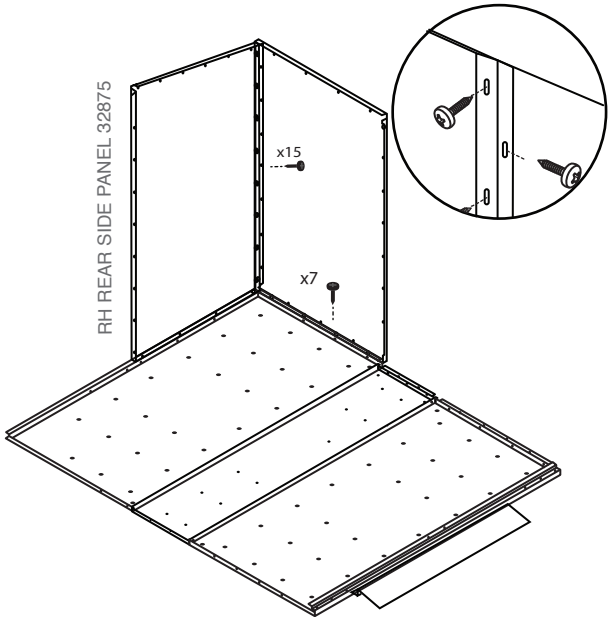


x22


6

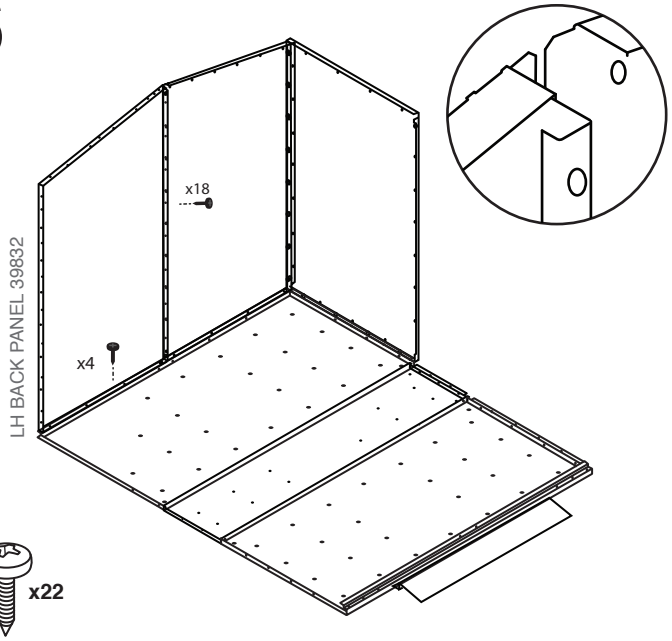

x22


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

7

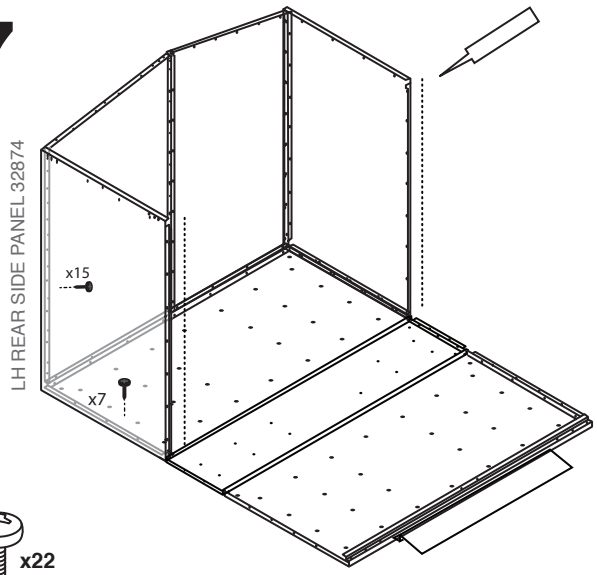


x22

8

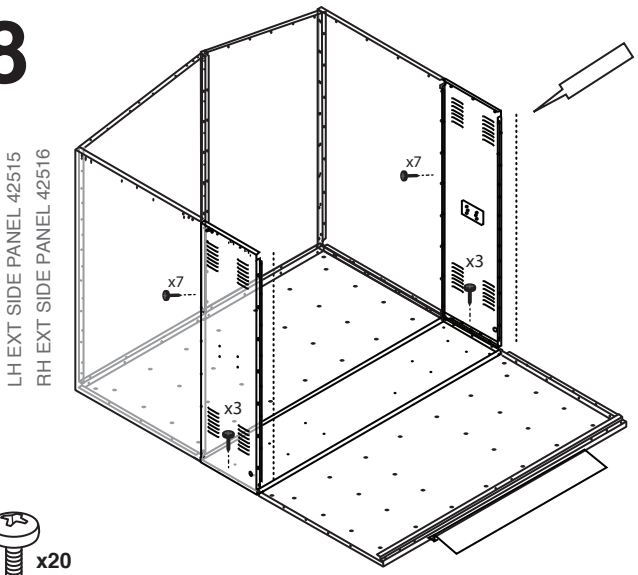


x20

9

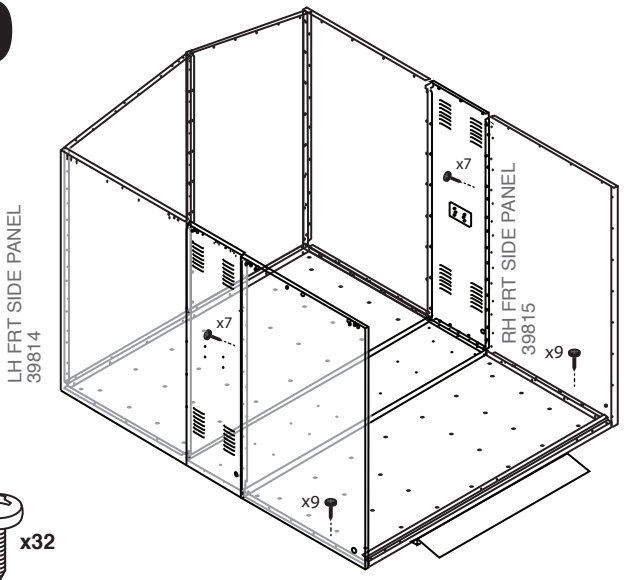


x32

10

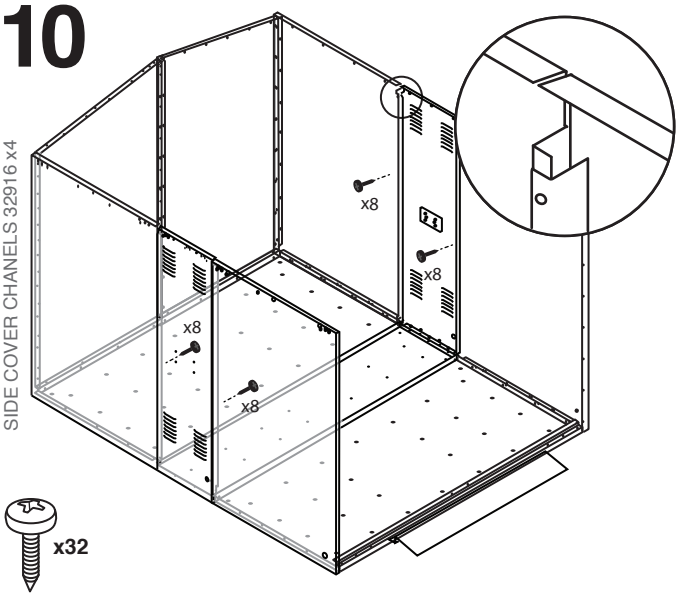


x32

11

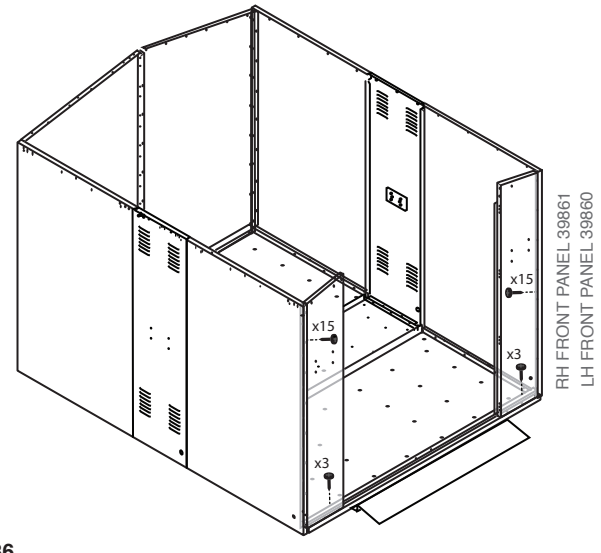

x36


12

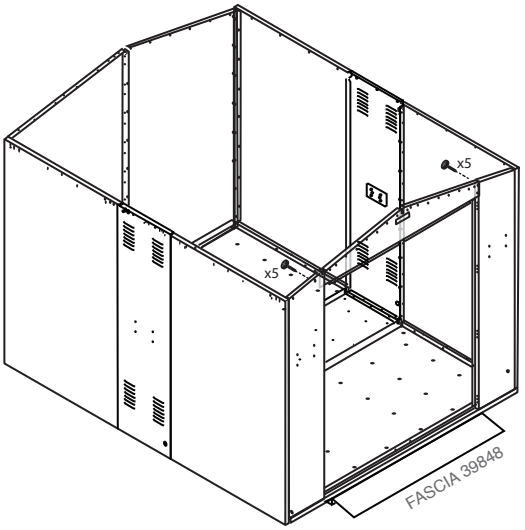


x10

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

13

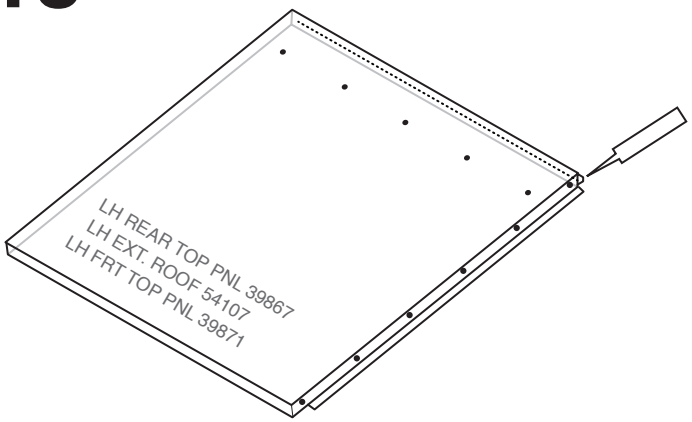

14

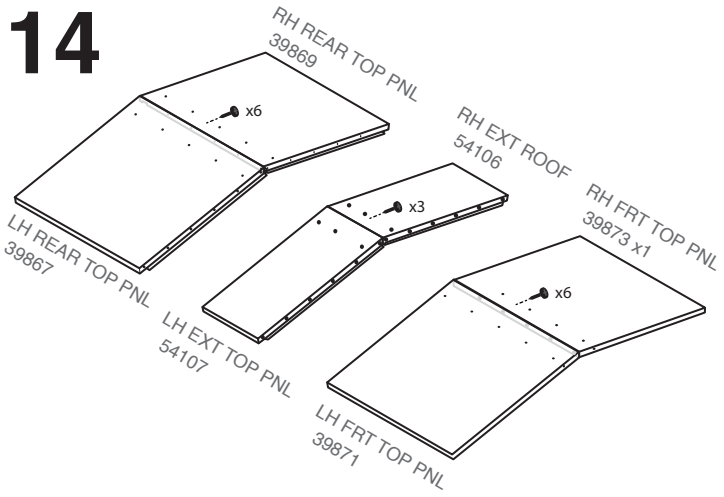







15!

PLEASE NOTE, THE CENTRAL ROOF SECTION REQUIRES 3 SCREWS ONLY

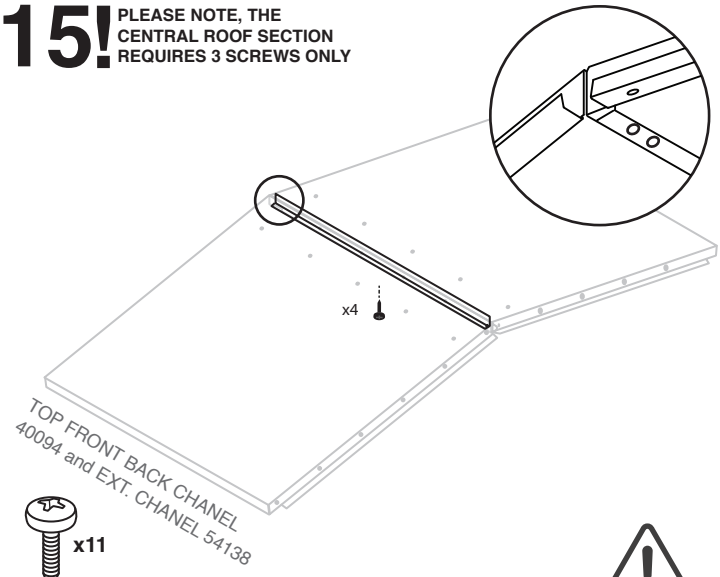


16

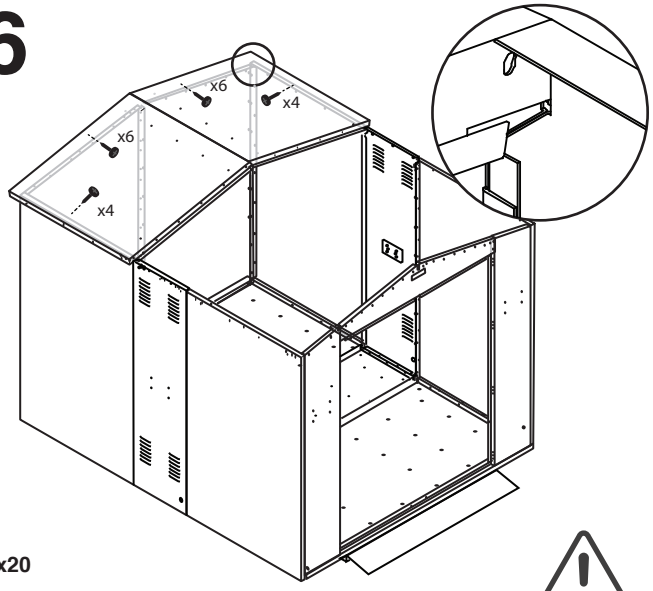




17

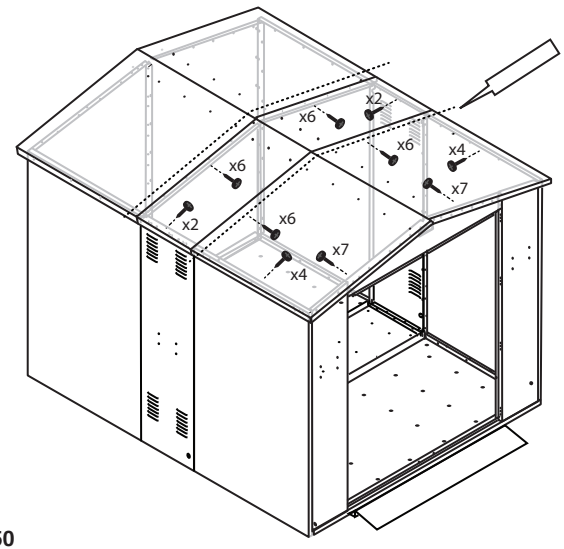



18

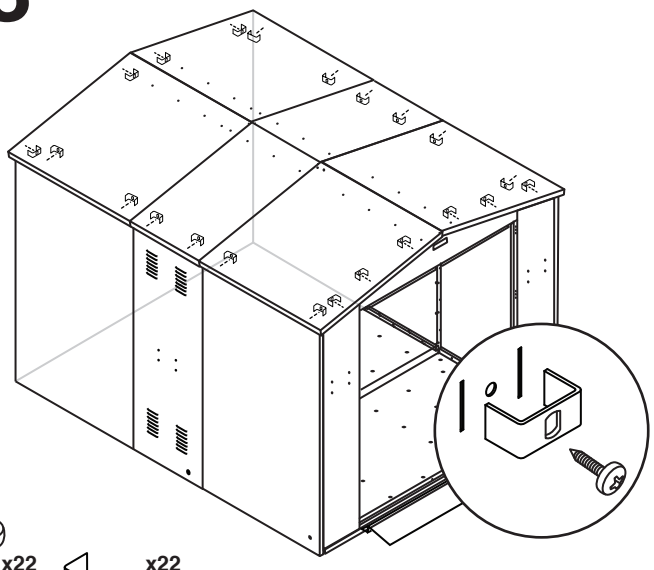







PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


19

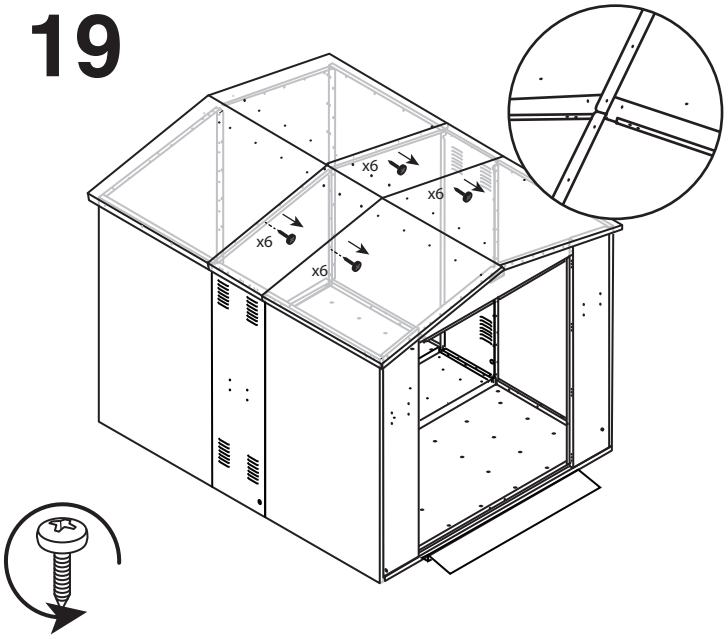


20

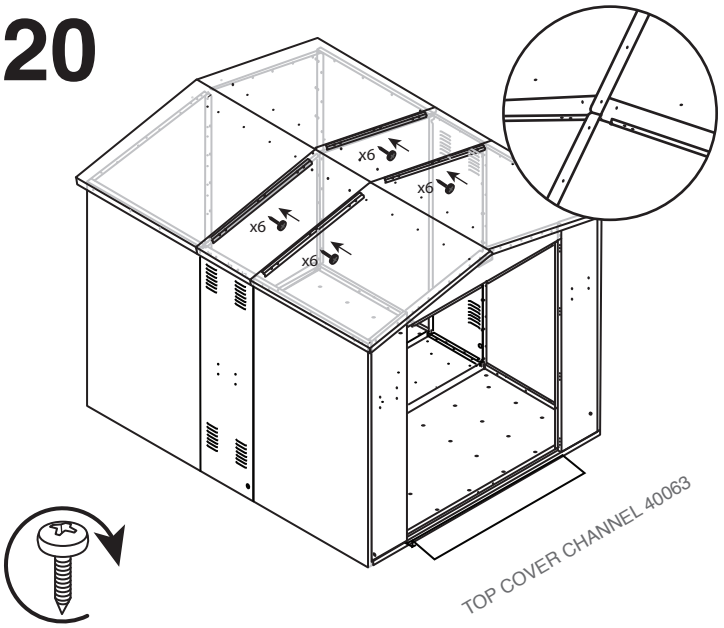


21

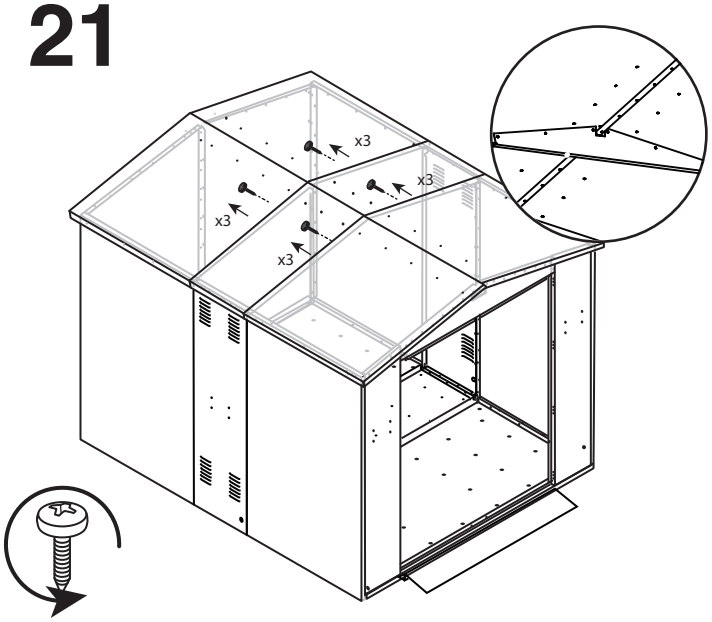

22

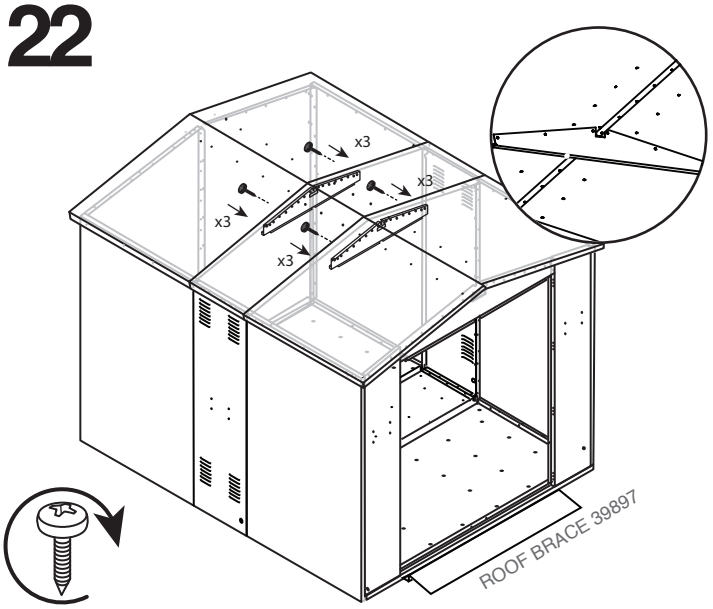


23

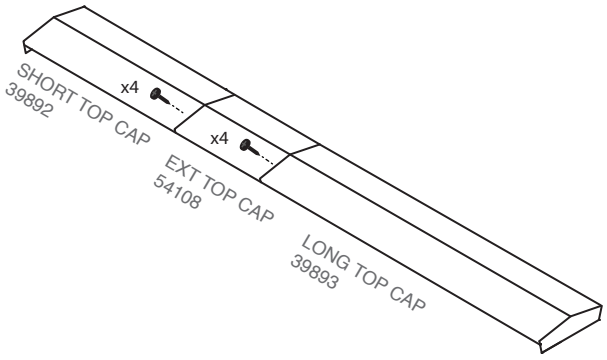




24!


NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED UNDER TOP CAP

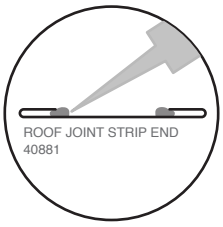

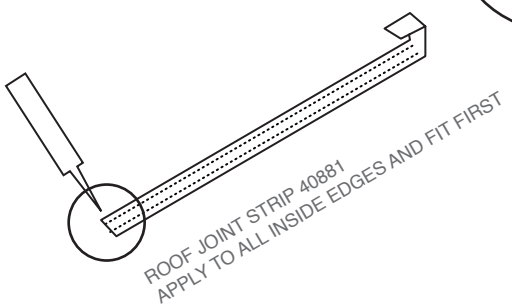


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


25

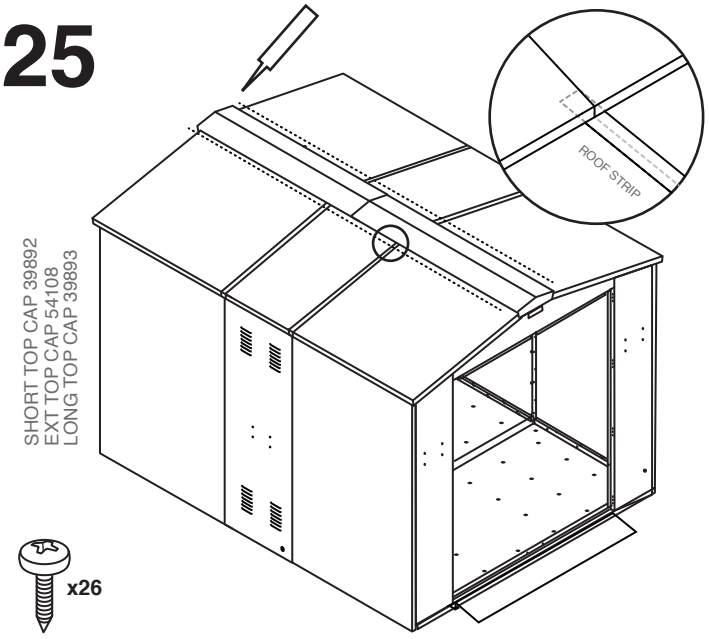


26

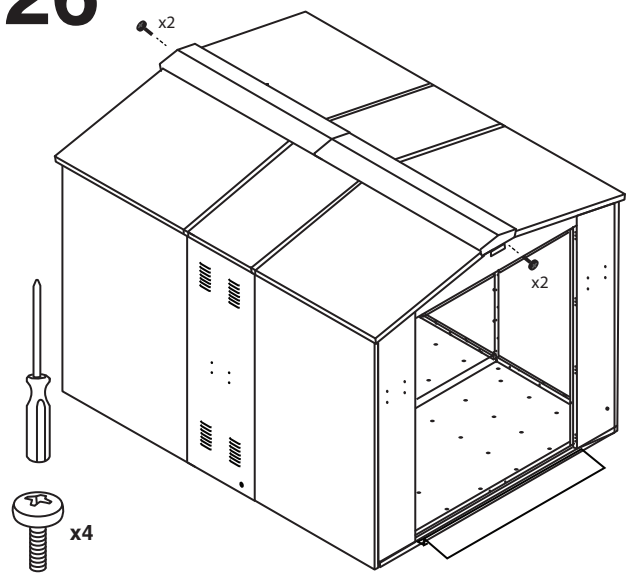

27

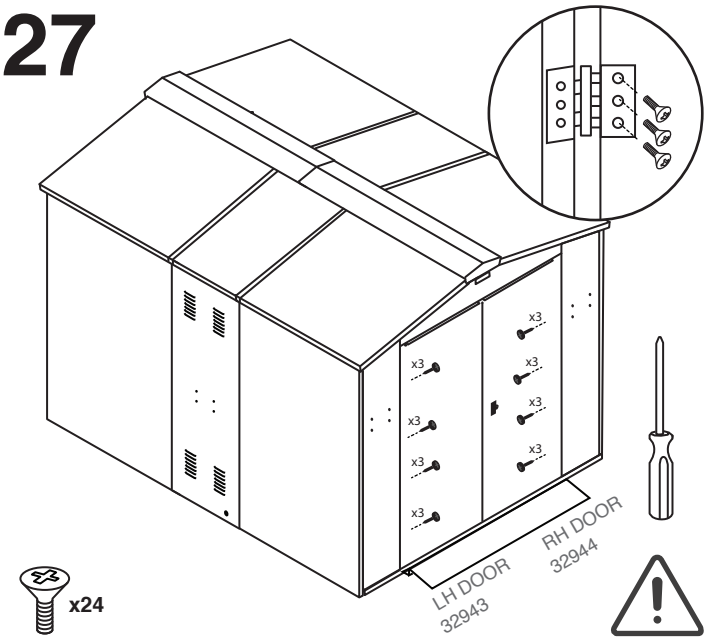

28! LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

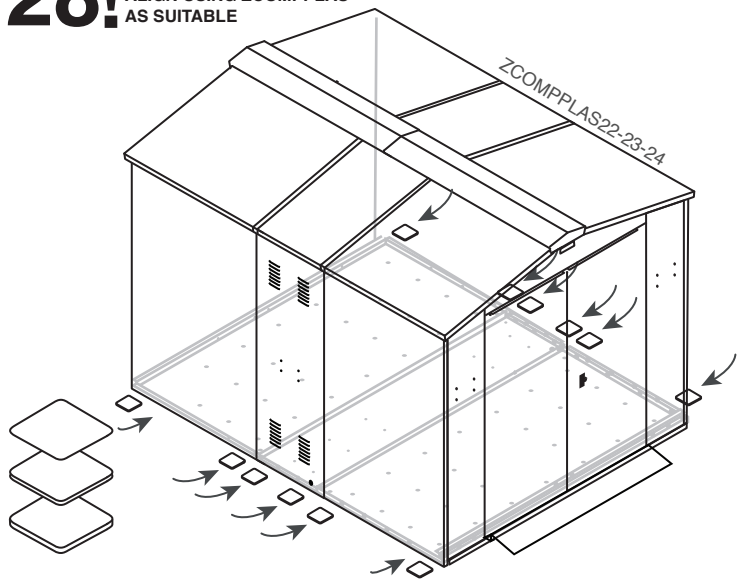

29

