ACCESS PLUS


BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2450mm x 1150mm x 50mm.

LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

To maintain a level shed, the unit **must** be bolted to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). **If not anchoring the unit, fit the 4 self-seal plugs BEFORE BUILDING to block the fixing holes underneath. Fit 4 self-seal plugs in the side of base to stop water from entering the unit.**

TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 8mm, 10mm & 13mm socket or spanner.

Warning: some panels may weigh over 20Kg. Beware of manual handling

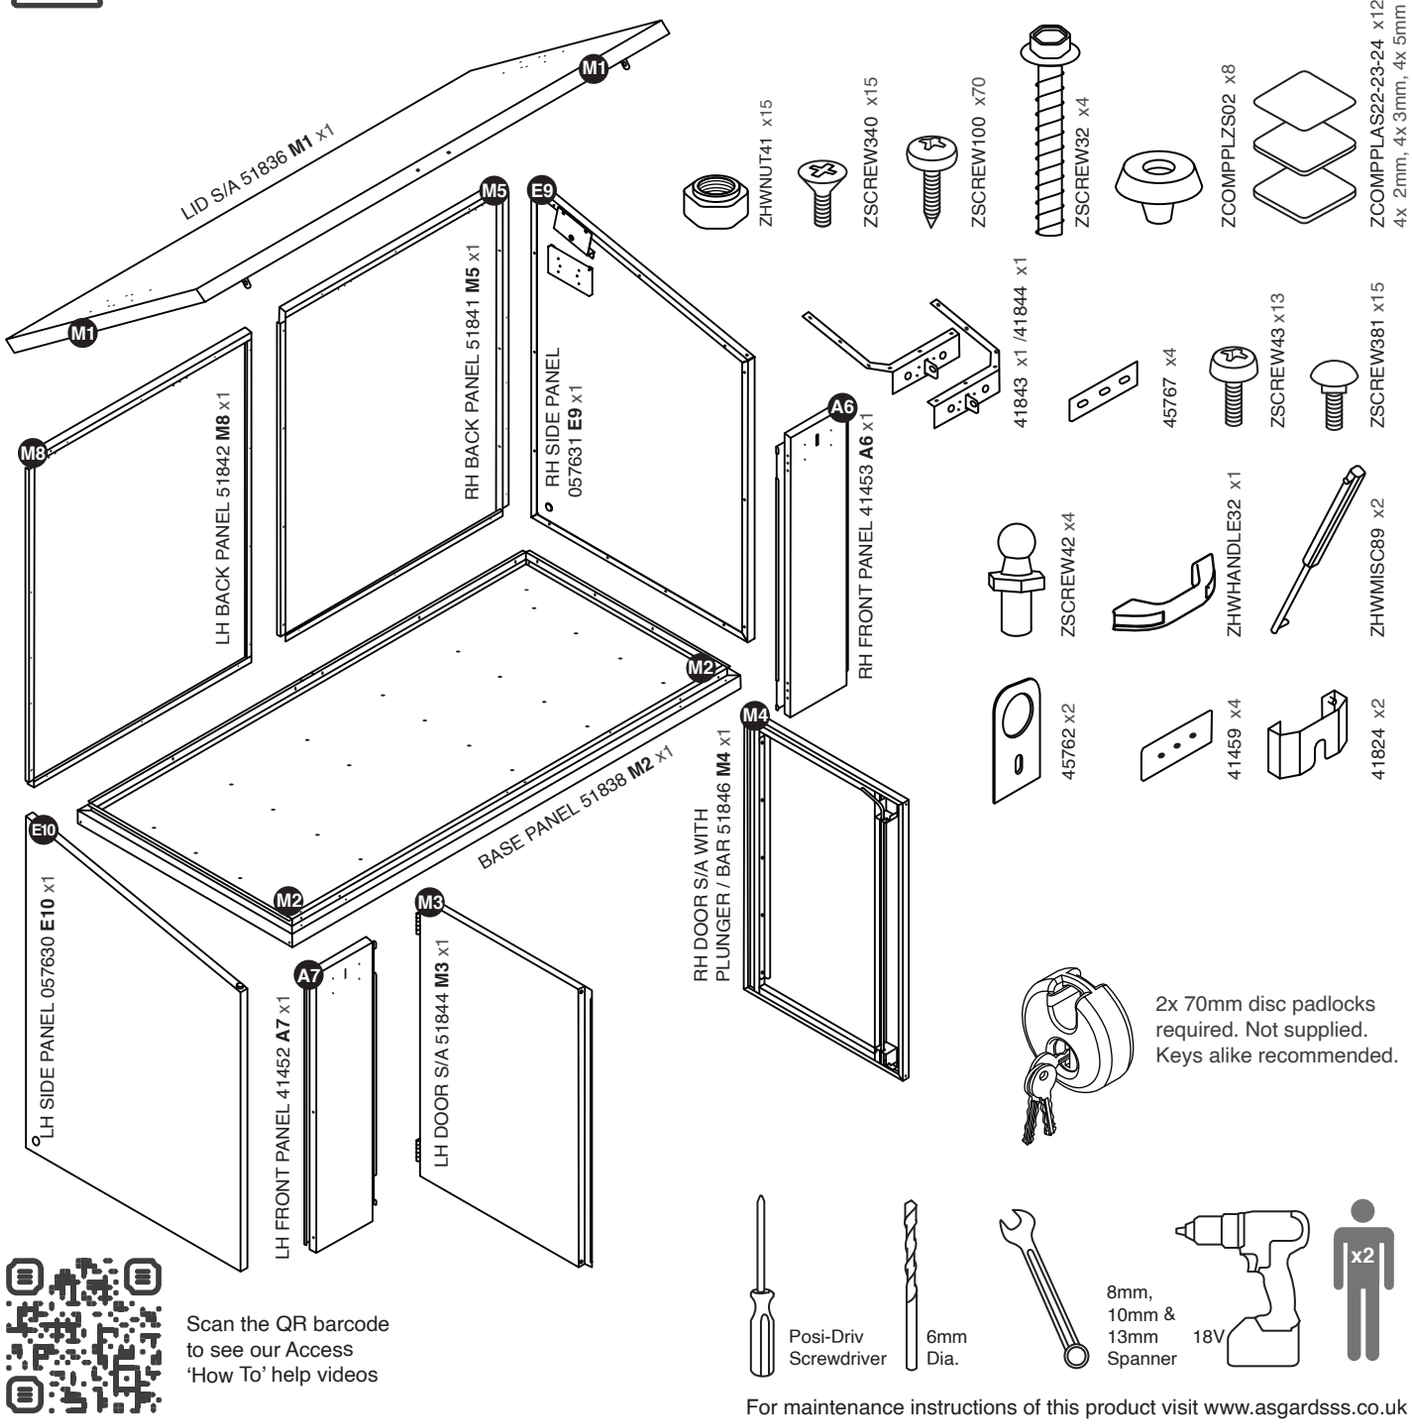

Additional screws provided*

2x 70mm disc padlocks required. Not supplied. Keys alike recommended.

Scan the QR barcode to see our Access 'How To' help videos


For maintenance instructions of this product visit www.asgardsss.co.uk

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1!

IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE


! FIT SELF-SEAL PLUGS: 4X SIDE OF BASE. 4X BOTTOM OF BASE IF UNIT IS NOT BEING SECURED TO FLOOR

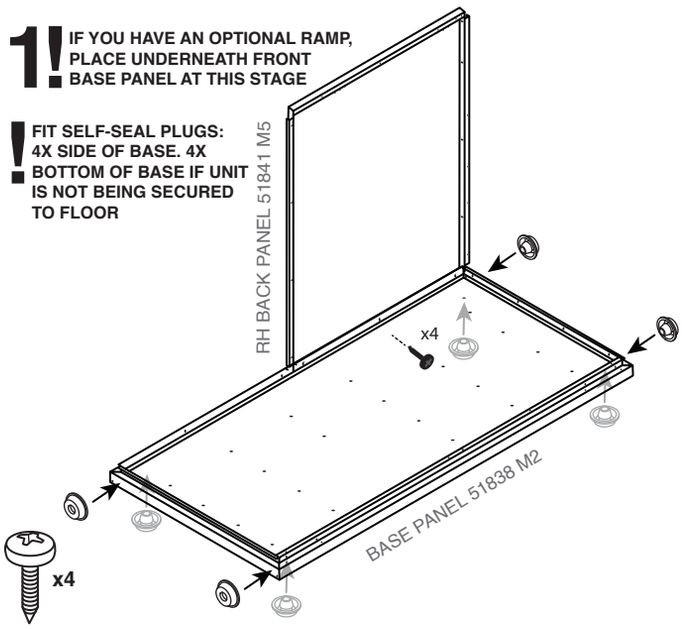


2

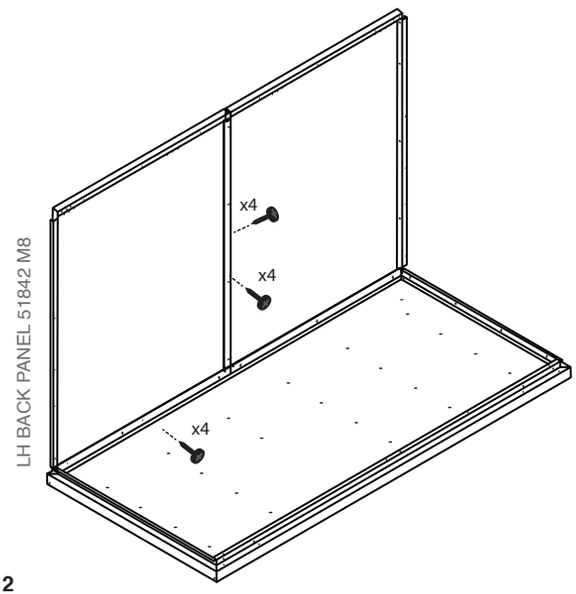


3

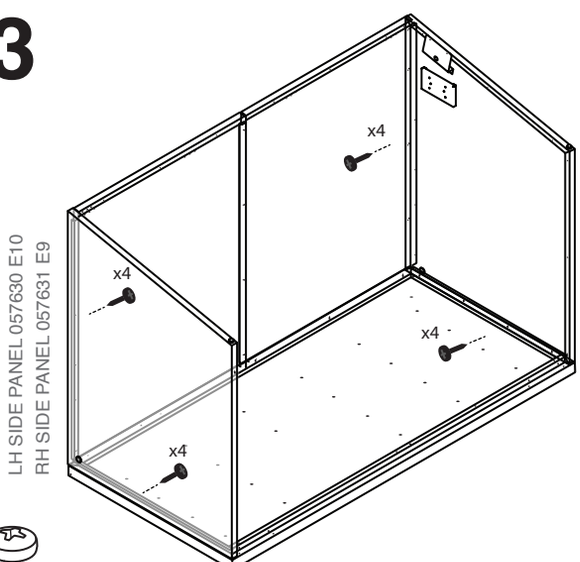


4

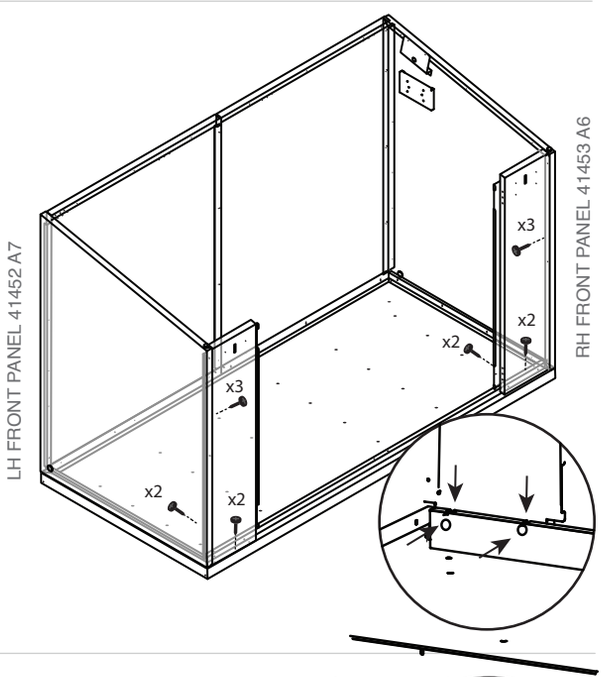


5

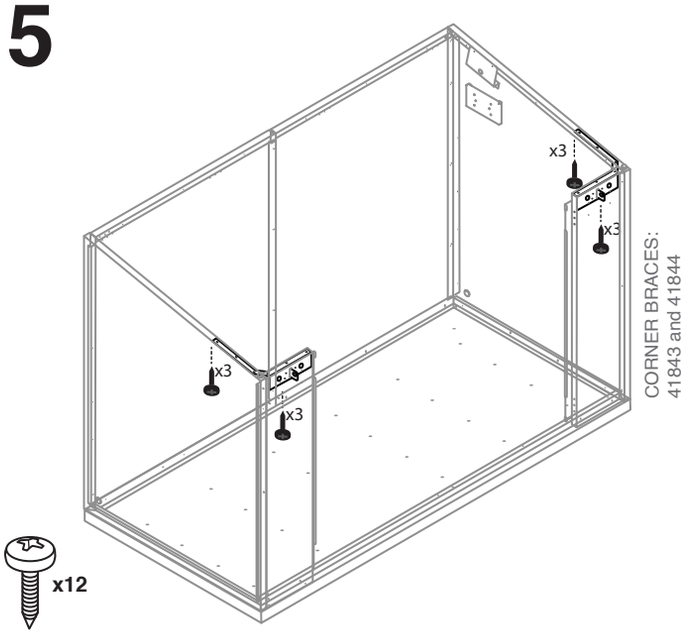


6

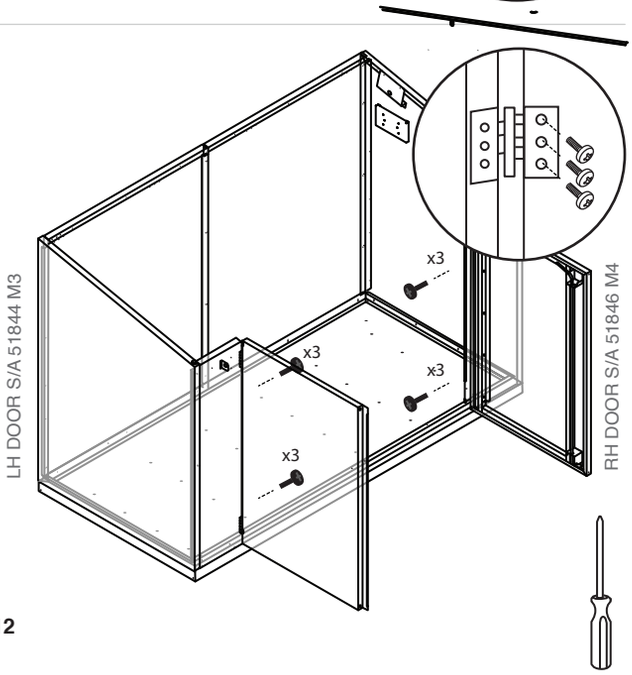


7

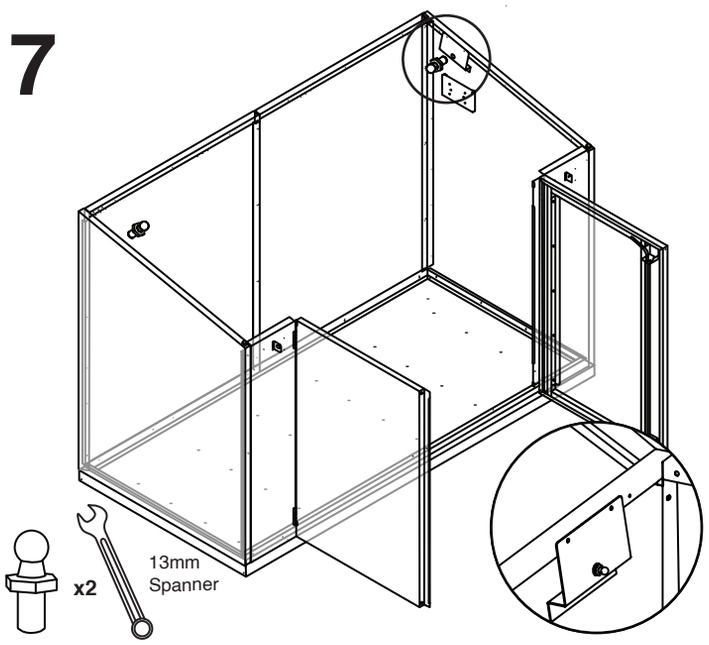

8

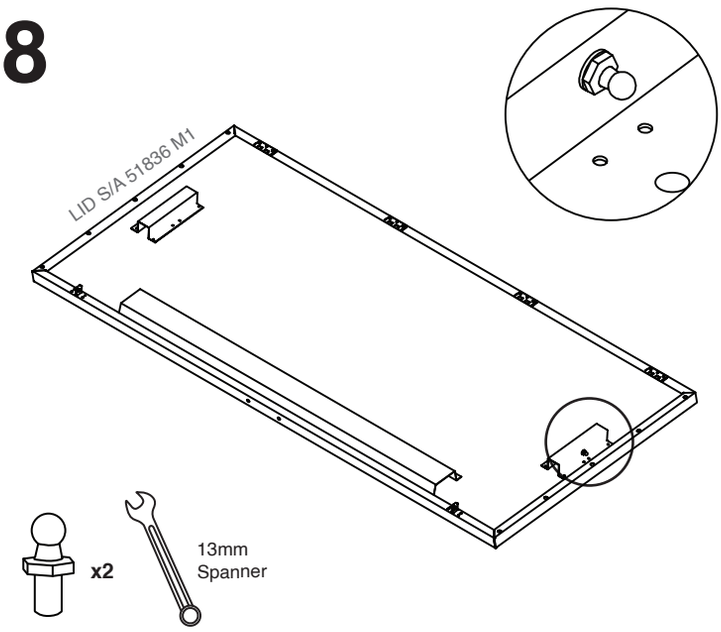


9

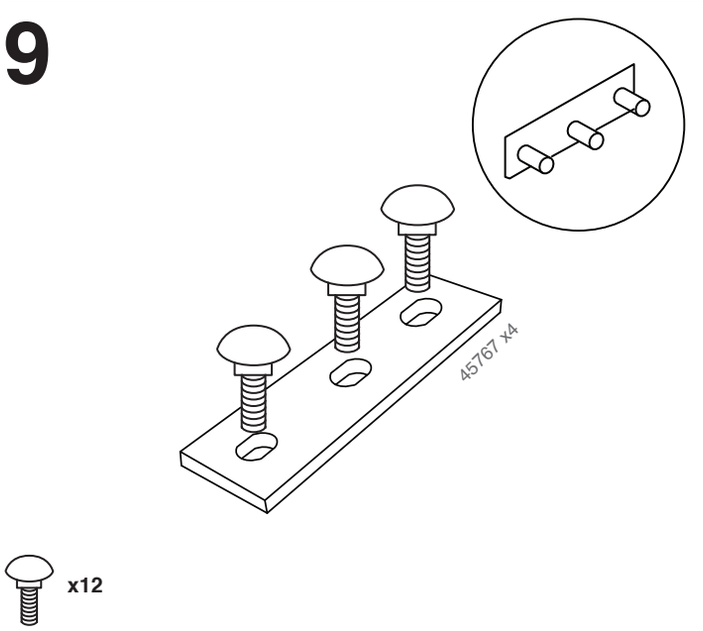


10


LID HINGE TO OUTSIDE OF UNIT

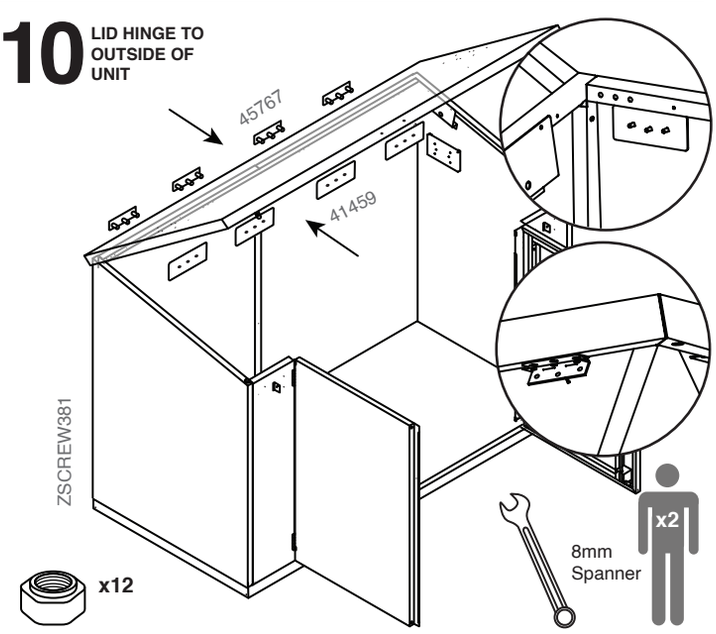


11

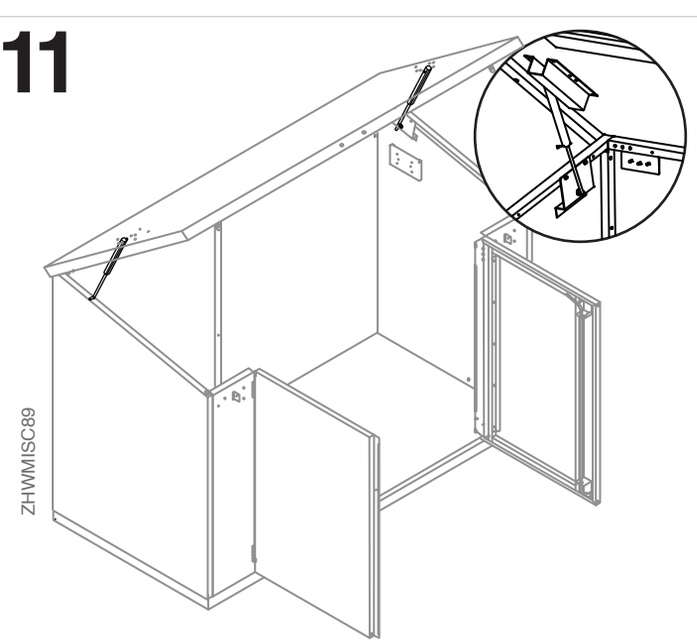


12

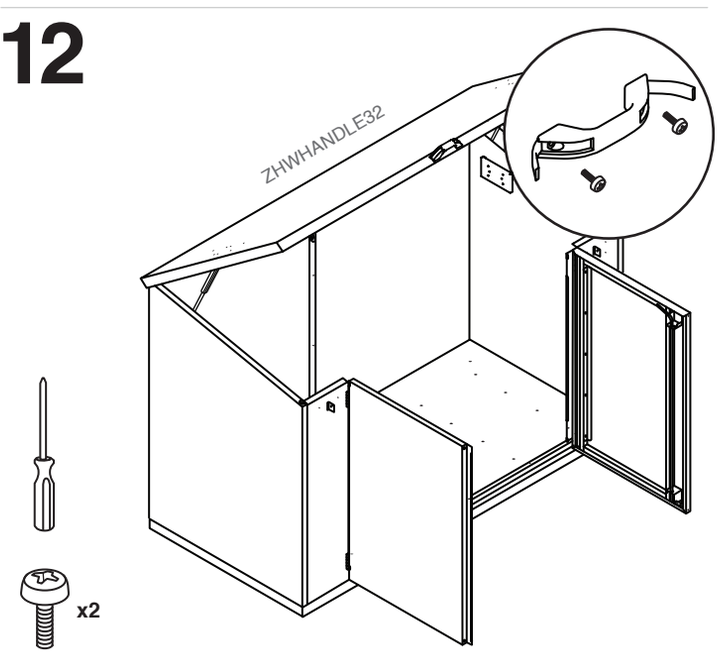


13! LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

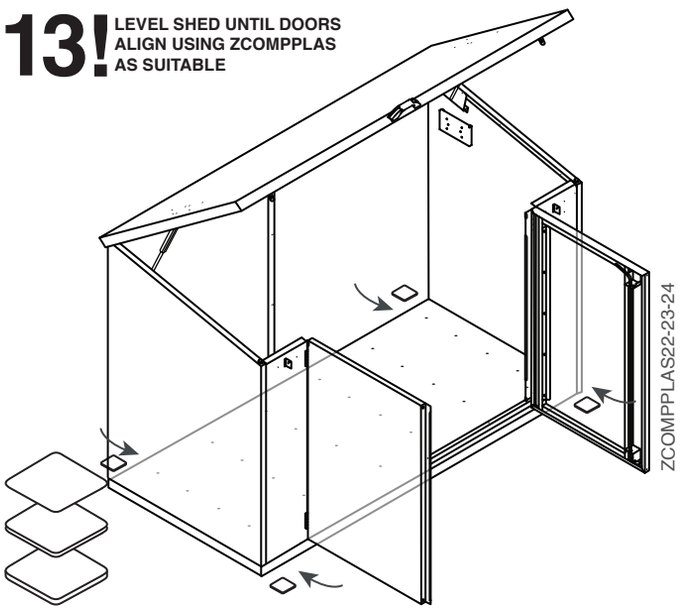


14

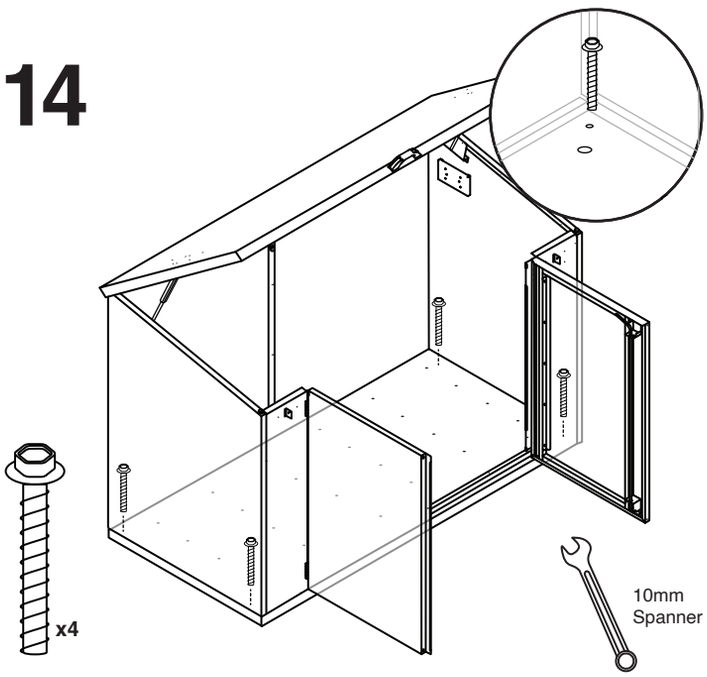


15! ENSURE CORRECT ALIGNMENT BEFORE ATTACHING SHROUDS (41824)

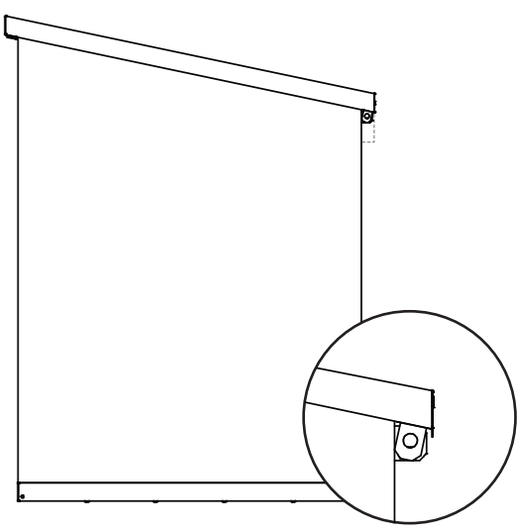


16! FIT SHROUDS (41824) AS HIGH UP AS POSSIBLE

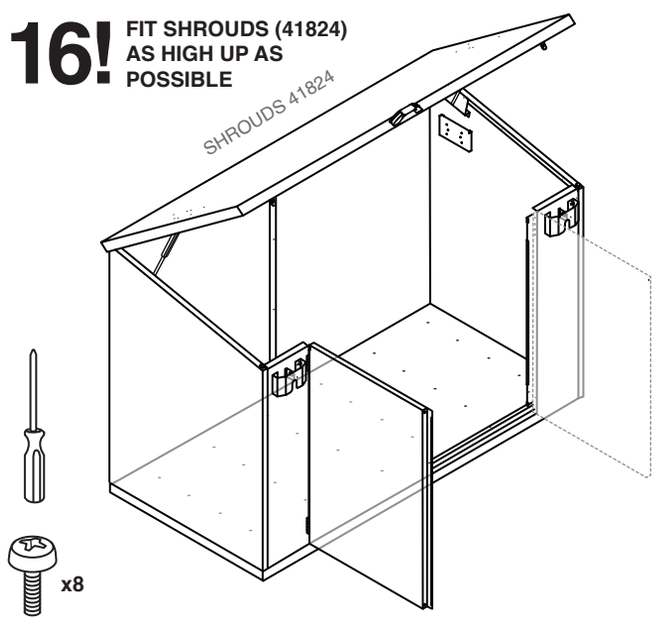

17! CHECK THE SHROUDS ARE FLUSH WITH THE SHED

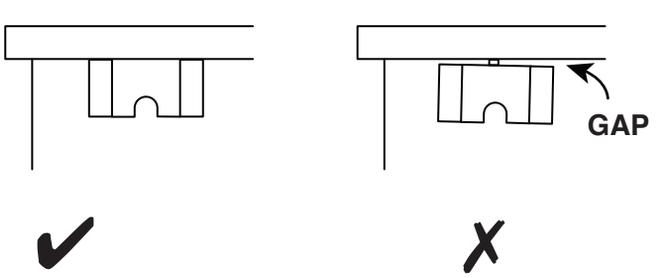


18! REMOVE SCREWS FROM SIDE WHERE ELETRICS ARE TO BE FITTED

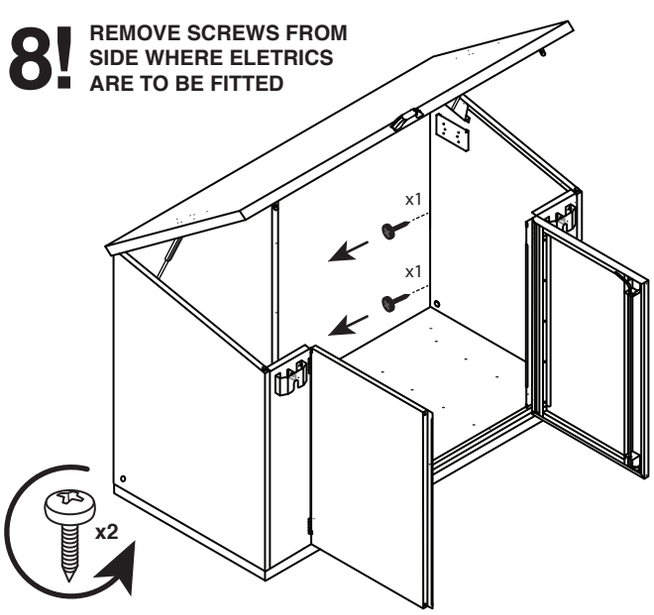

19! FIT EYELET BRACKET TO RETAIN ELECTRIC CABLES

FIT ELECTRICS TO MOUNTING PLATE, MAY REQUIRE ADDITIONAL DRILLING

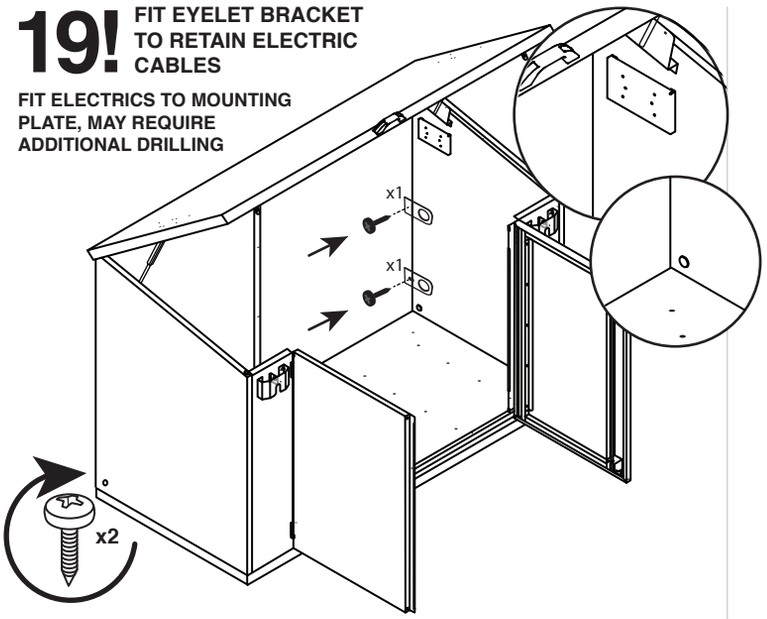

!

YOU MUST ENSURE YOUR BASE IS LEVEL AND THE LID ALIGNS CORRECTLY. YOU MUST BOLT DOWN THE UNIT TO KEEP IT LEVEL.

YOU MUST USE THE DOOR PLUNGER/ BAR ON THE BACK OF THE DOOR WHEN LOCKING YOUR SHED

FAILURE TO DO SO MAY MAKE YOUR SHED LESS SECURE