
FLEXISTORE 1533

BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 1730mm x 3770mm x 50mm.

LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor the unit to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to seal the fixing holes from underneath.

TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill, a 10mm socket or spanner.

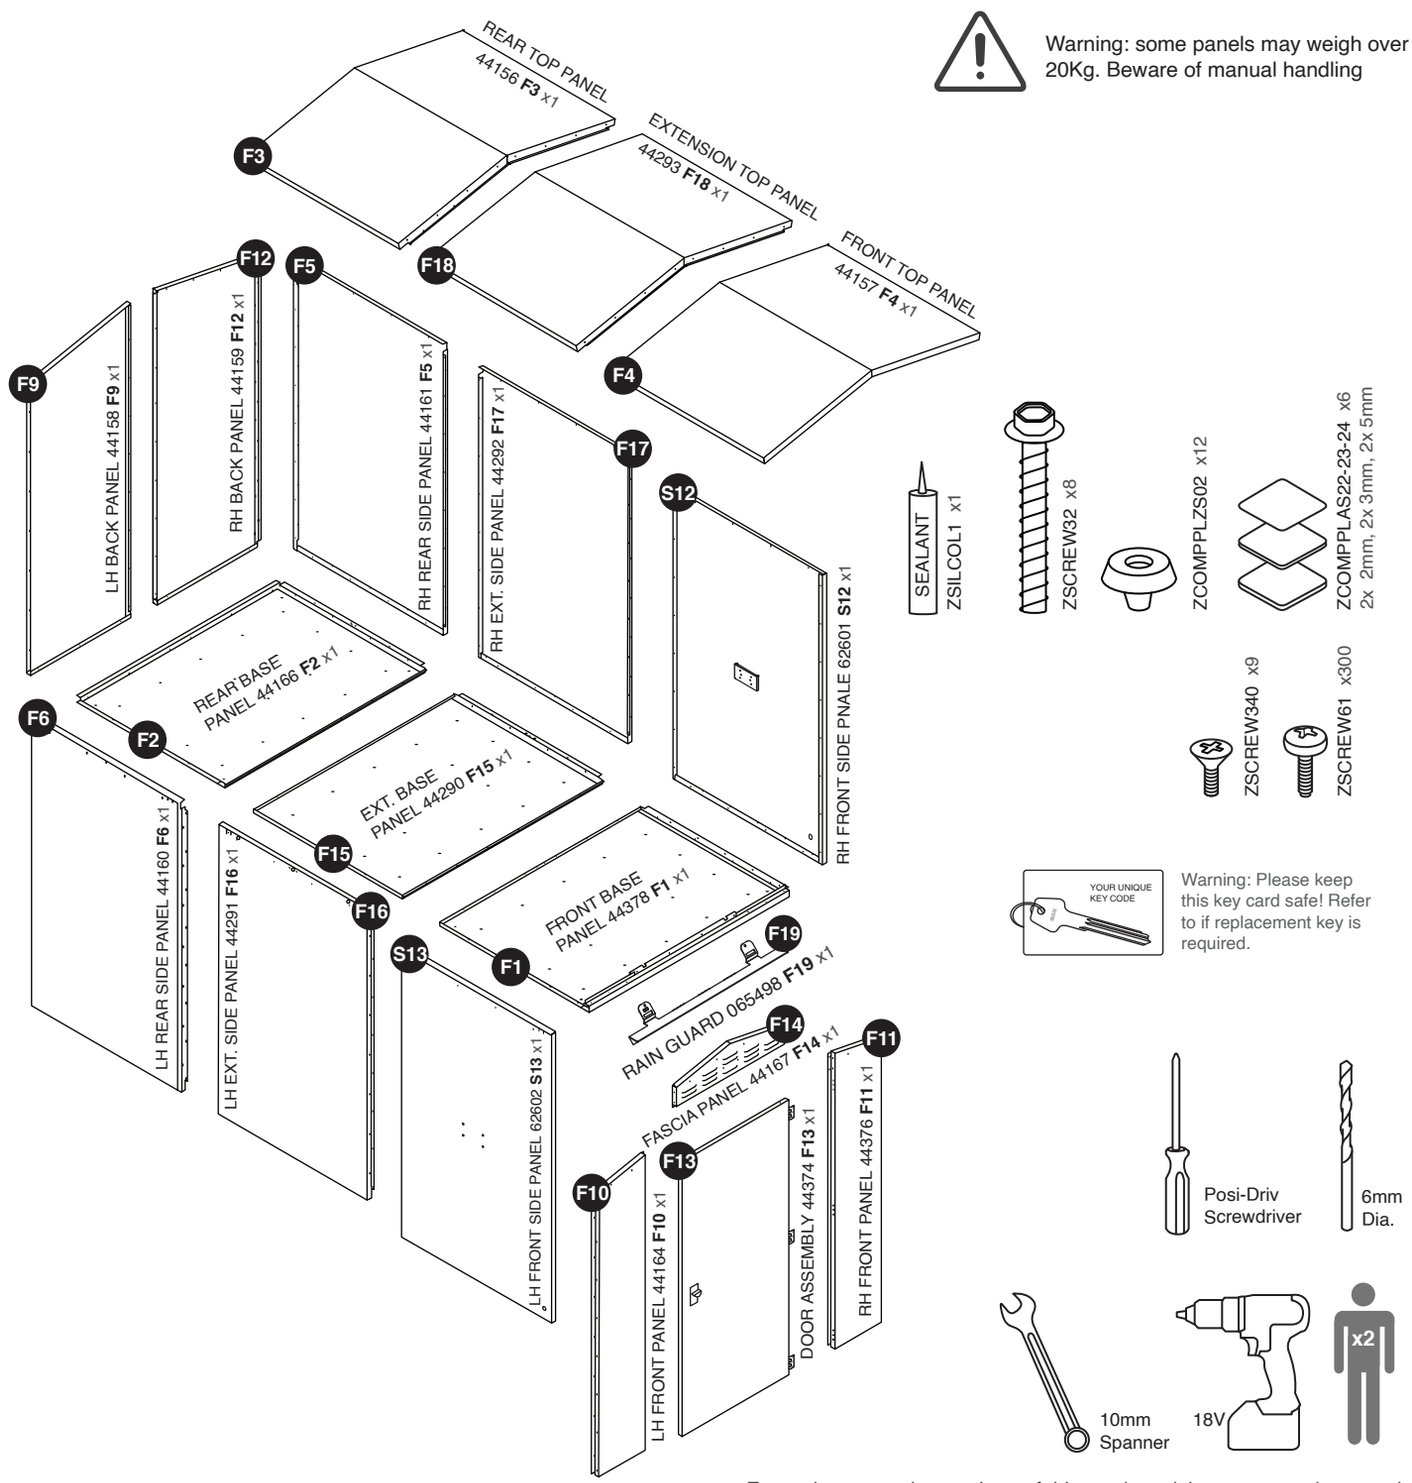


For maintenance instructions of this product visit www.asgardsss.co.uk

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1!

IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

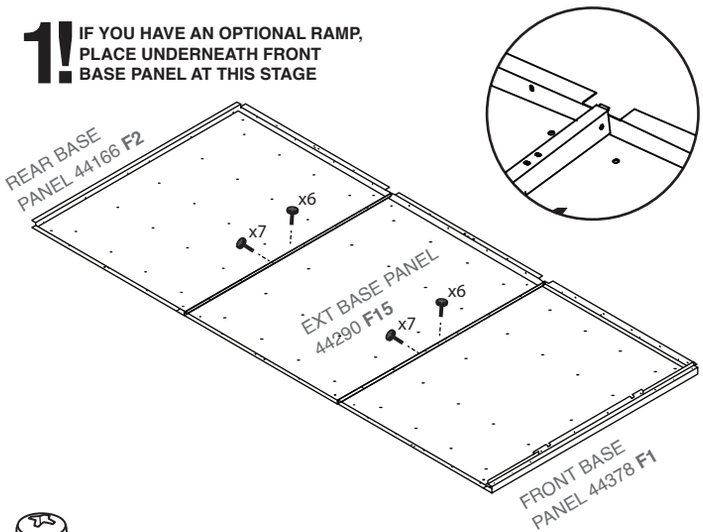



x26

2

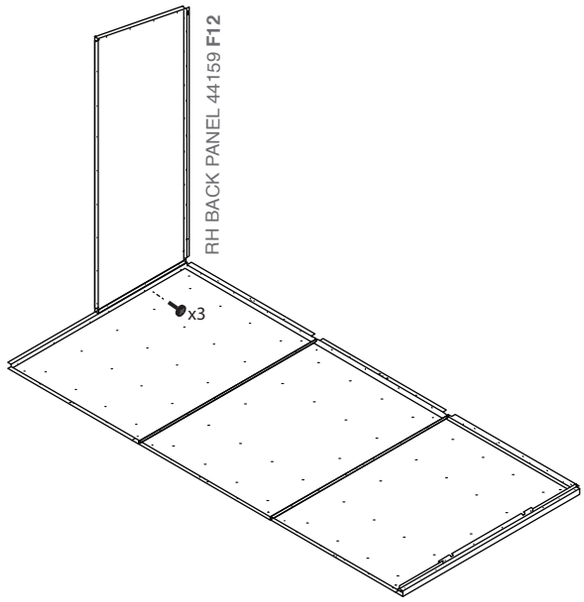



x3

3

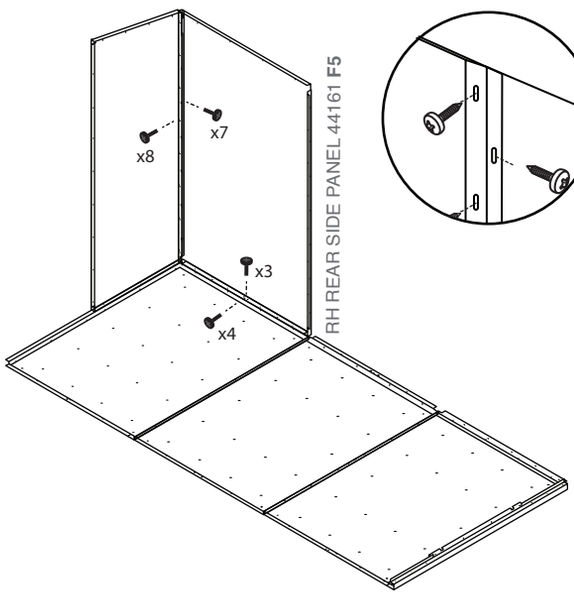



x22

4

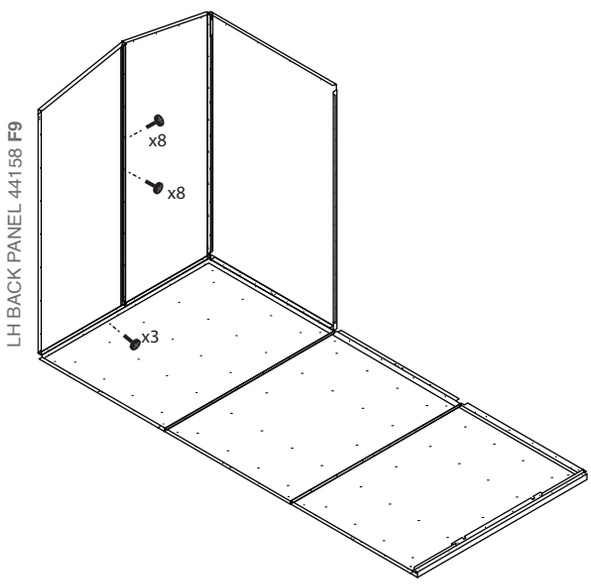



x19

5

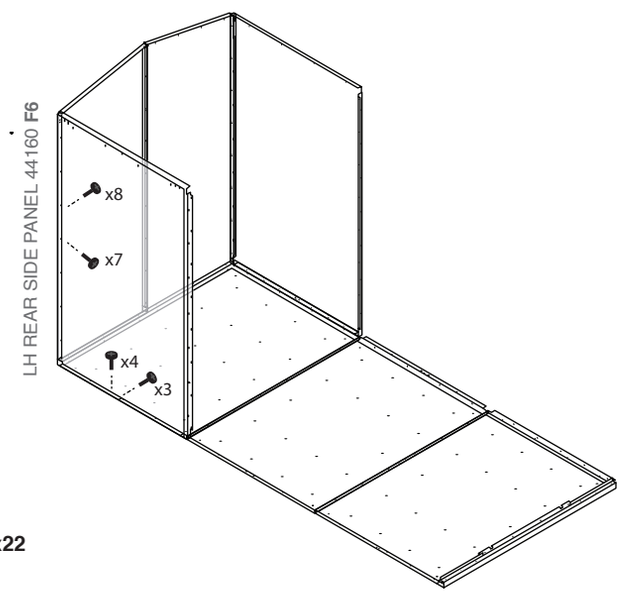


x22


6

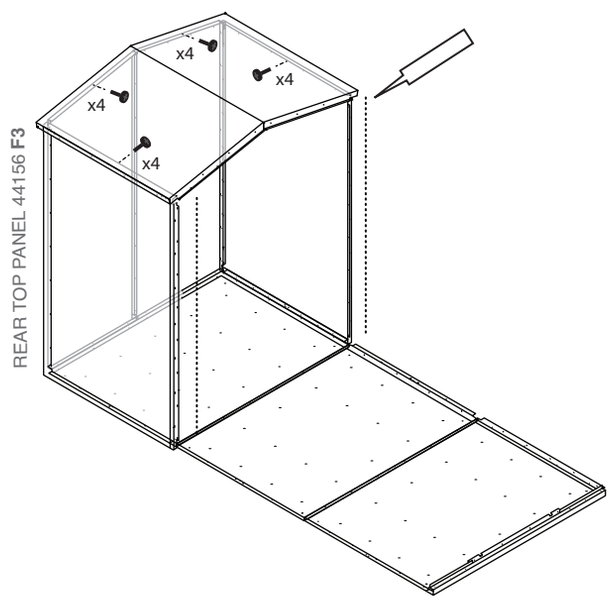


x16

7


LH EXT. SIDE PANEL 44291 **F16**
RH EXT. SIDE PANEL 44292 **F17**

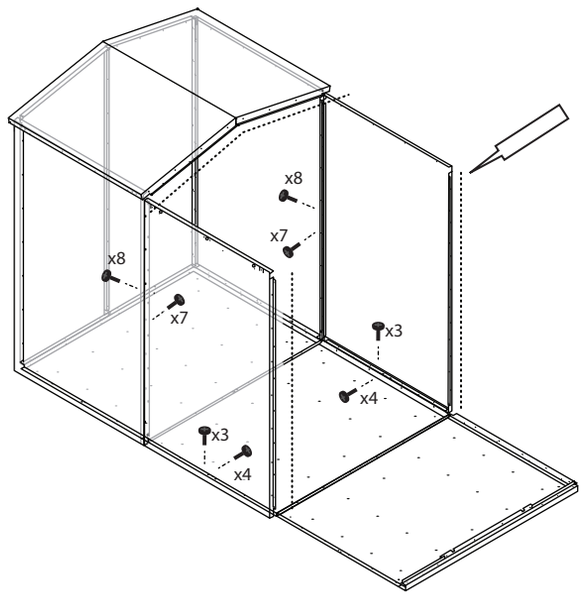


x44

8


EXTENSION TOP PANEL 44293 **F18**

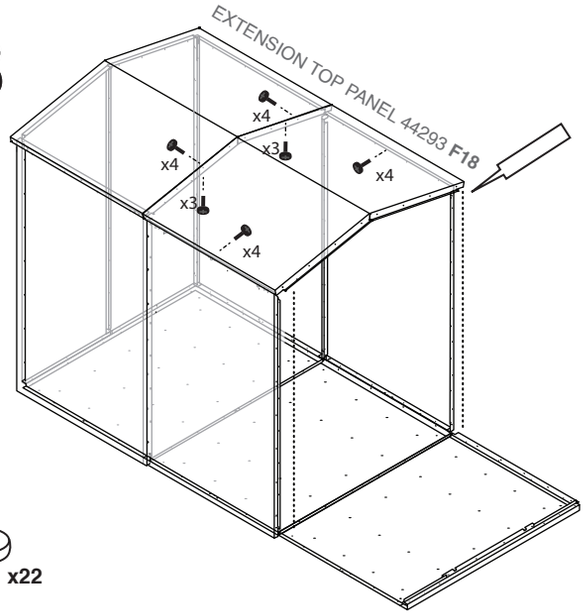


x22

9


LH FRONT SIDE PANEL 62602 **S13**
RH FRONT SIDE PNALE 62601 **S12**

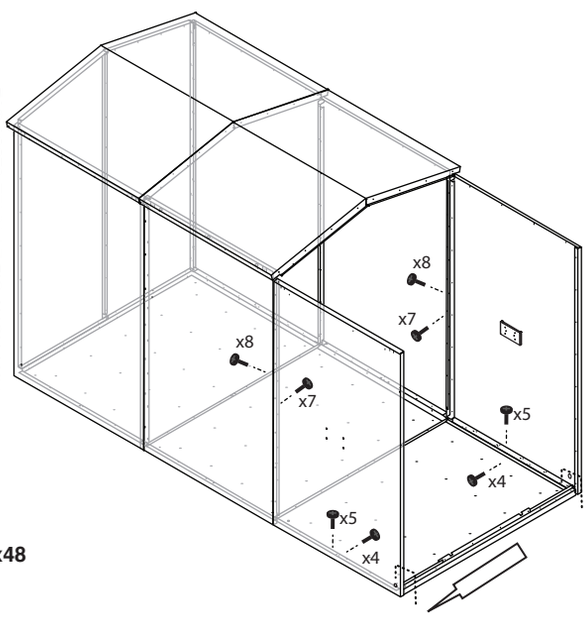


x48


10

LH FRONT PANEL 44164 **F10**
RH FRONT PANEL 44376 **F11**

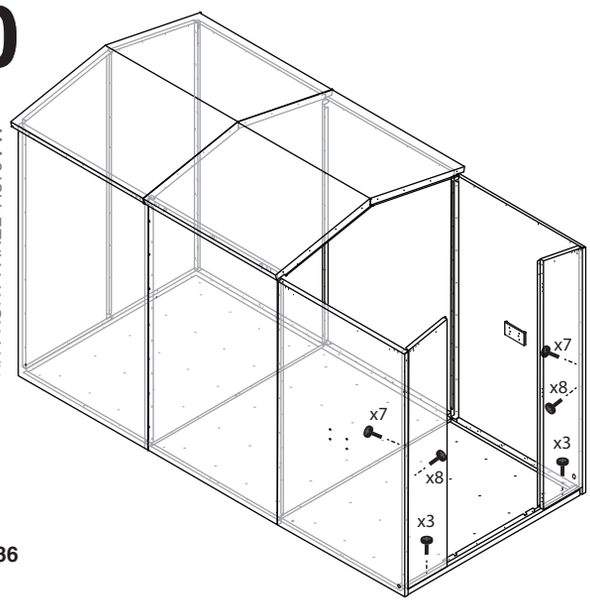


x36

11

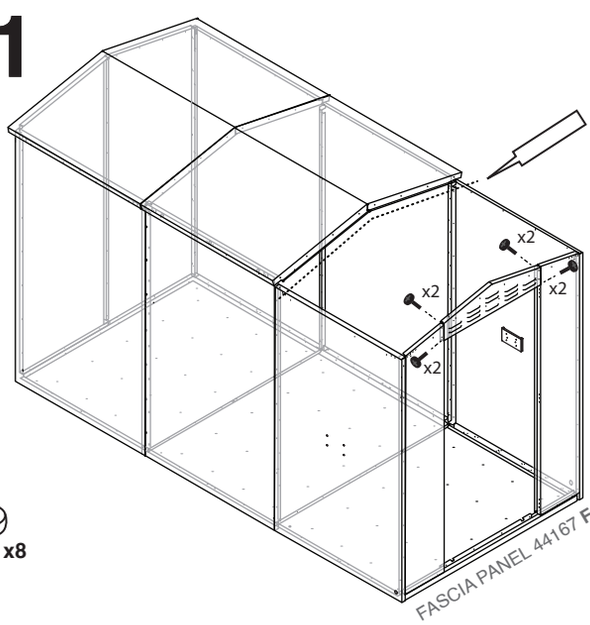



x8

FASCIA PANEL 44167 **F14**

12


FRONT TOP PANEL 44157

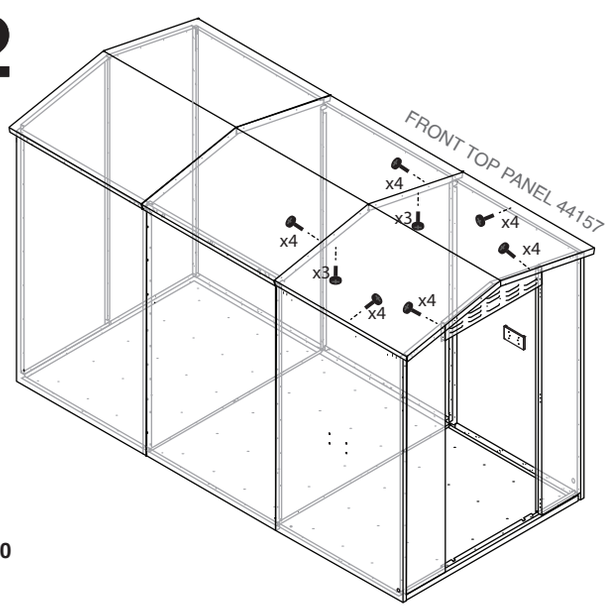


x30

13

DOOR ASSEMBLY 44374 **F13**

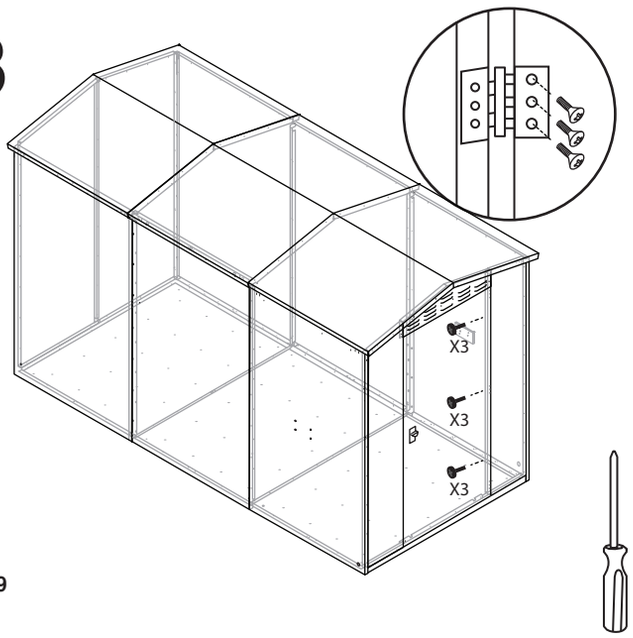




x9

14!

LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

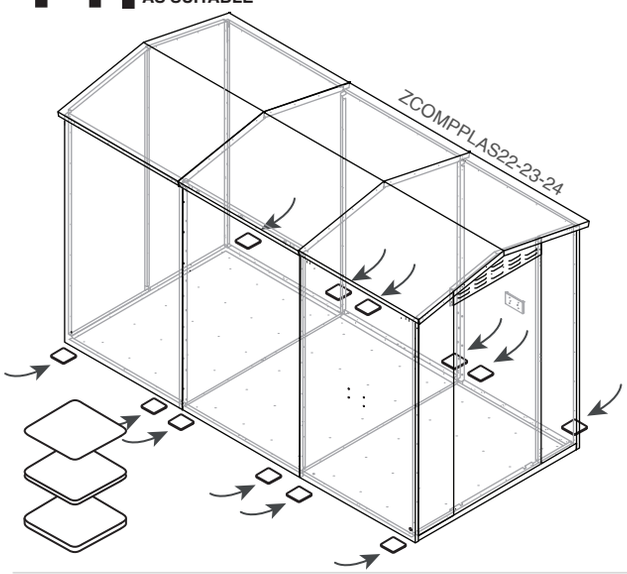


15!

SLOT THE FIVE TABS ON THE RAIN GUARD THROUGH THE VENTS, BEND DOWN THE THREE INNER TABS AND FASTEN SCREWS


FRONT ROOF PANEL F4 44157 REMOVED FOR CLARITY

RAIN GUARD **F19** 065498

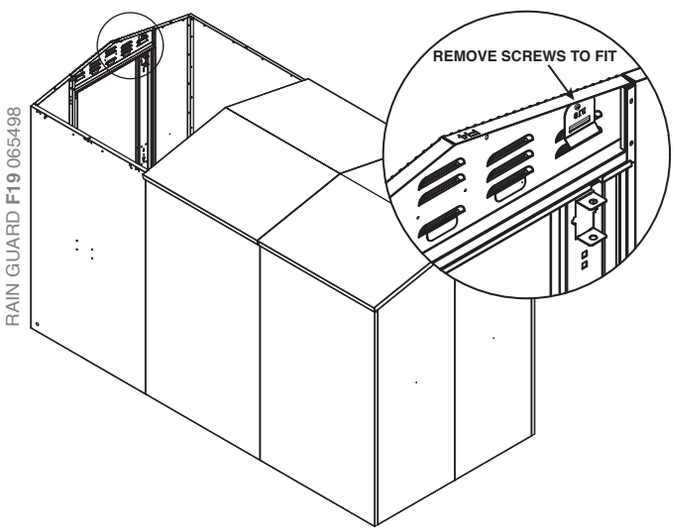


16!

APPLY A BEAD OF SILICONE TO THE UNDERSIDE OF THE RAIL GUARD

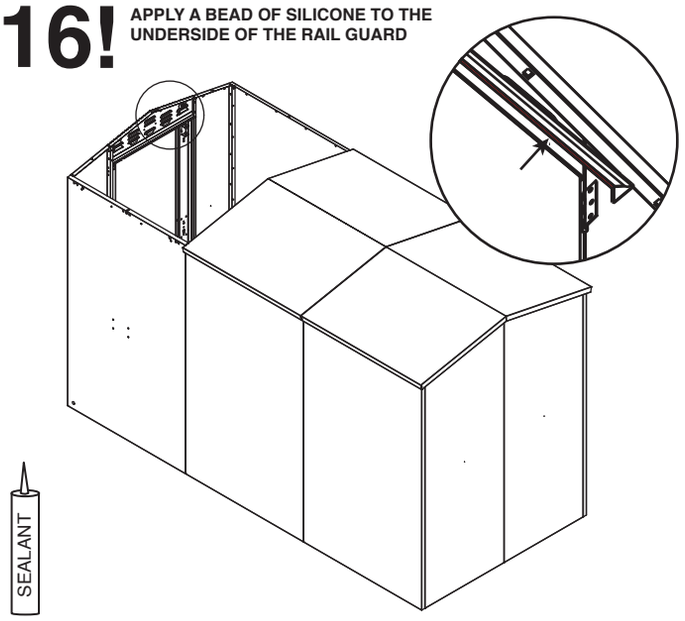

17

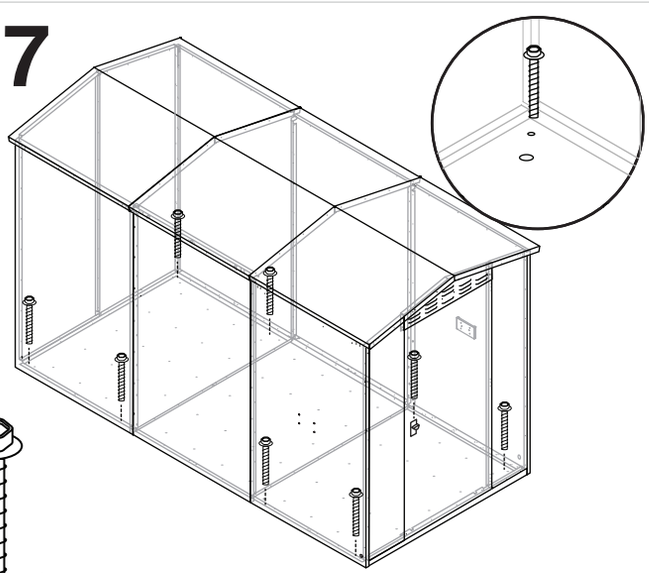





x8

18!

SEAL ALL INTERNAL CORNERS

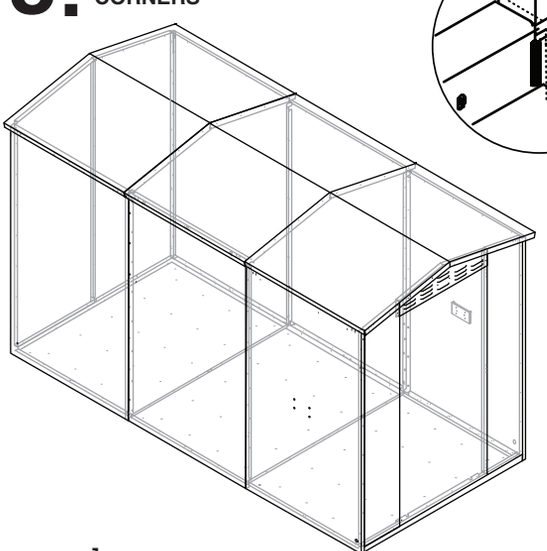

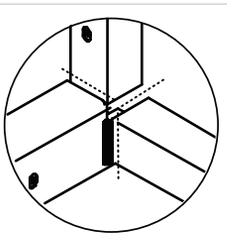



www.asgardsss.co.uk