

## FLEXISTORE 1533

### BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.  
 Min. distance from walls/ shrubbery: 1000mm.  
 Min. base size (WxDxH) 1730mm x 3770mm x 50mm.


### LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor the unit to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to seal the fixing holes from underneath.


### TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill, a 10mm socket or spanner.

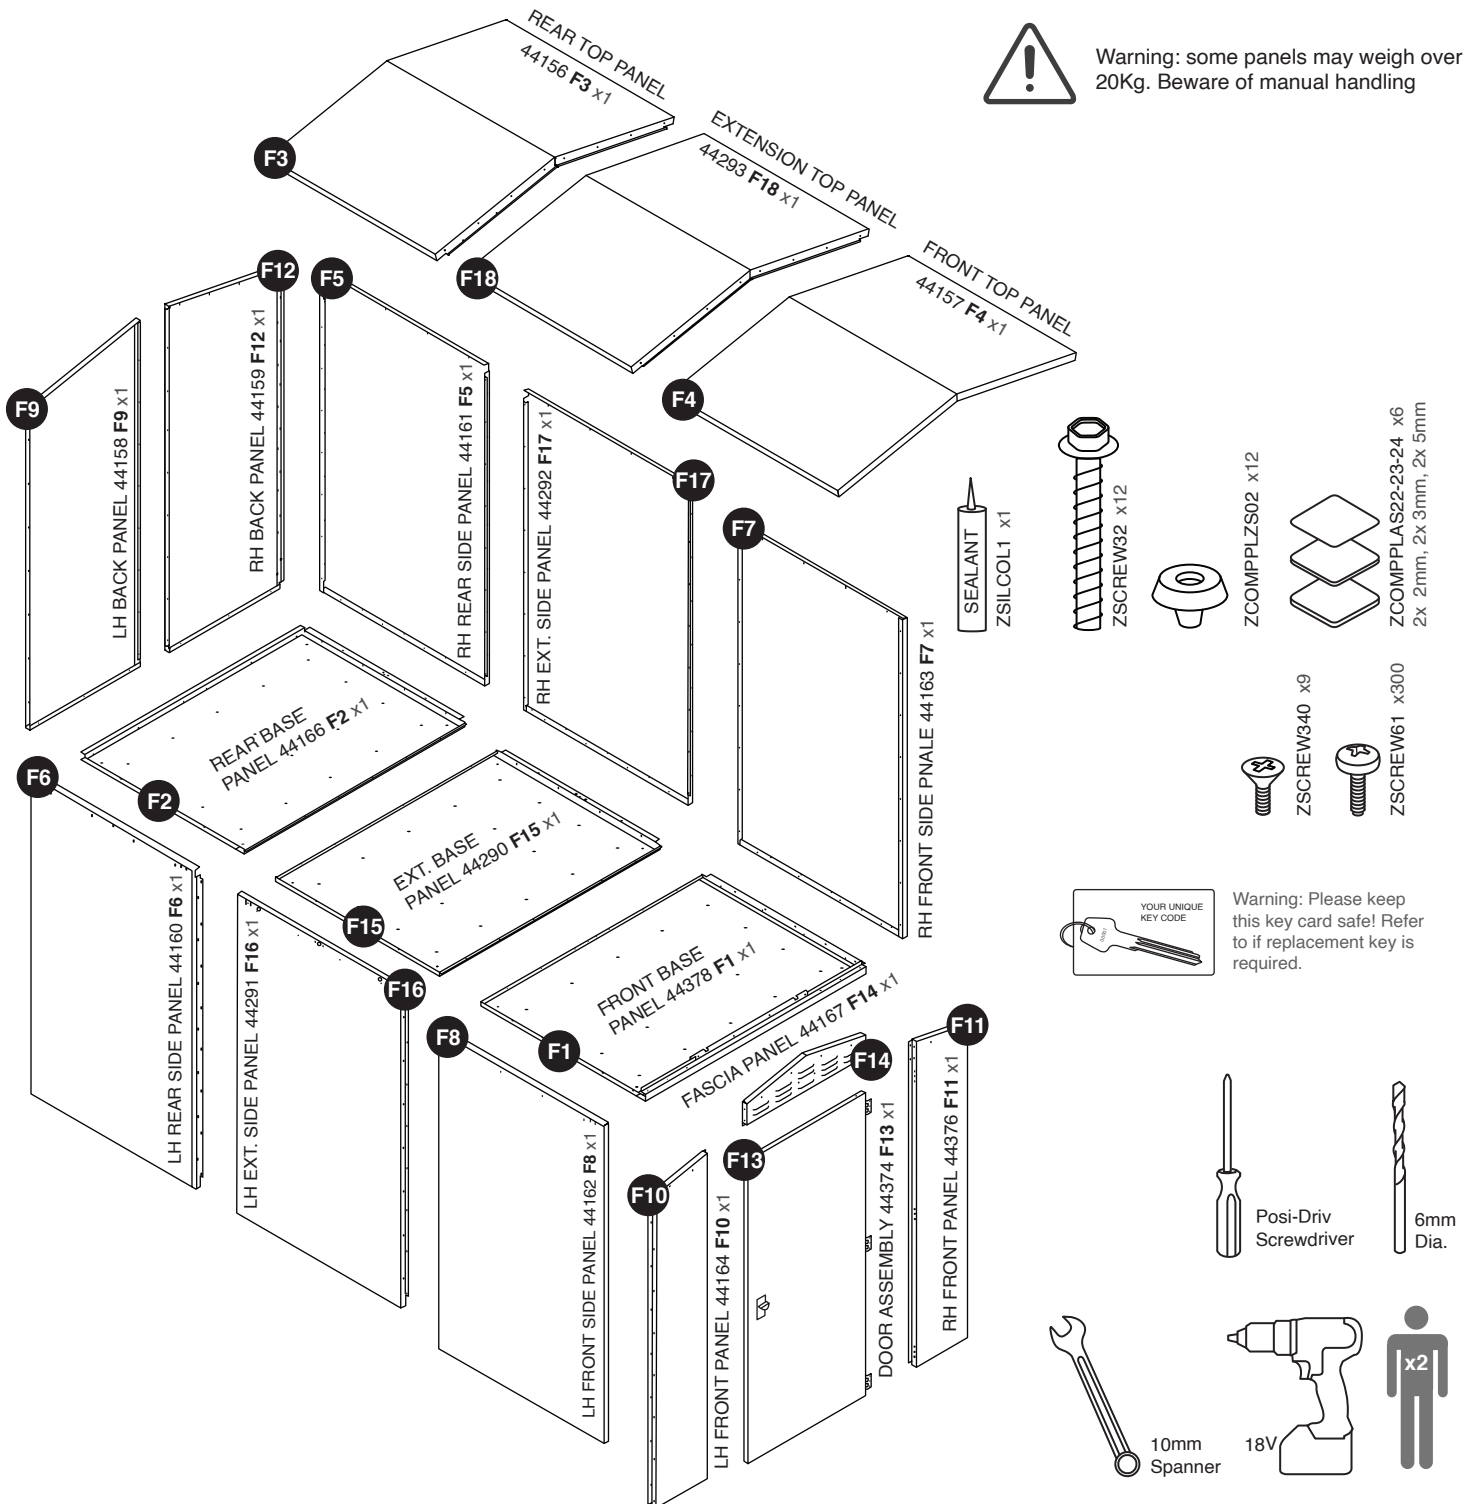


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


**1!** IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

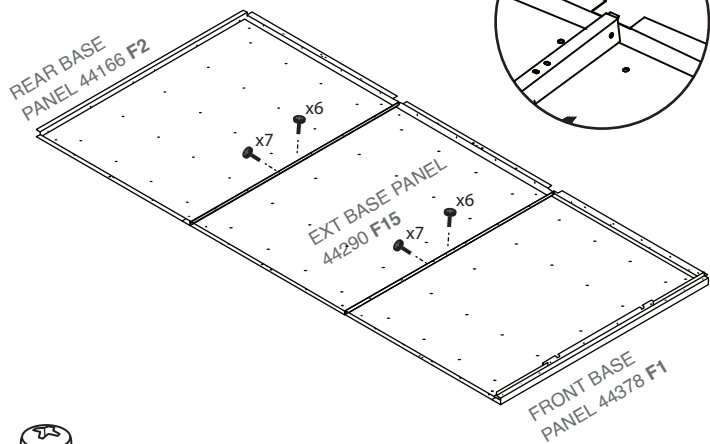


**2**

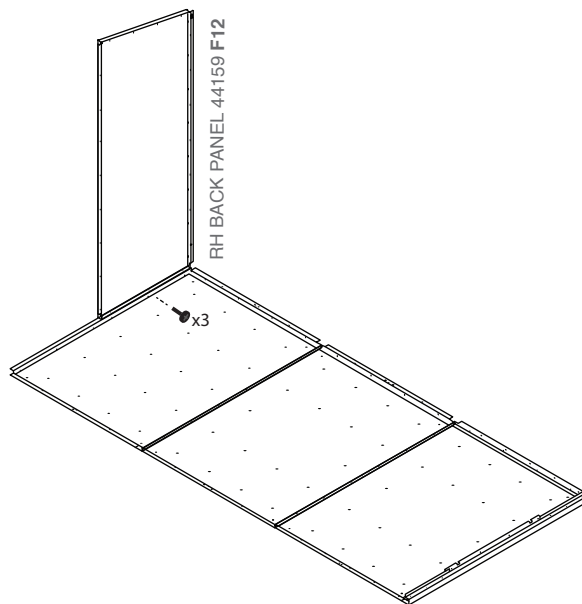


**3**

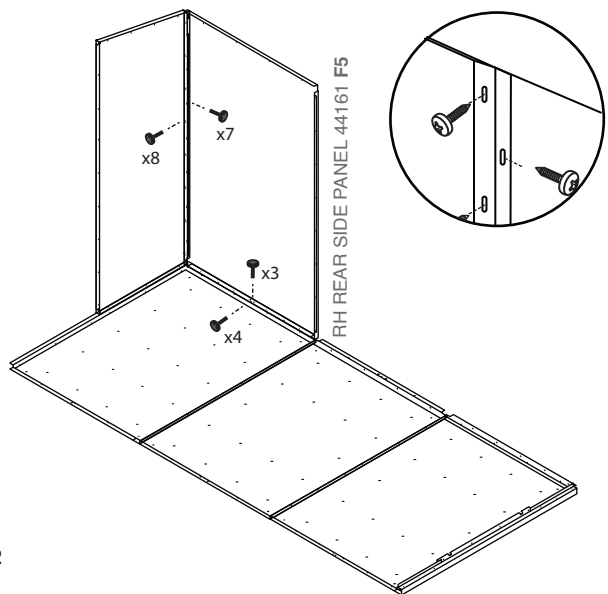


**4**

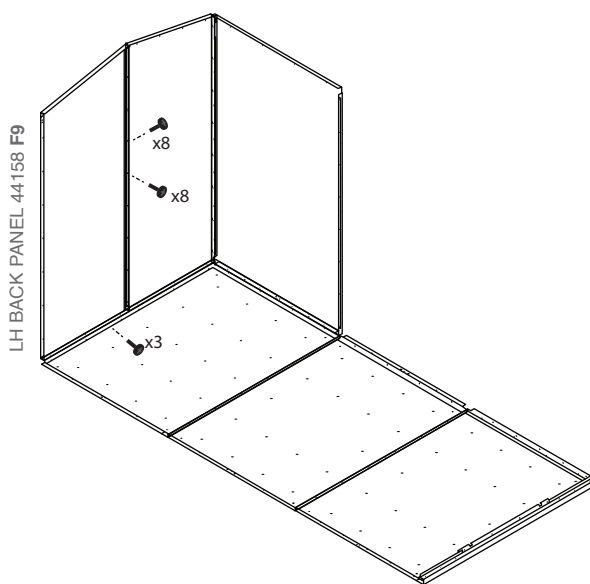

**5**

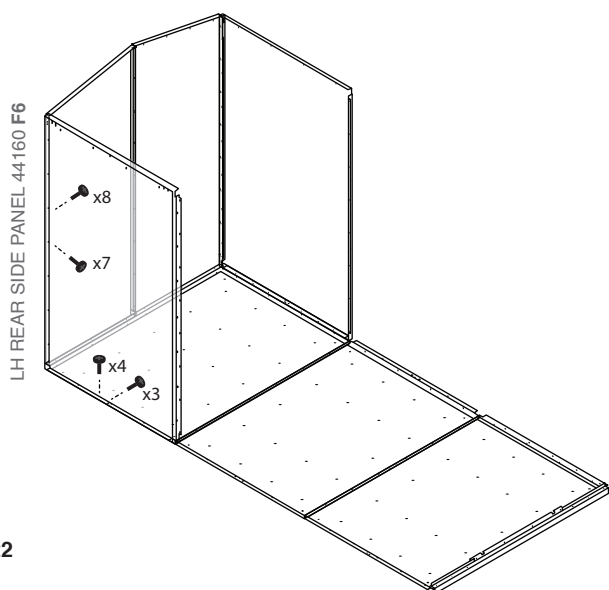


**6**

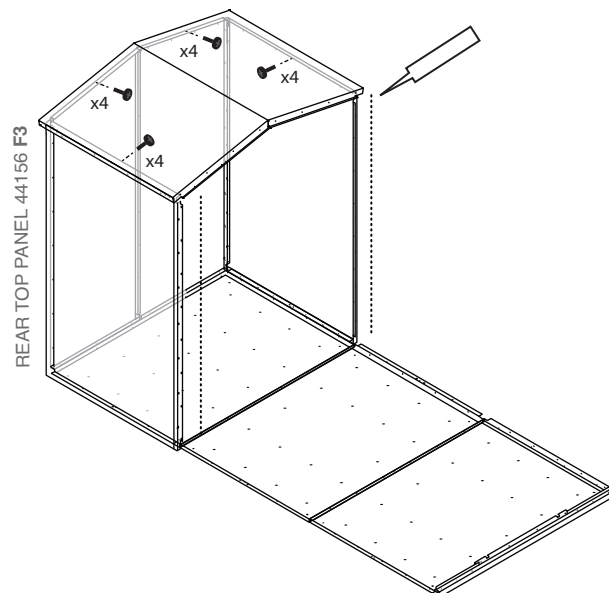


# 7

LH EXT. SIDE PANEL 44291 F16  
RH EXT. SIDE PANEL 44292 F17

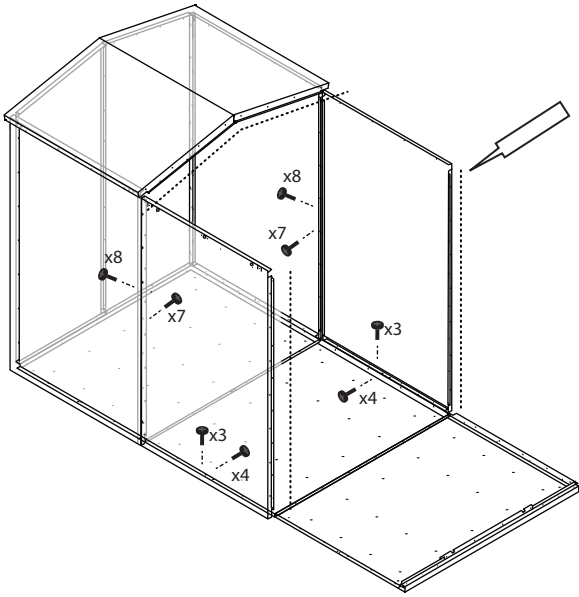


# 8

EXTENSION TOP PANEL 44293 F18

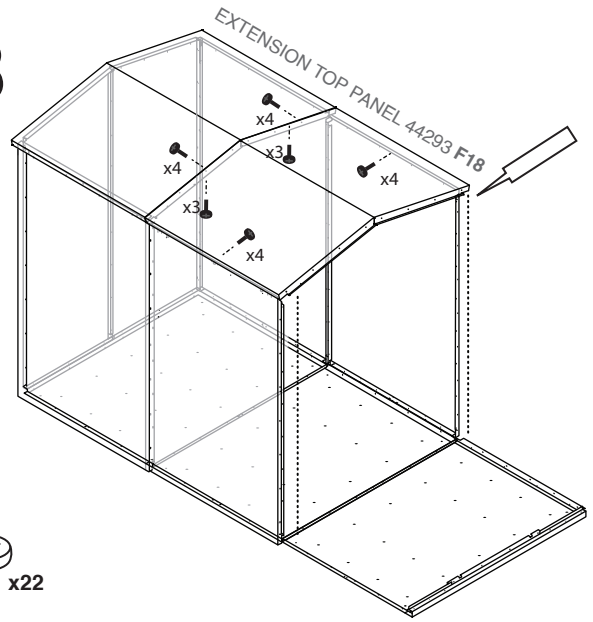


# 9

LH FRONT SIDE PANEL 44162 F8  
RH FRONT SIDE PANEL 44163 F7

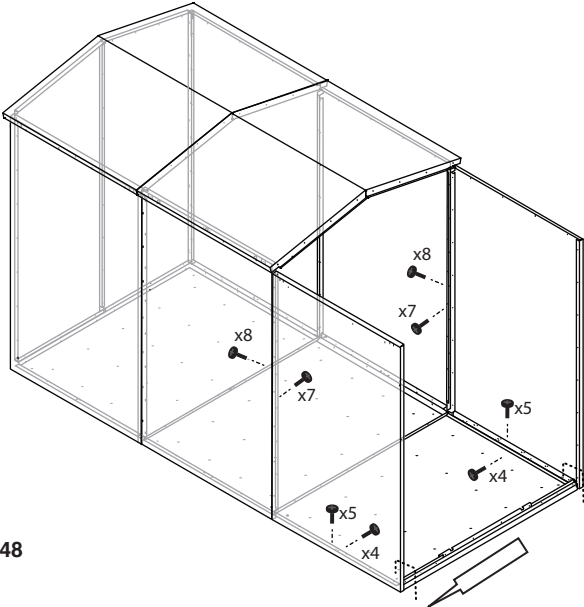


# 10

LH FRONT PANEL 44164 F10  
RH FRONT PANEL 44376 F11

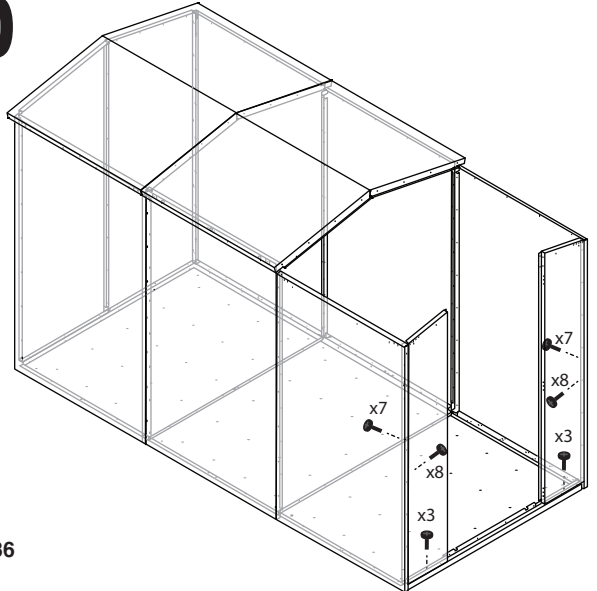


# 11

FASCIA PANEL 44167 F14

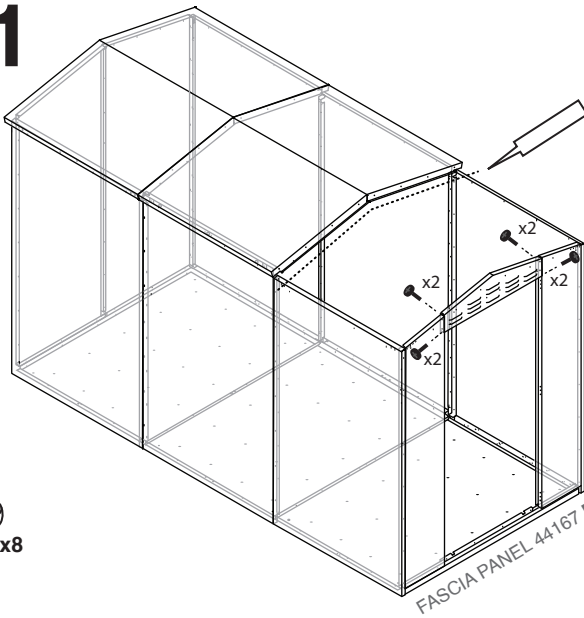


# 12

FRONT TOP PANEL 44157

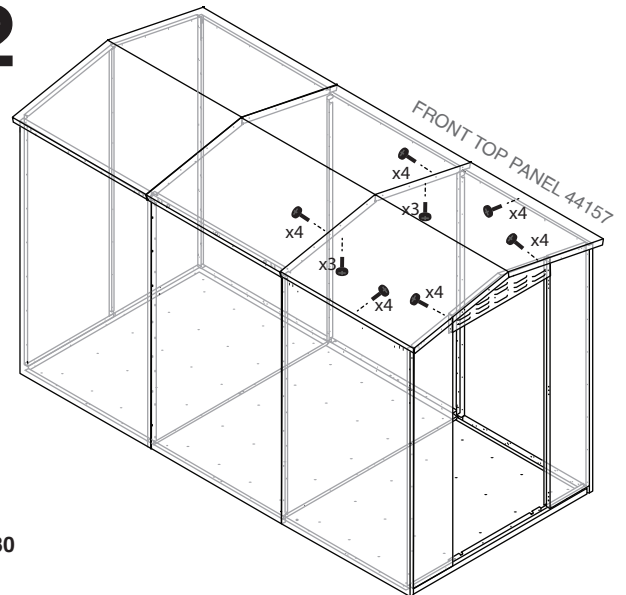


# 13

DOOR ASSEMBLY 44374 F13


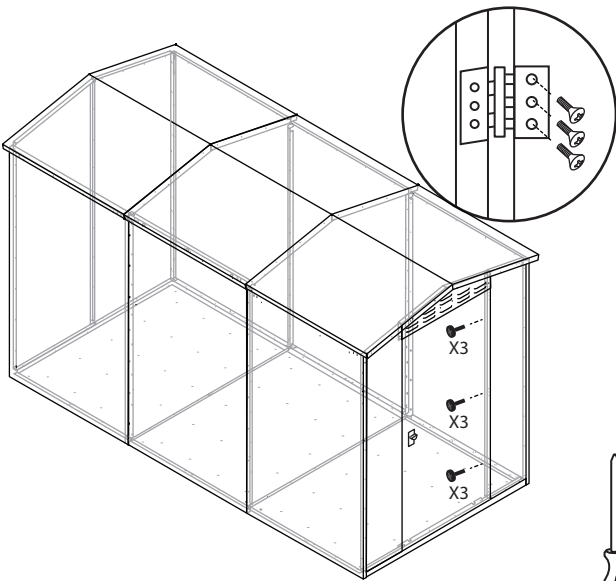


# 14!

LEVEL SHED UNTIL DOORS  
ALIGN USING ZCOMPPLAS  
AS SUITABLE

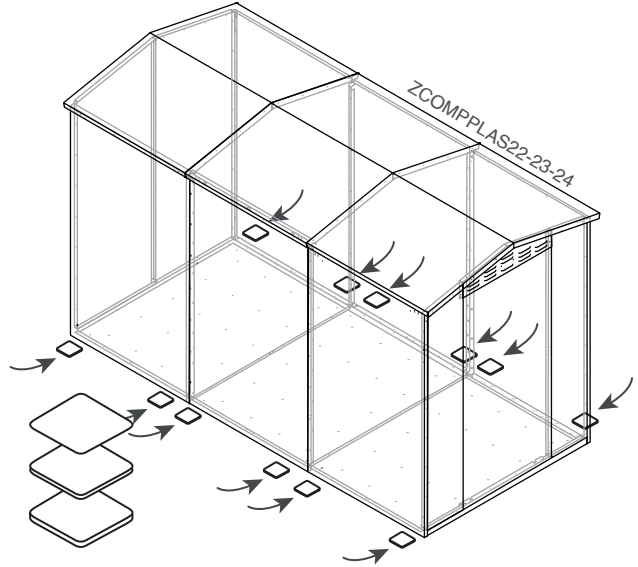

# 15

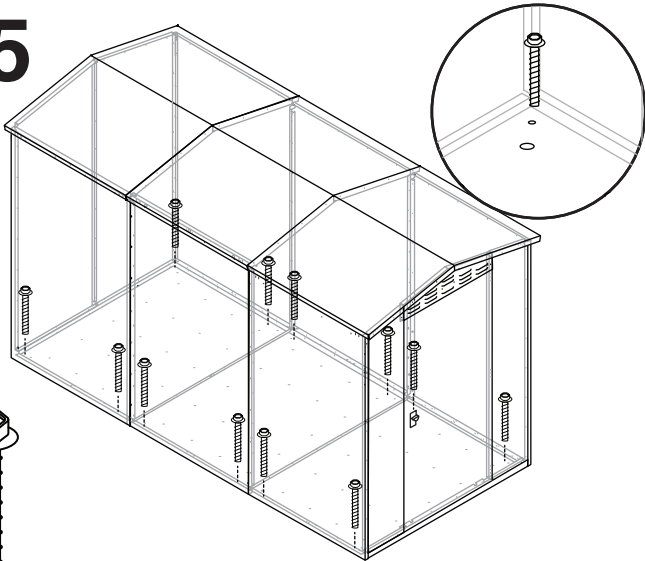

# 16!

SEAL ALL INTERNAL  
CORNERS

