

TROJAN PLUS E

BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2350mm x 1100mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.



It is always recommended to anchor the unit to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). **If not anchoring the unit, fit the 4 self-seal plugs BEFORE BUILDING to block the fixing holes underneath. Fit 4 self-seal plugs in the side of base to stop water from entering the unit.**

TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.



Warning: some panels may weigh over 20Kg. Beware of manual handling

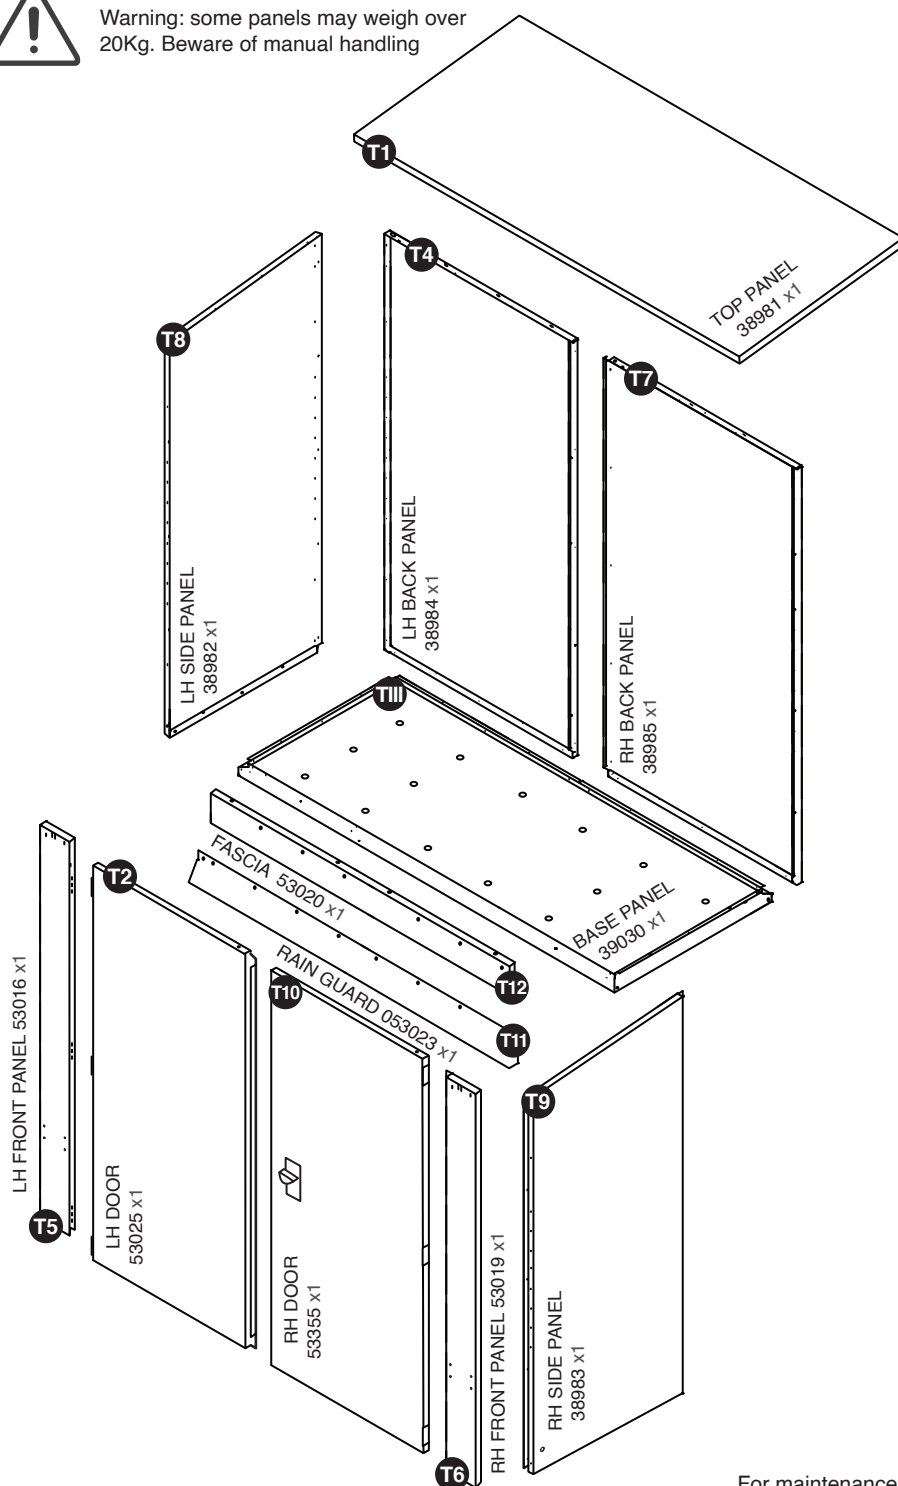

ZCOMPPLZS02 x8



ZCOMPPLAS22-23-24 x12
2x 2mm, 2x 3mm, 2x 5mm




ZSCREW340 x18



ZSCREW61 x130



ZCOMPPLAS39 x2



Warning: Please keep this key card safe! Refer to if replacement key is required.




Posi-Driv
Screwdriver



6mm
Dia.



10mm
Spanner

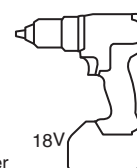


18V




x2

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1! FIT SELF-SEAL PLUGS: 4X SIDE OF BASE. 4X BOTTOM OF BASE IF UNIT IS NOT BEING SECURED TO FLOOR

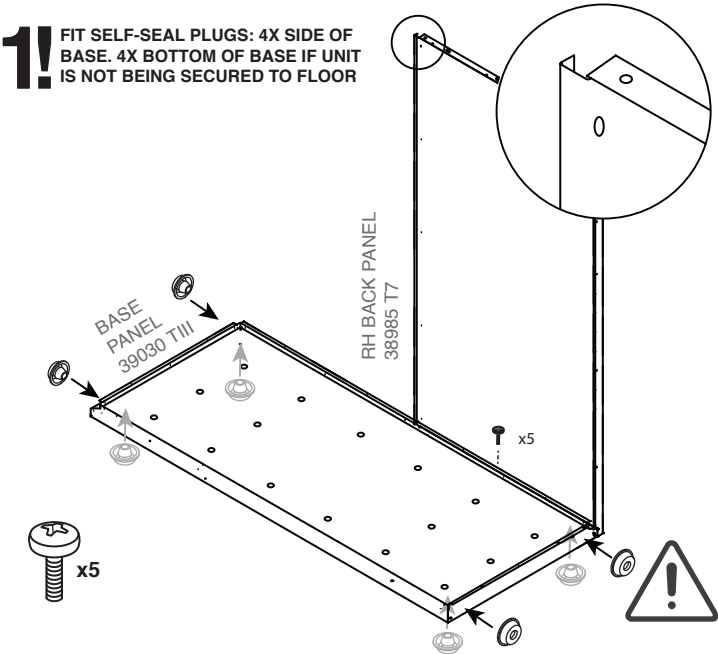


2

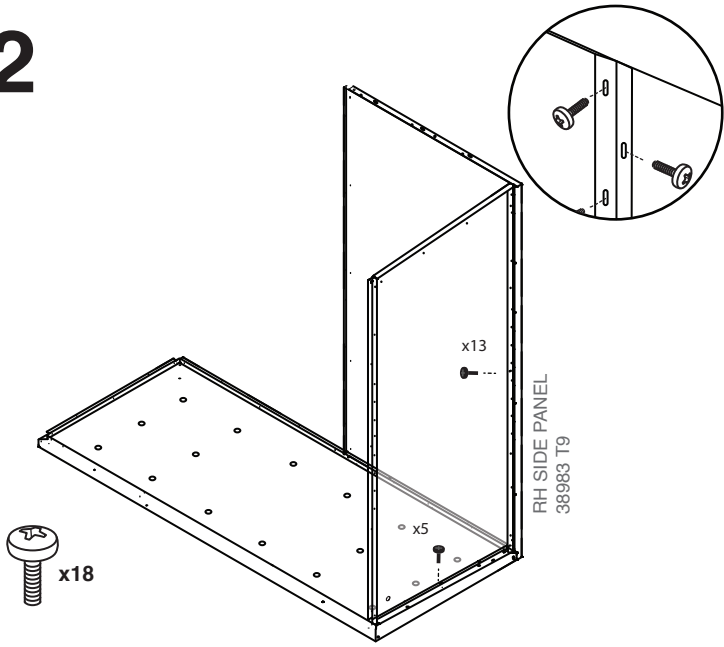


3

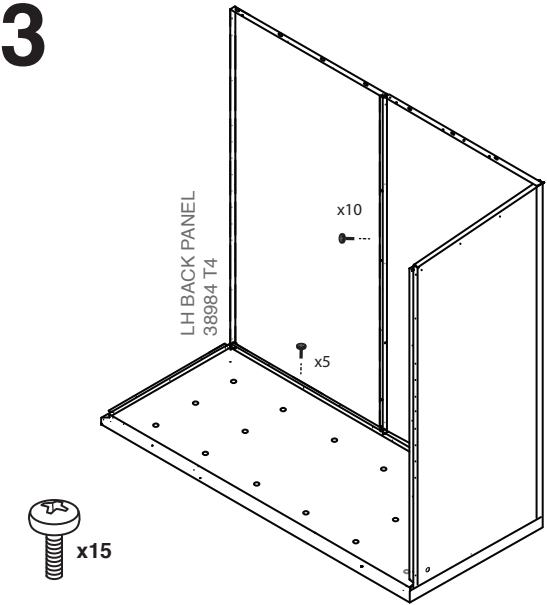


4

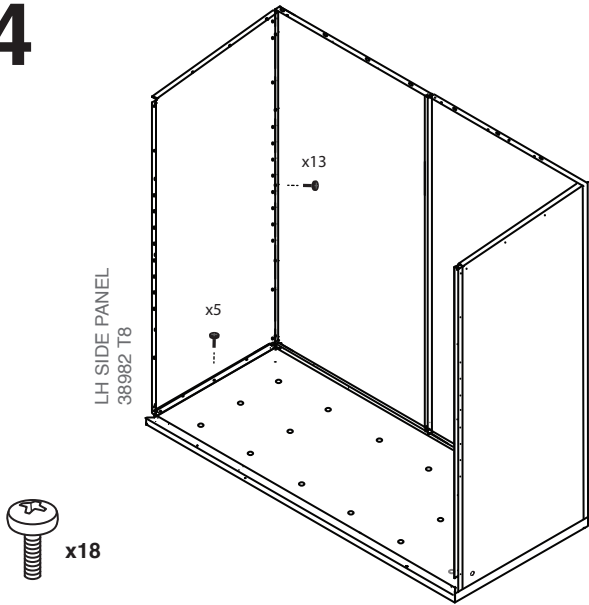


5

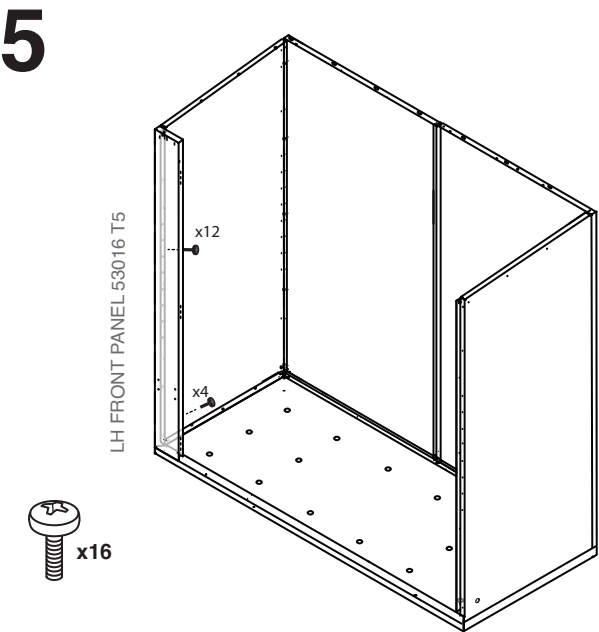


6

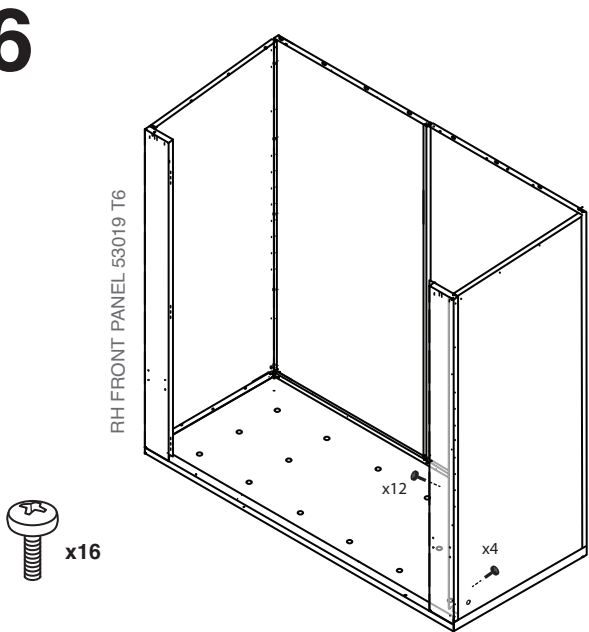

7

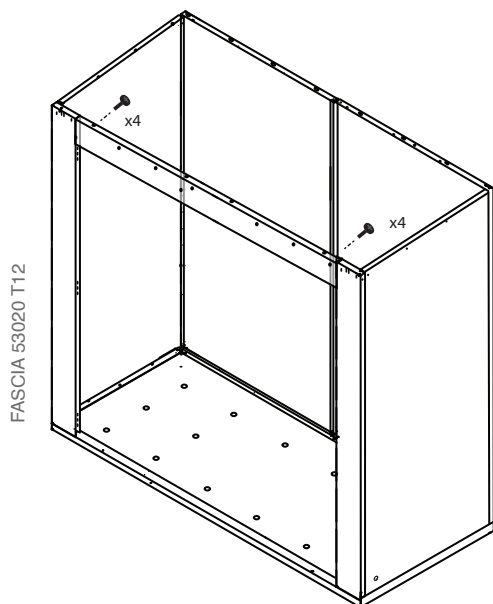


8

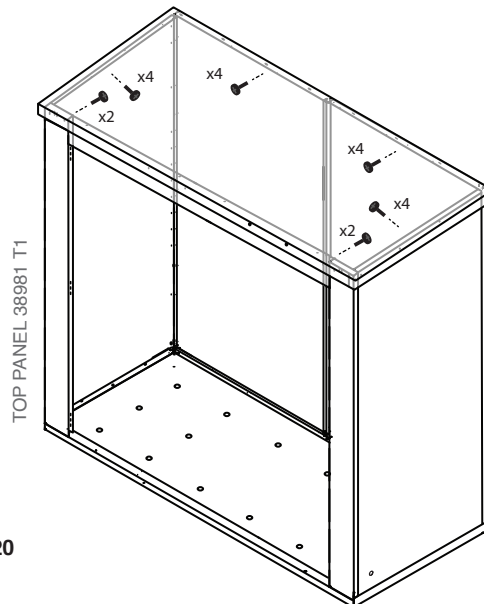


9!

9A. TRAP RAIN GUARD
BETWEEN FASCIA &
LID. 9B. SCREW IN

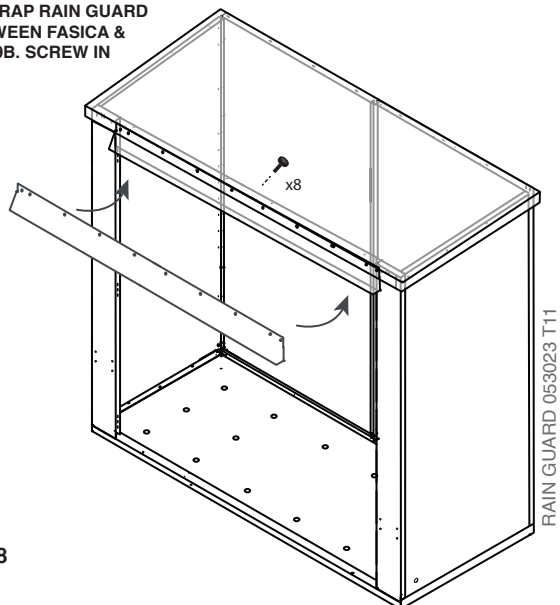


10

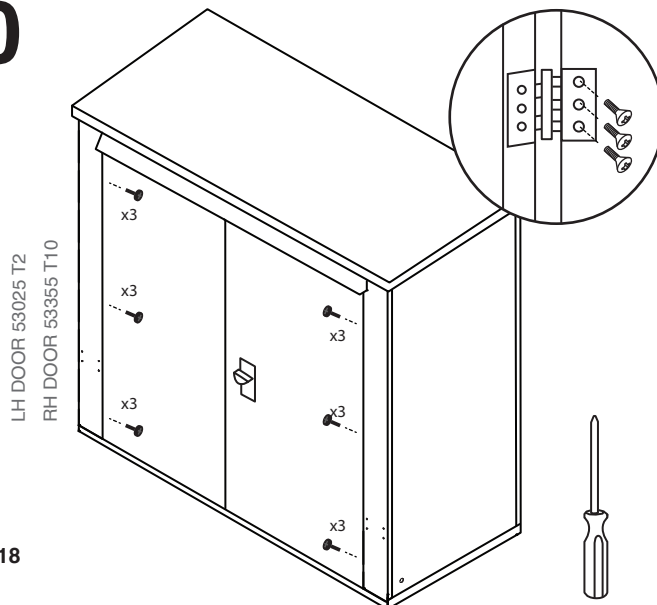

11!

LEVEL SHED UNTIL
DOORS ALIGN USING
ZCOMPLAS
AS SUITABLE

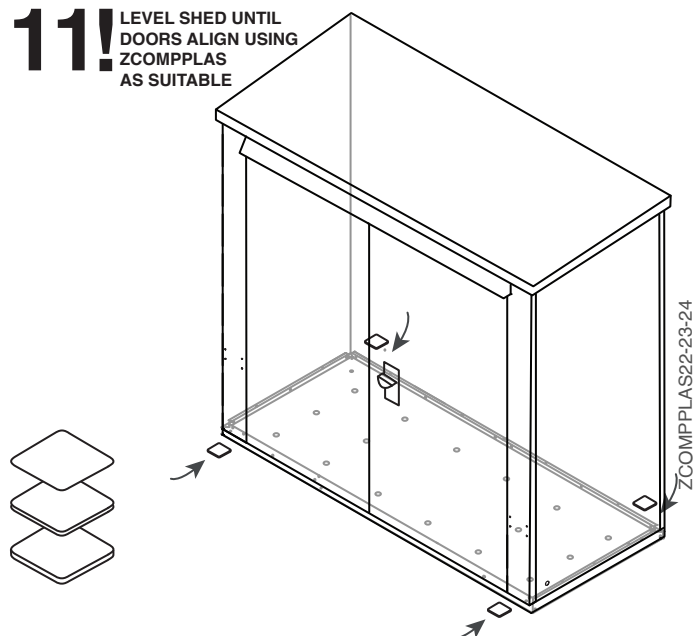

12

