

GLADIATOR PLUS 2



BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2410mm x 4940mm x 50mm.


LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor down the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to block the fixing holes from underneath. **Please note, product must be bolted down to comply with LPS1175**

TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.

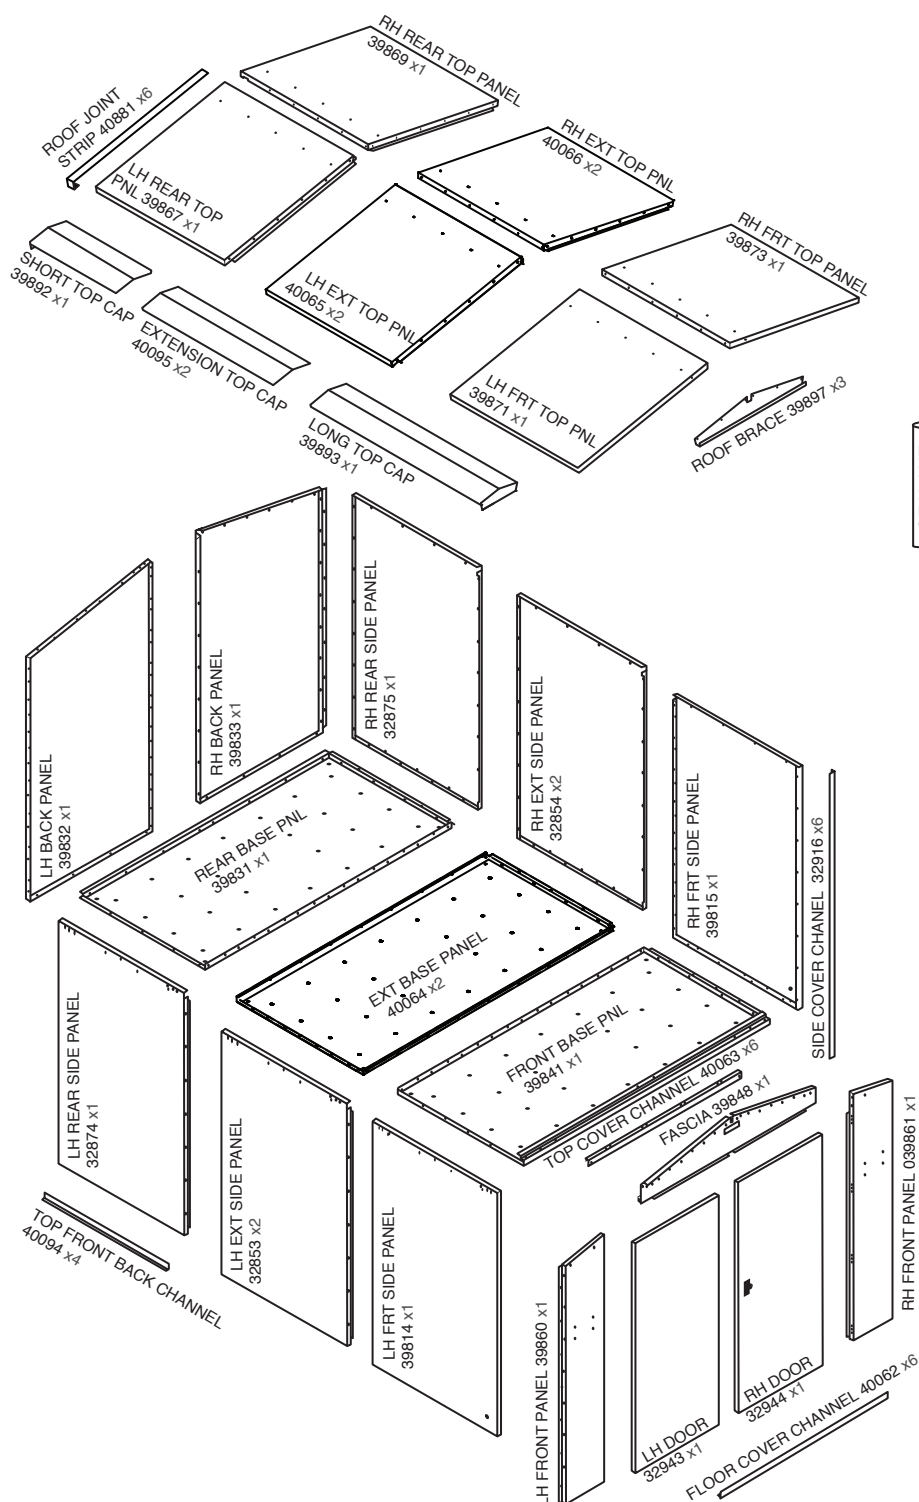

Warning: some panels may weigh over 20Kg. Beware of manual handling



SEALANT
ZSILCOL1 x3



ZSCREW32 x16



ZCOMPPLZS02 x16



ZCOMPPLAS22-23-24 x24
8x 2mm, 8x 3mm, 8x 5mm



Z32670 x26




ZSCREW340 x24



ZSCREW100 x515



ZSCREW04 x4




Warning: Please keep this key card safe! Refer to if replacement key is required.




Posi-Drive
Screwdriver



6mm
Dia.



10 mm
Spanner

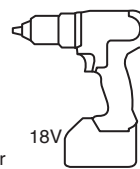

18V




x2


For maintenance instructions of this product visit www.asgardsss.co.uk

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1

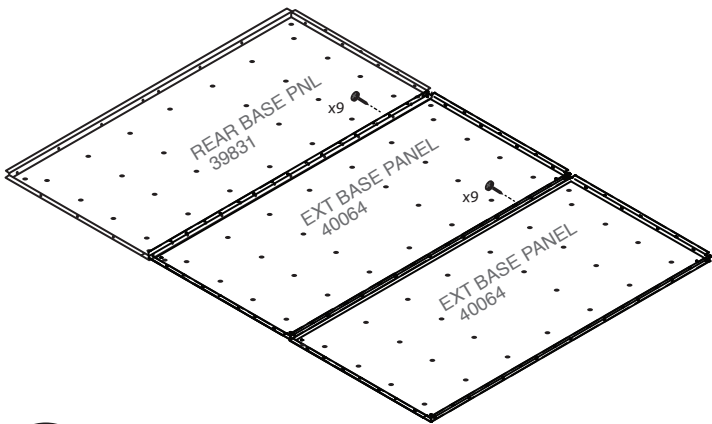


2! IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

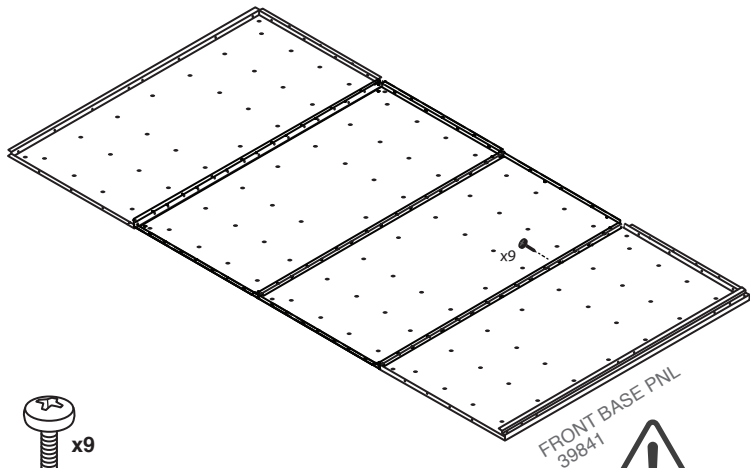


3

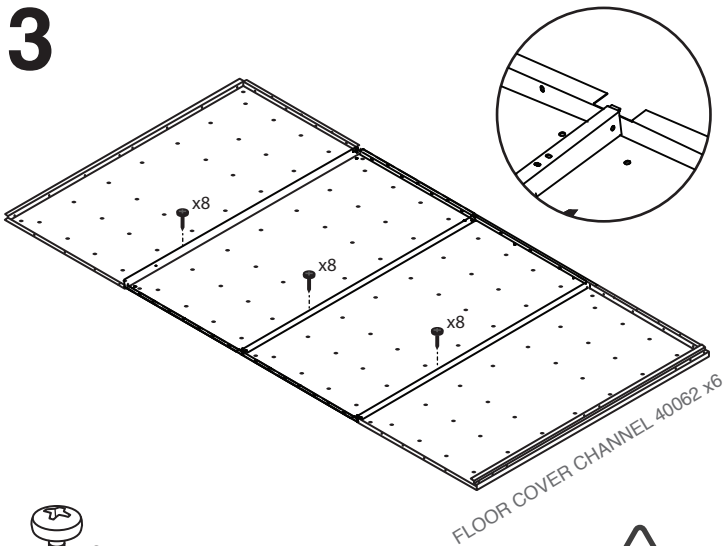


4

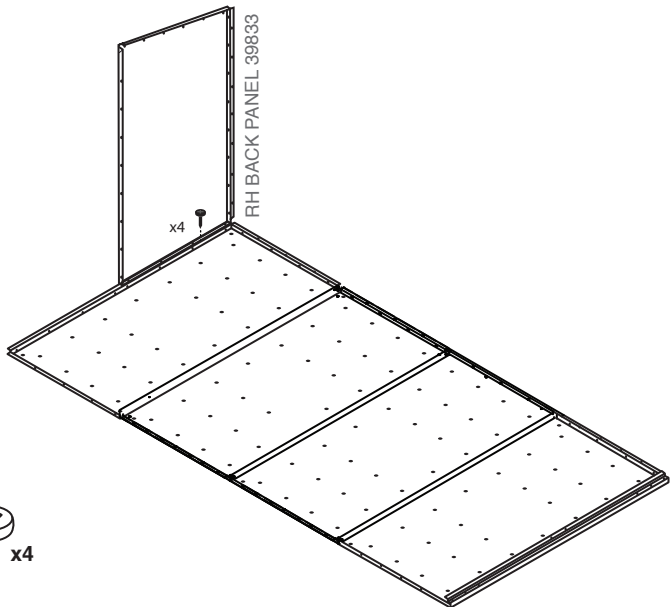







5

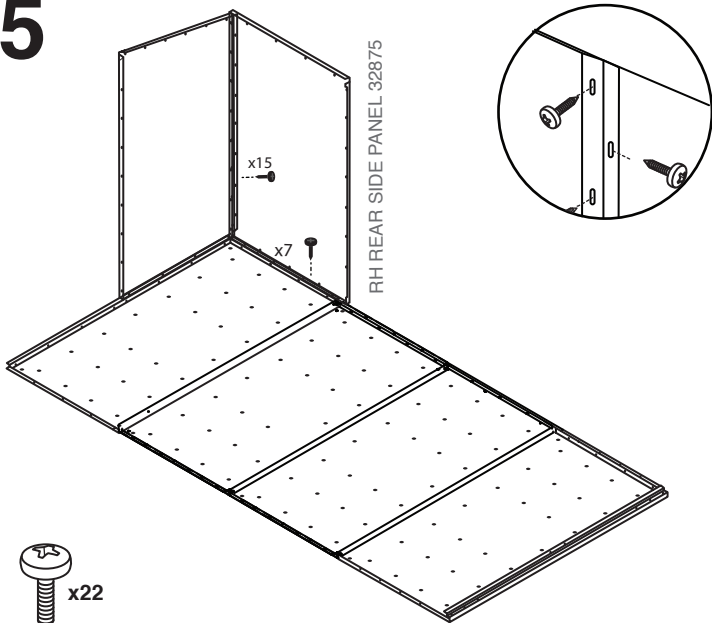

6

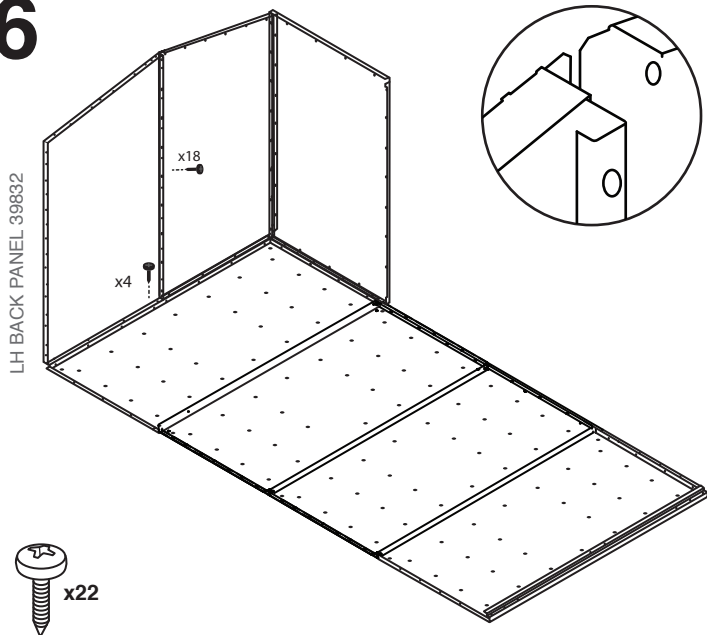


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

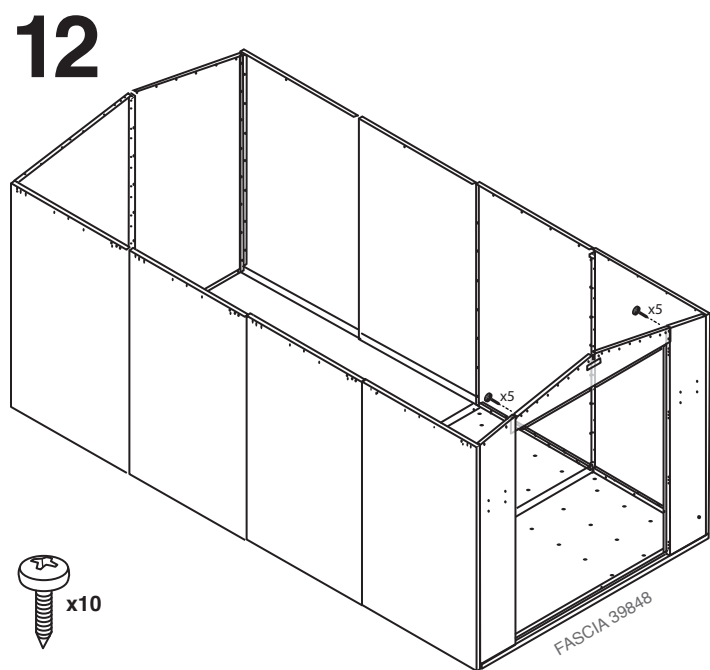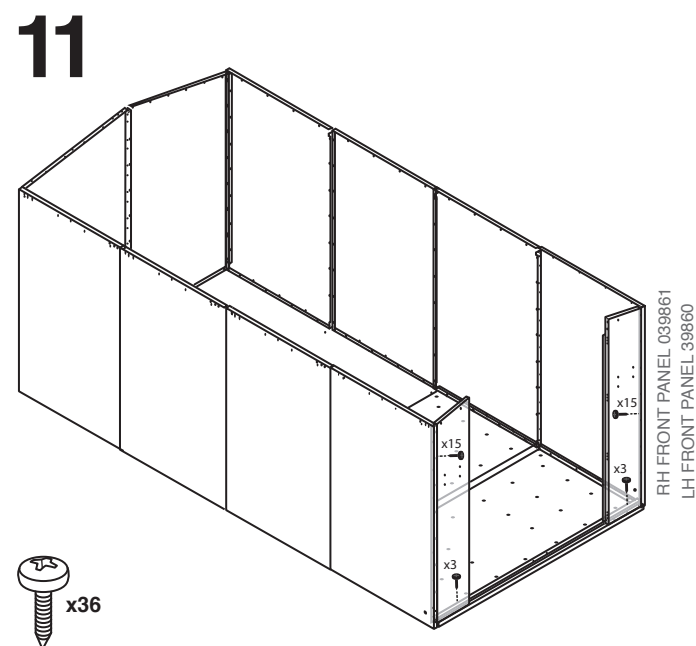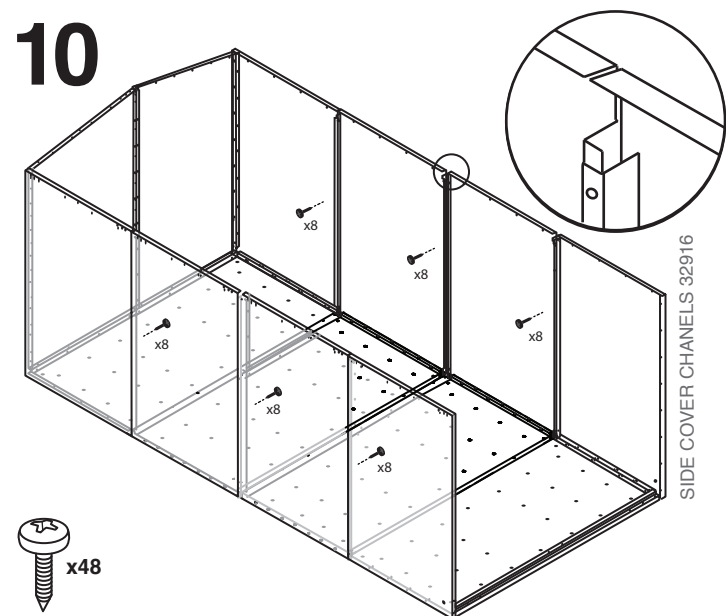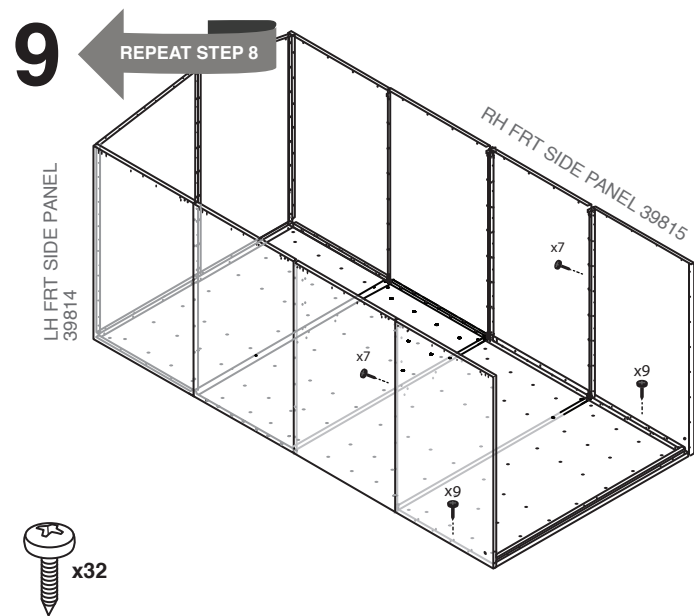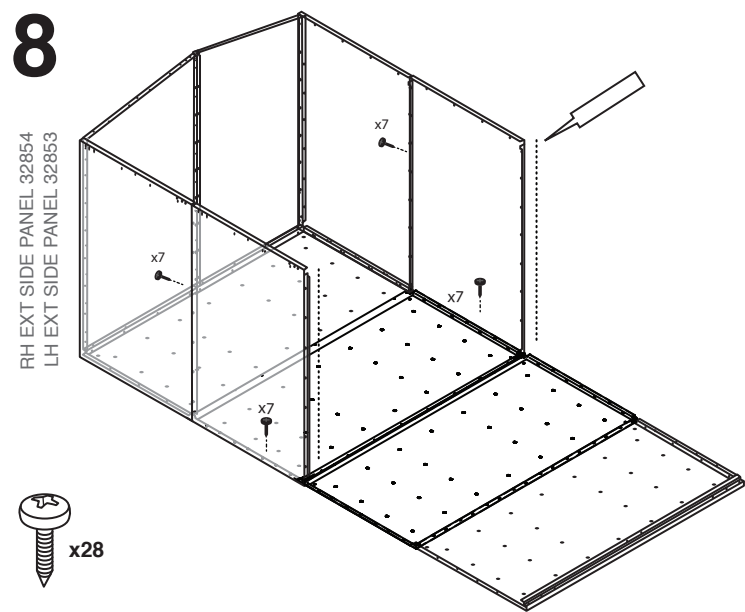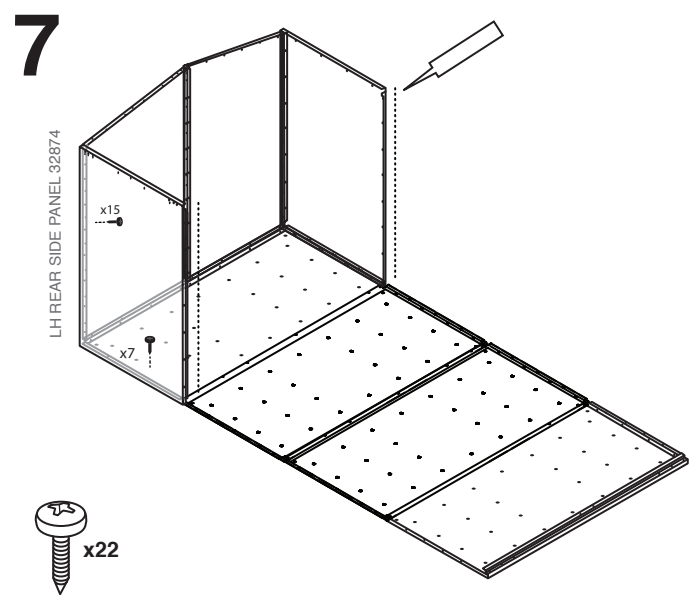


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


13

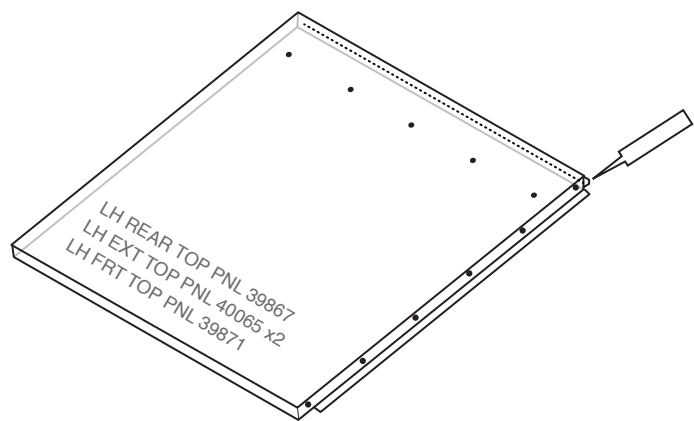


14

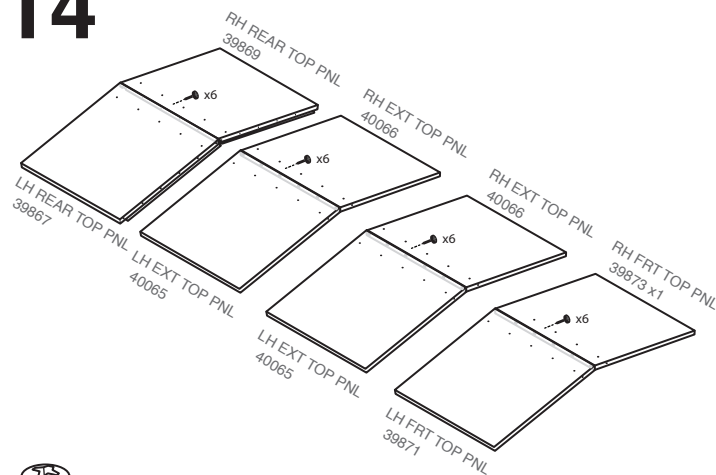


15

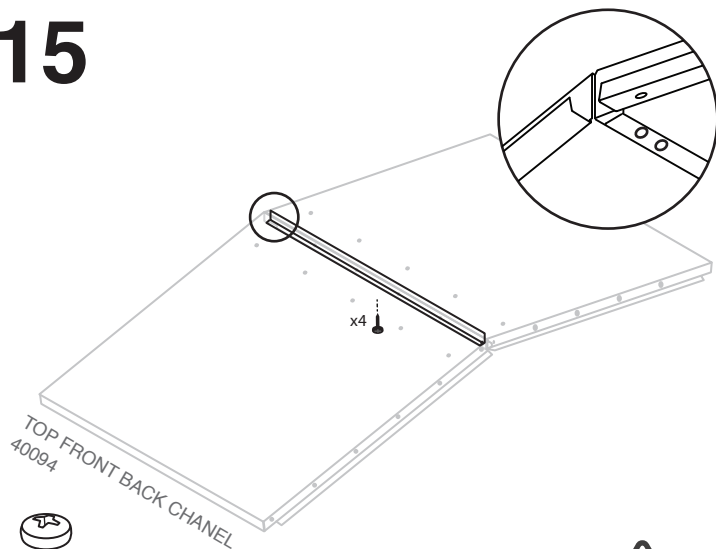



16

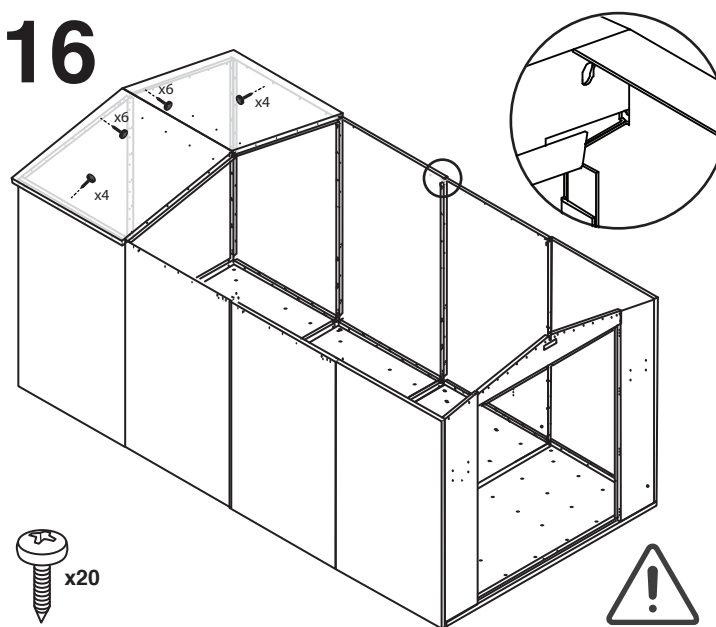

17

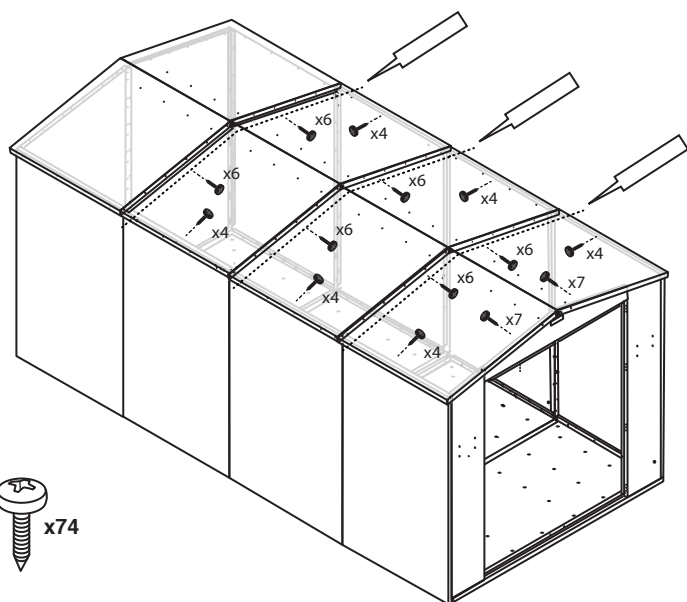


18

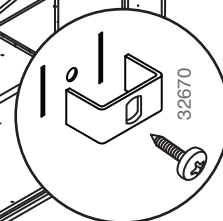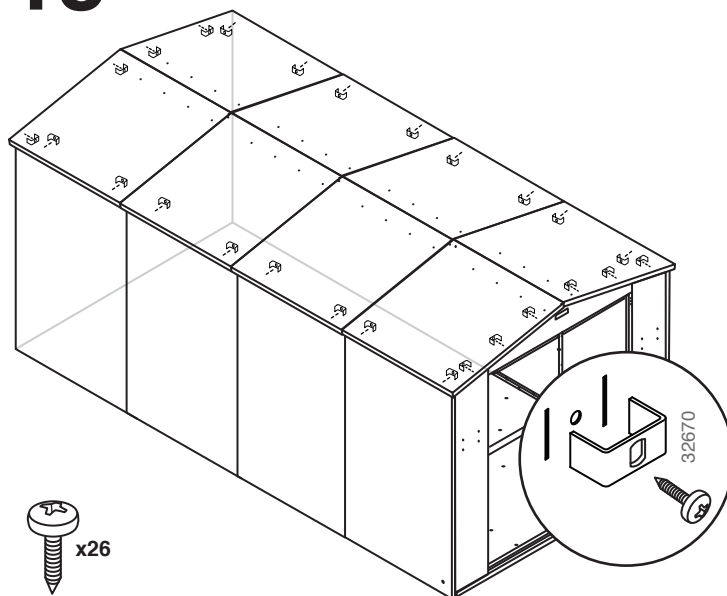


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


19

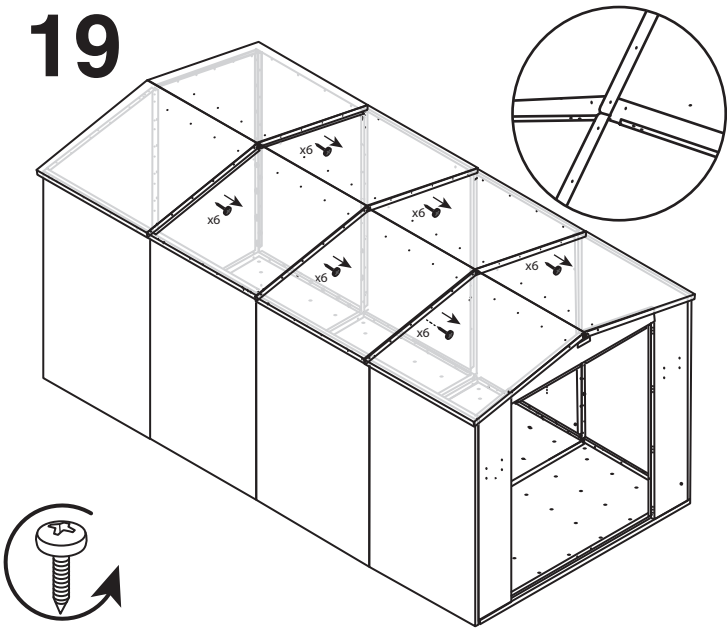


20

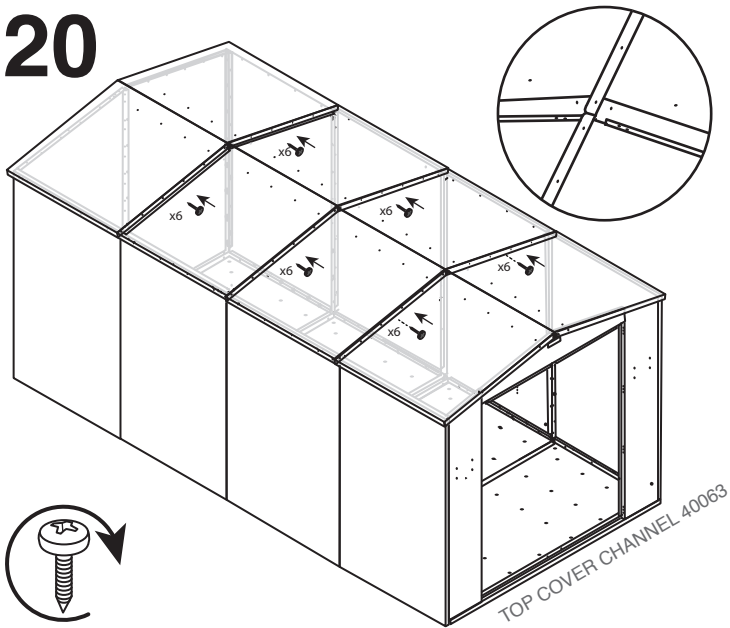


21

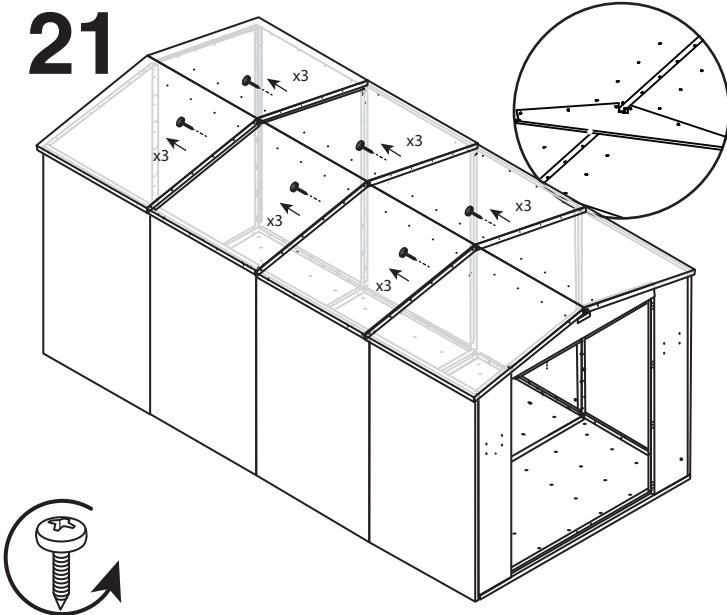


22

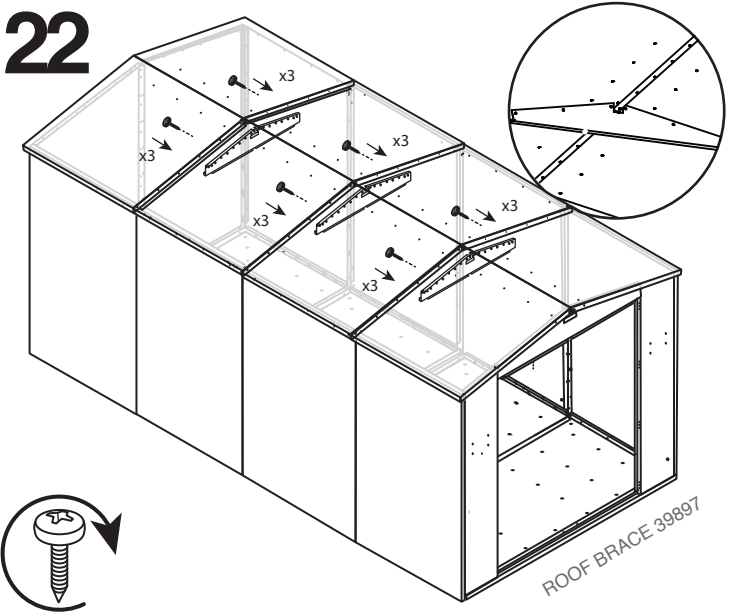


23

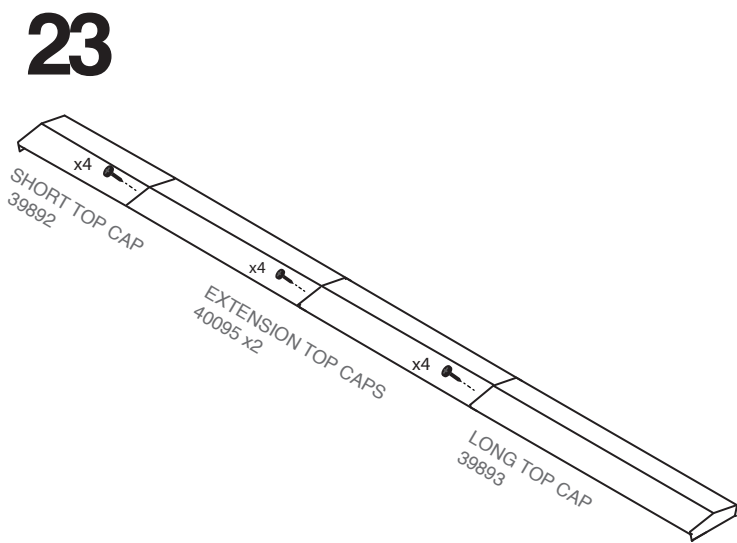


24! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

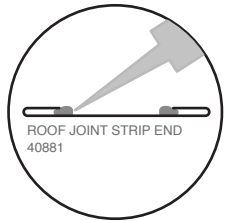


x12

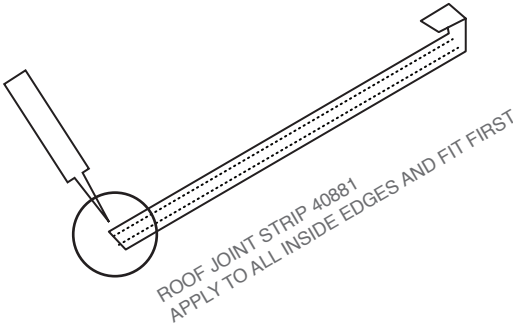


25

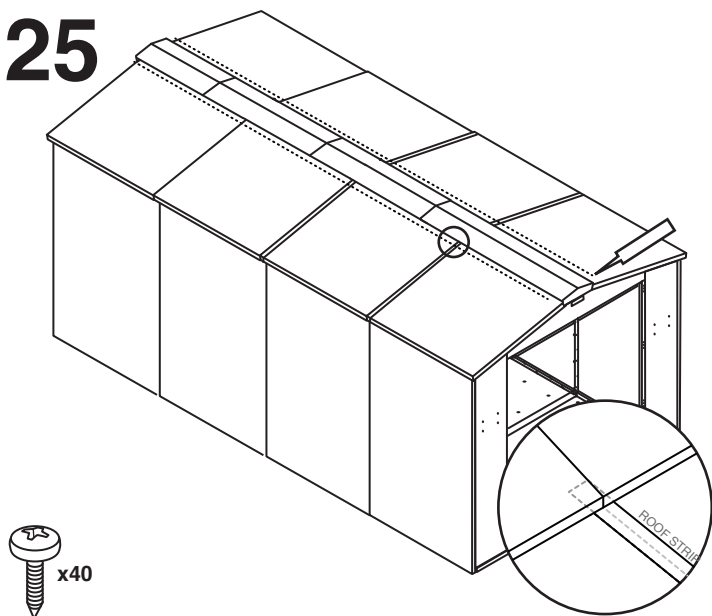

26

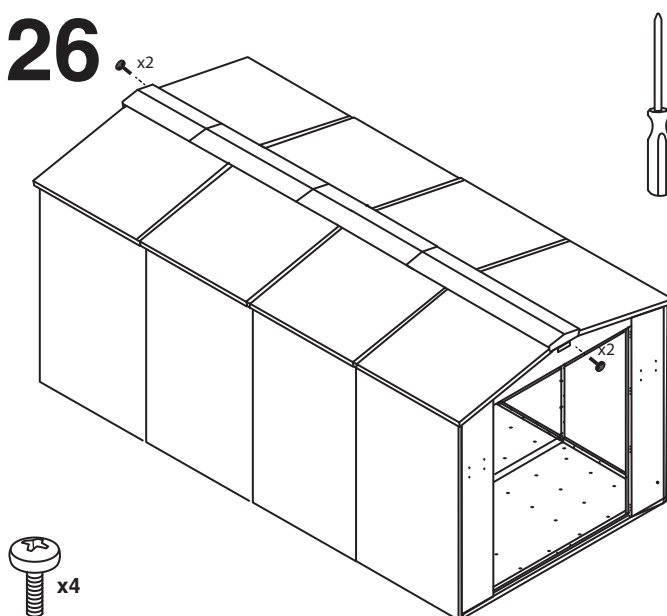

27

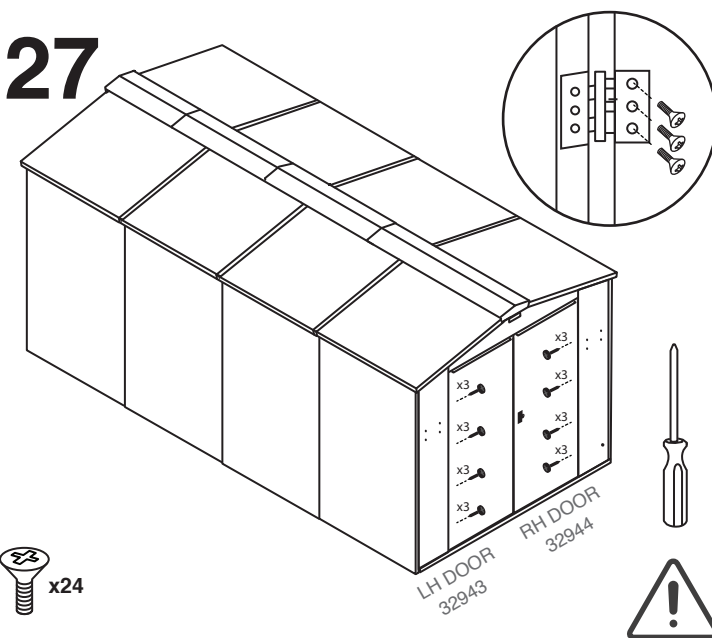


LH DOOR 32943
RH DOOR 32944



28!

LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPLAS
AS SUITABLE

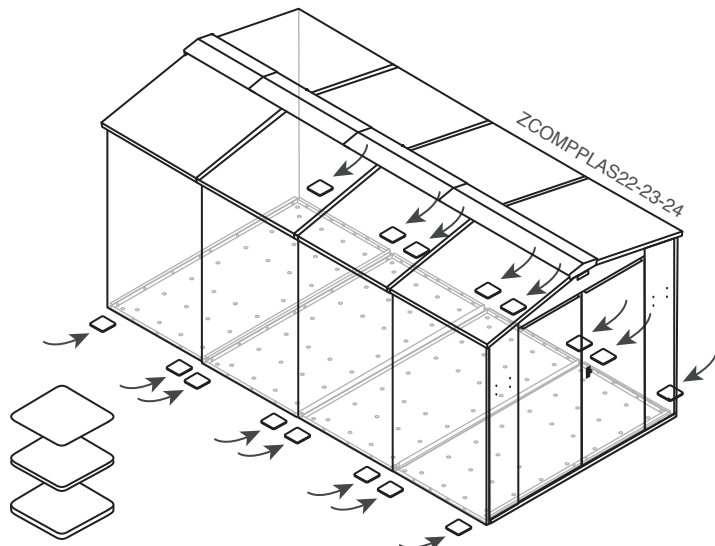

29

