

Asgard
storage for life


Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2410mm x 2640mm x 50mm.

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.









Warning: some panels may weigh over 20Kg. Beware of manual handling






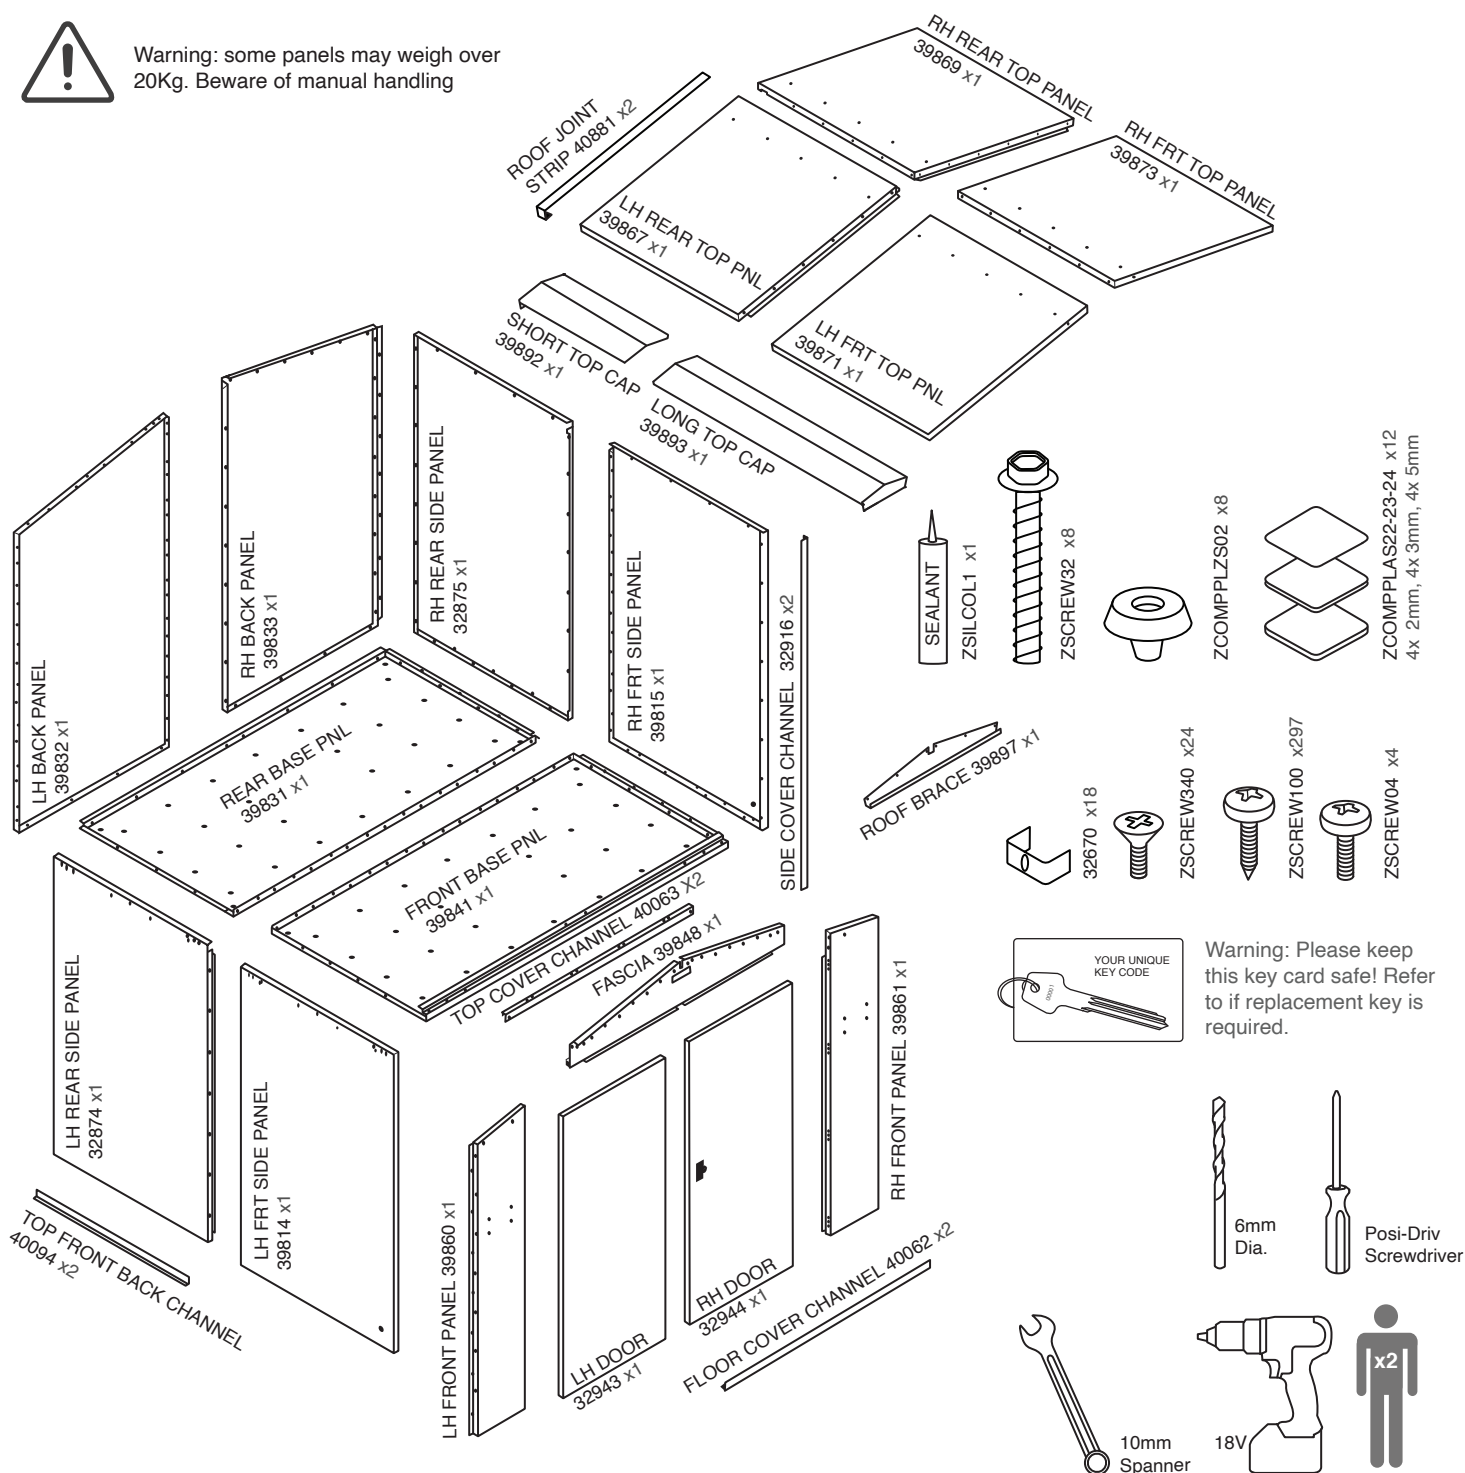


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

1! IF YOU HAVE AN OPTIONAL RAMP,
PLACE UNDERNEATH FRONT
BASE PANEL AT THIS STAGE

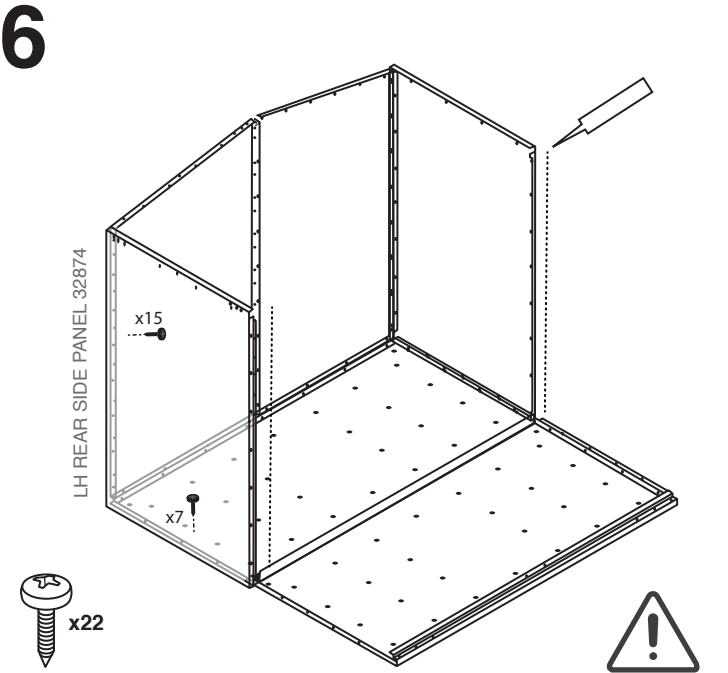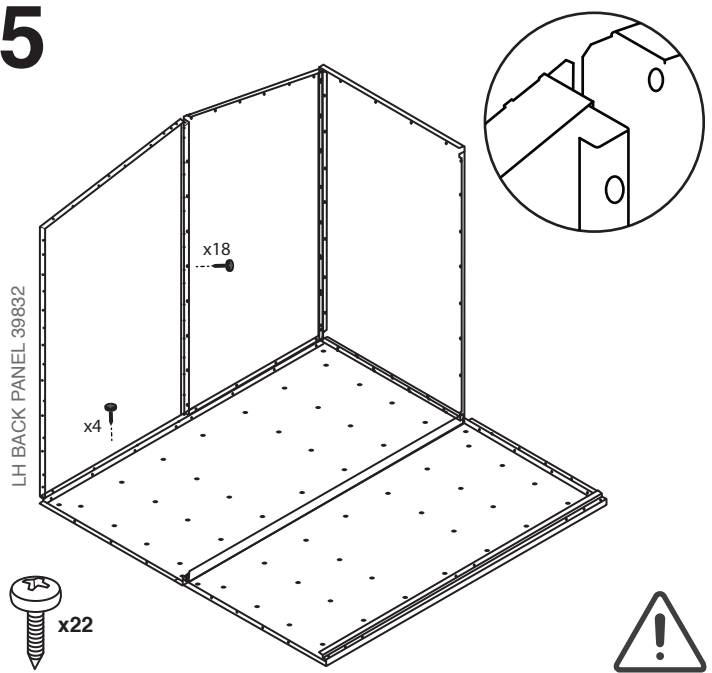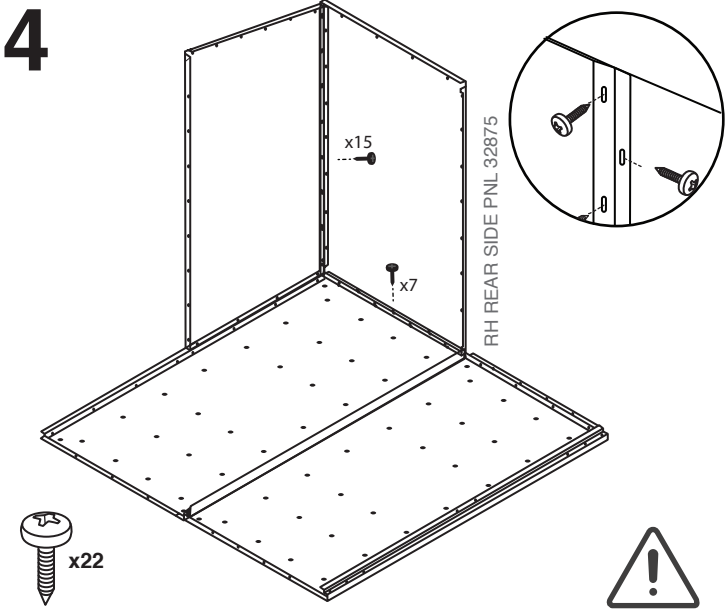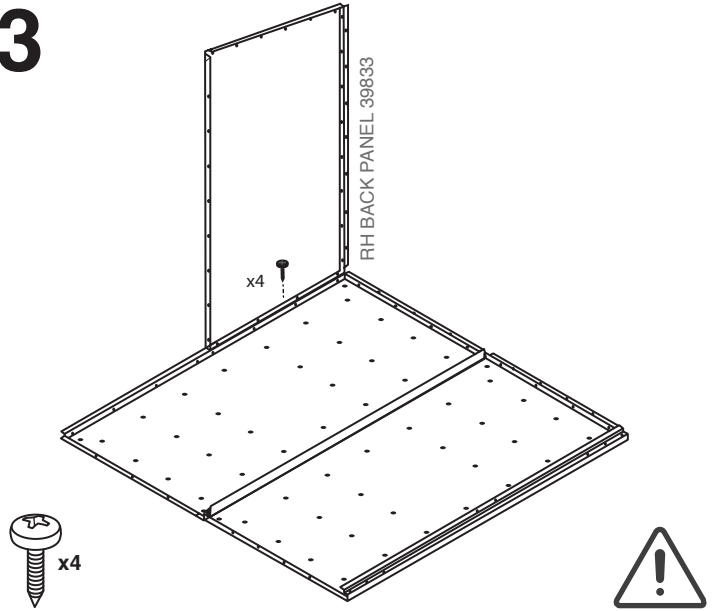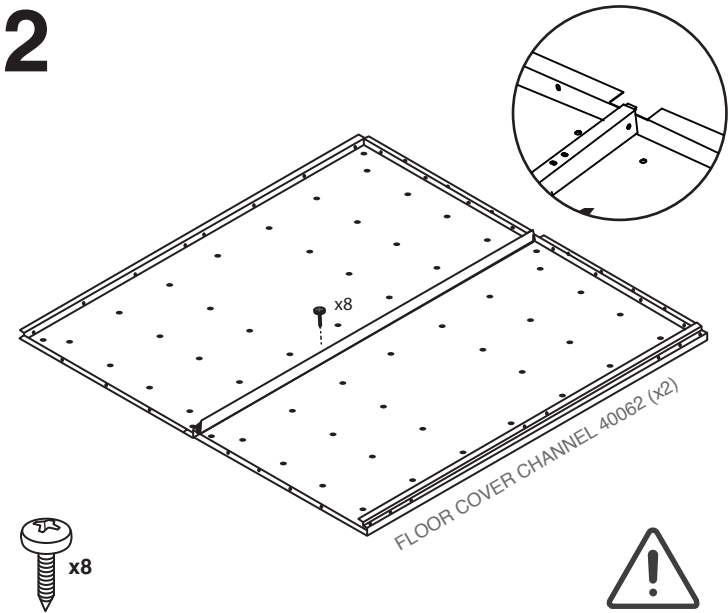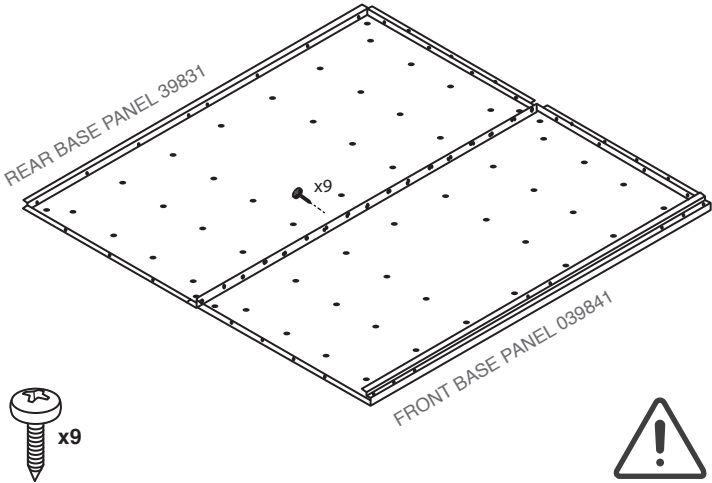


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

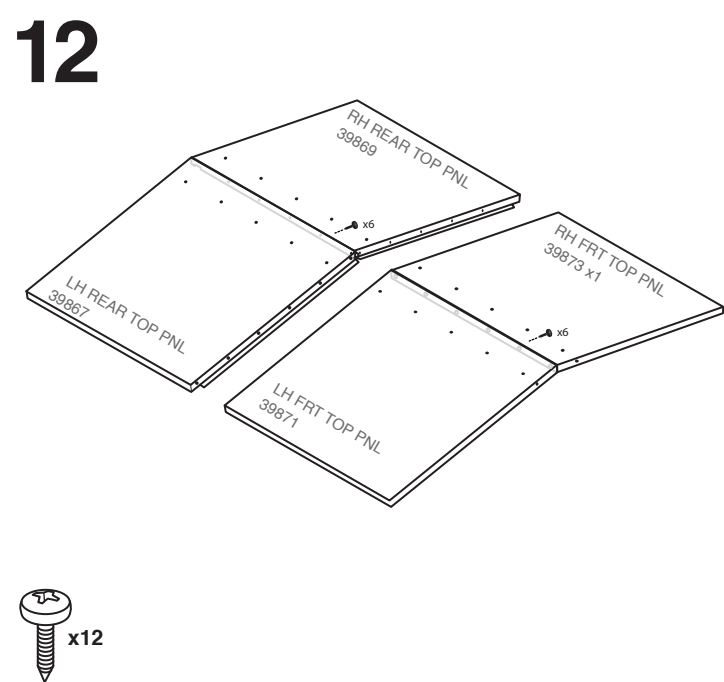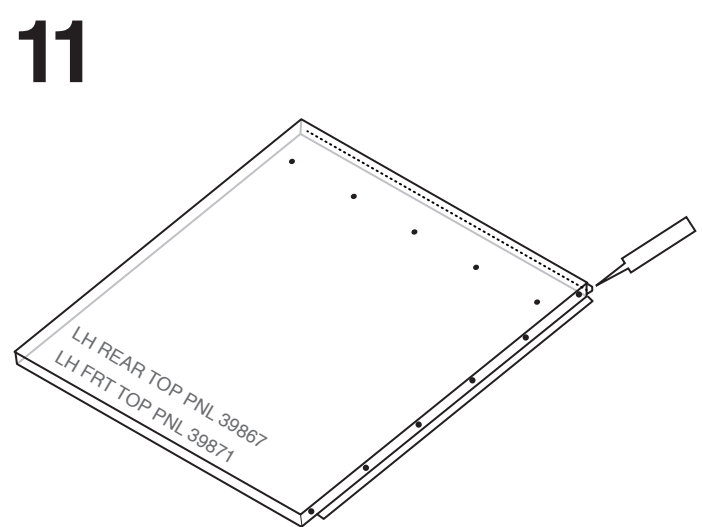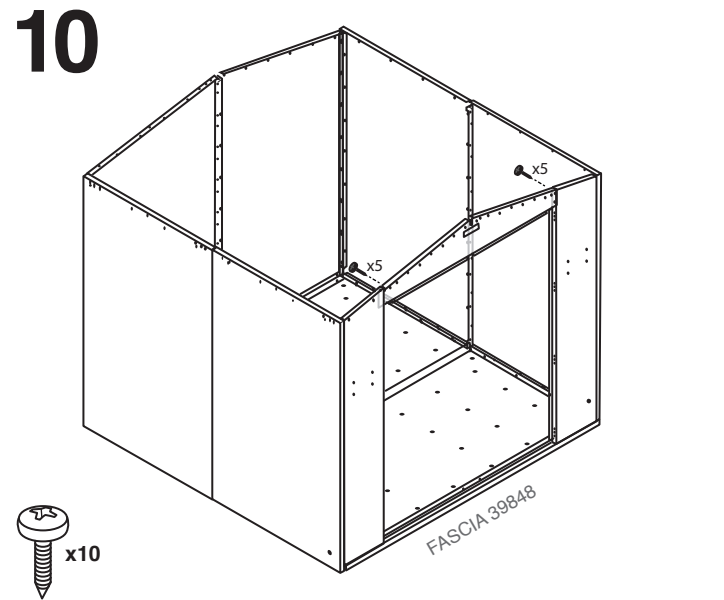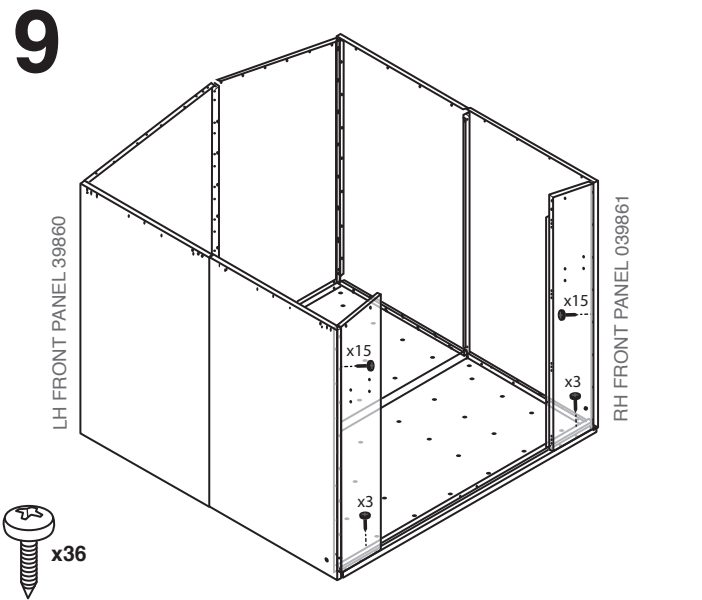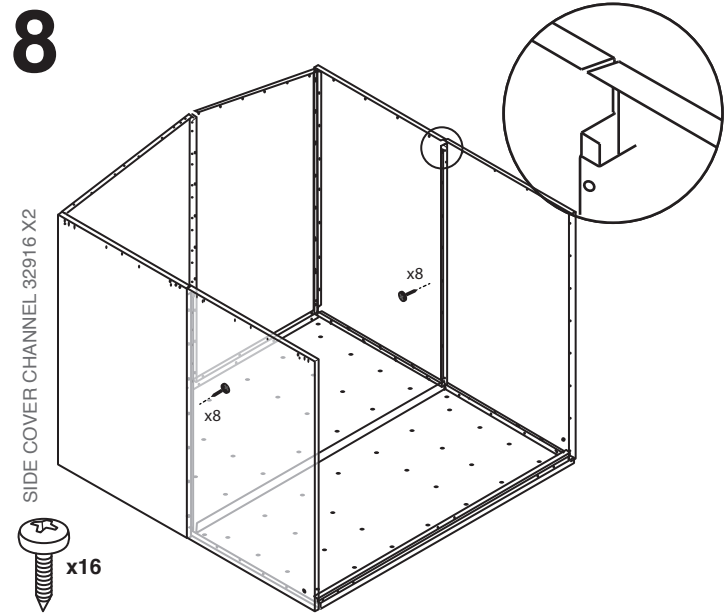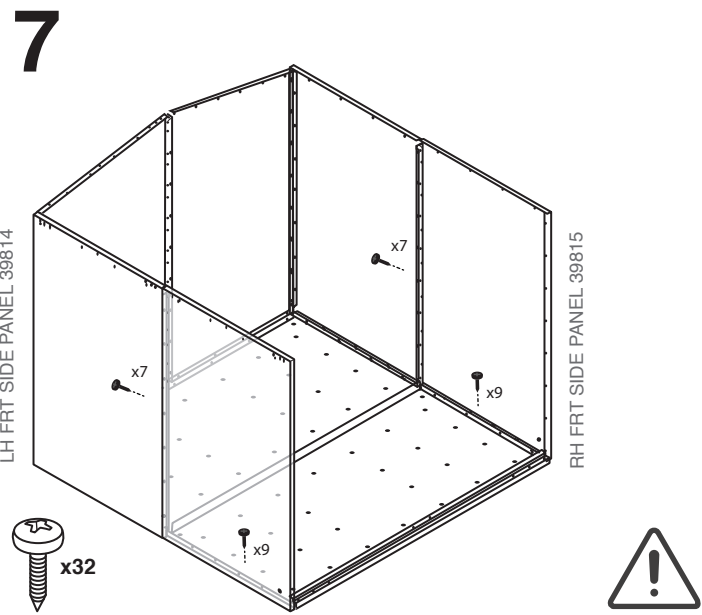


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


13

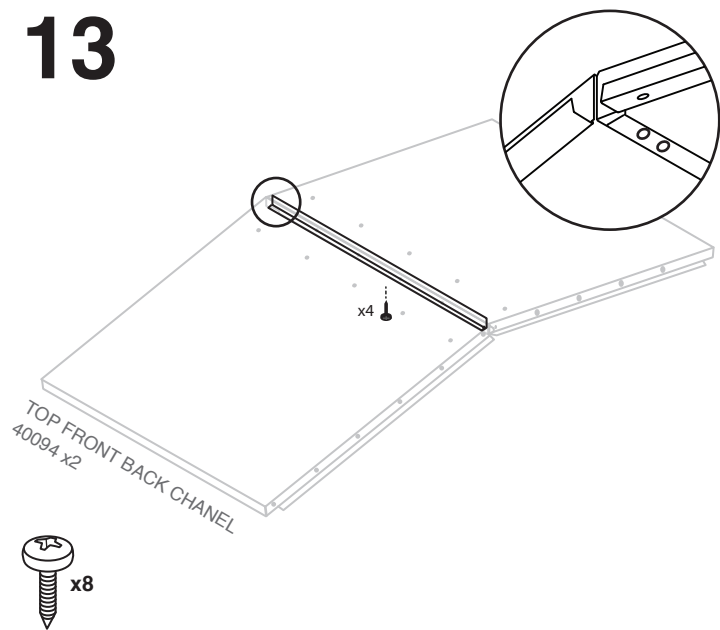


14

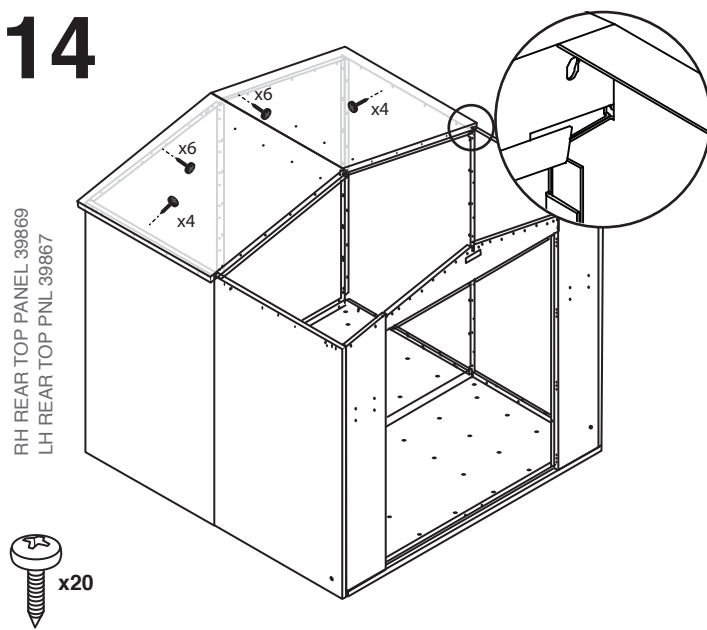


15

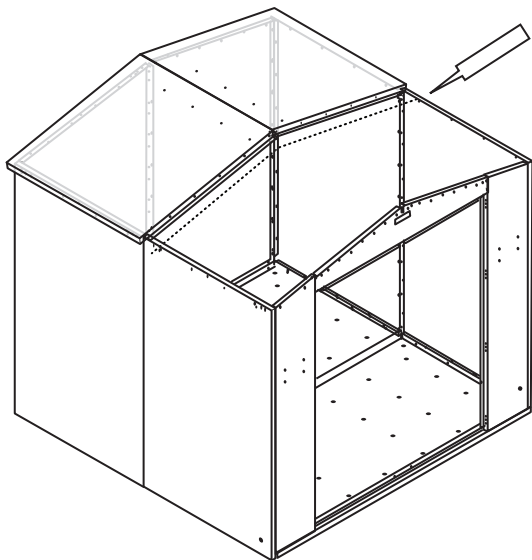


16

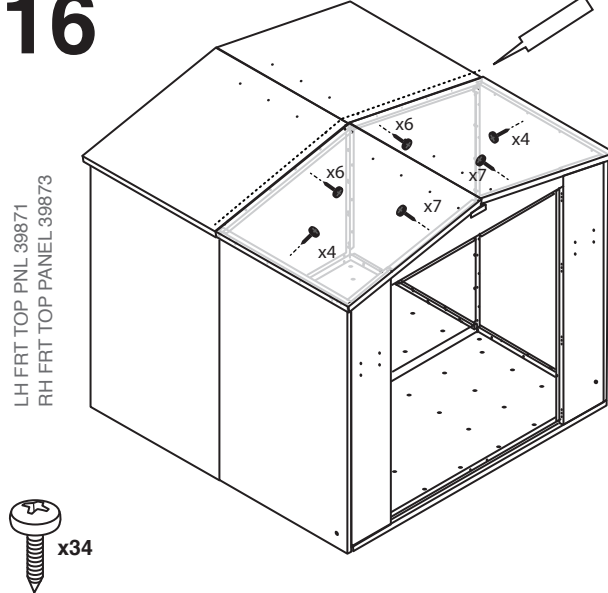

17

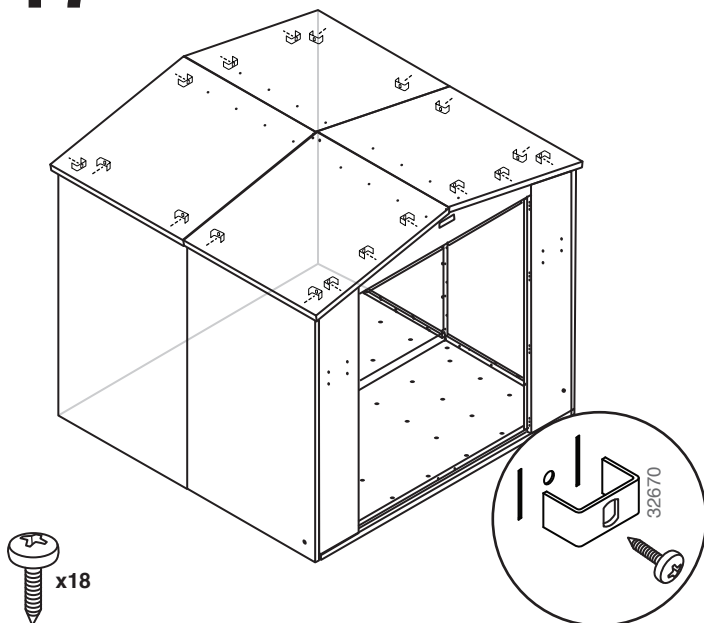


18

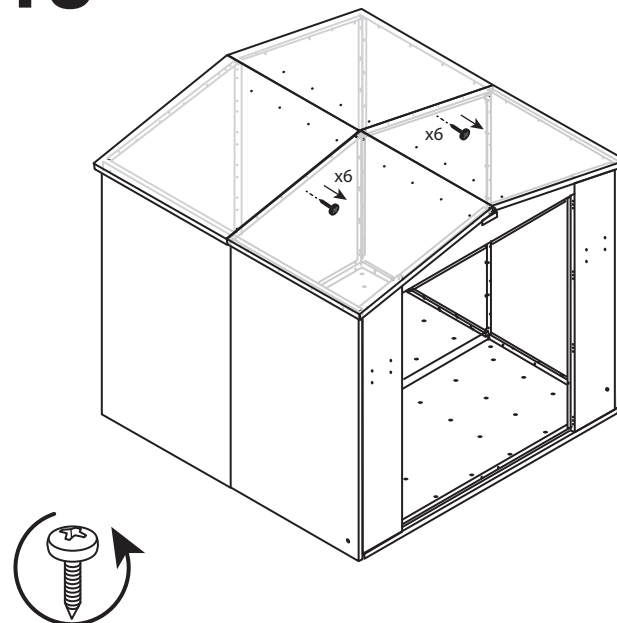


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


19

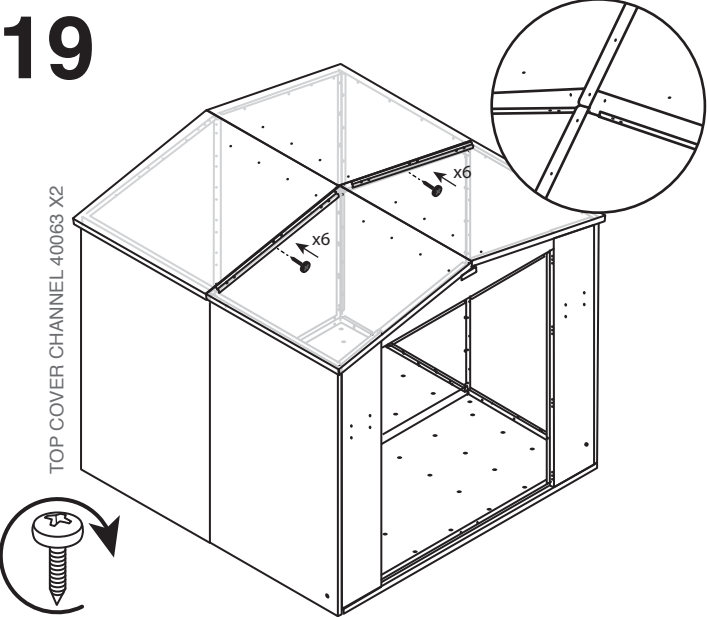


20

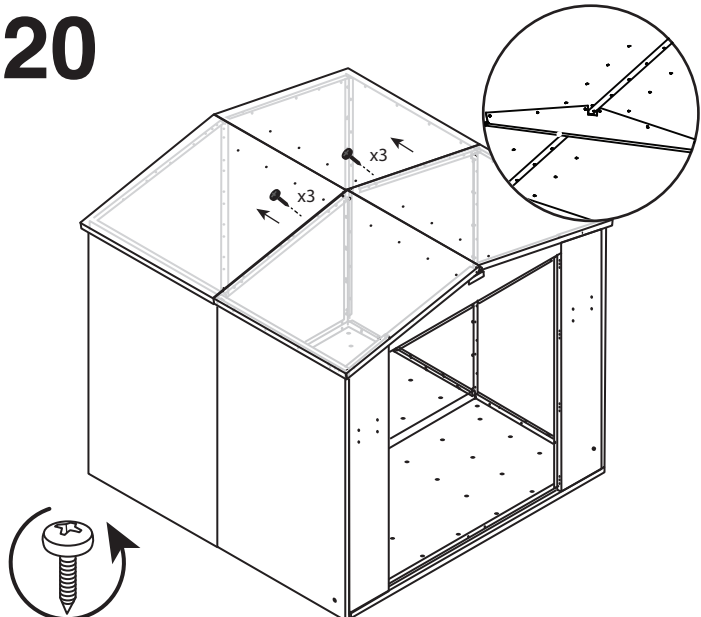


21

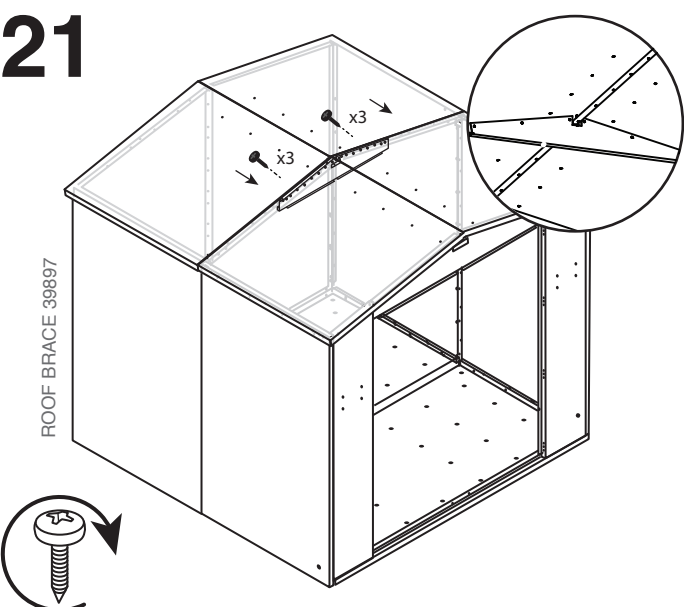


22

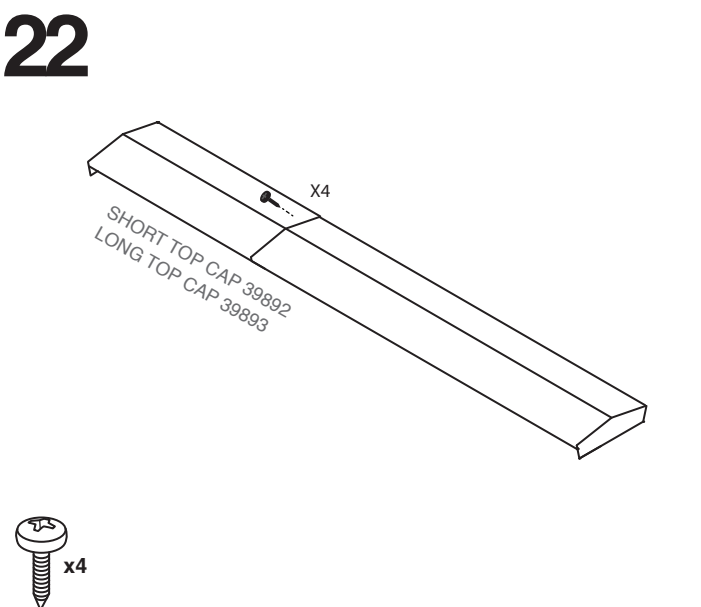


23! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

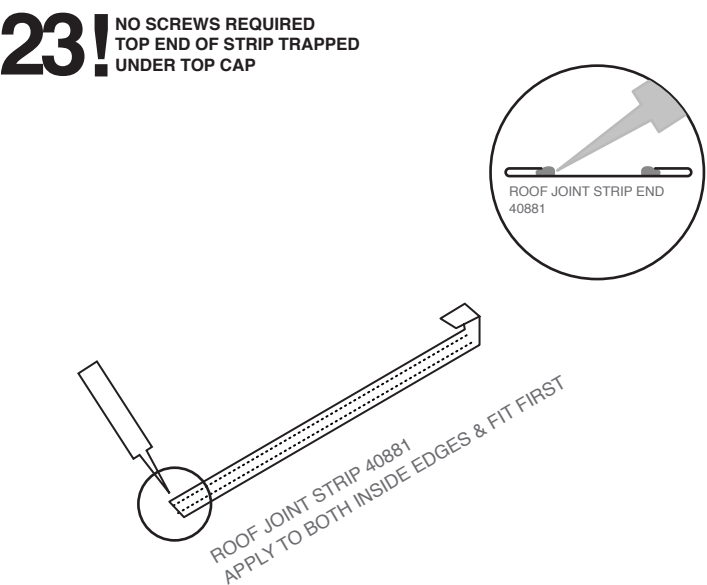


24

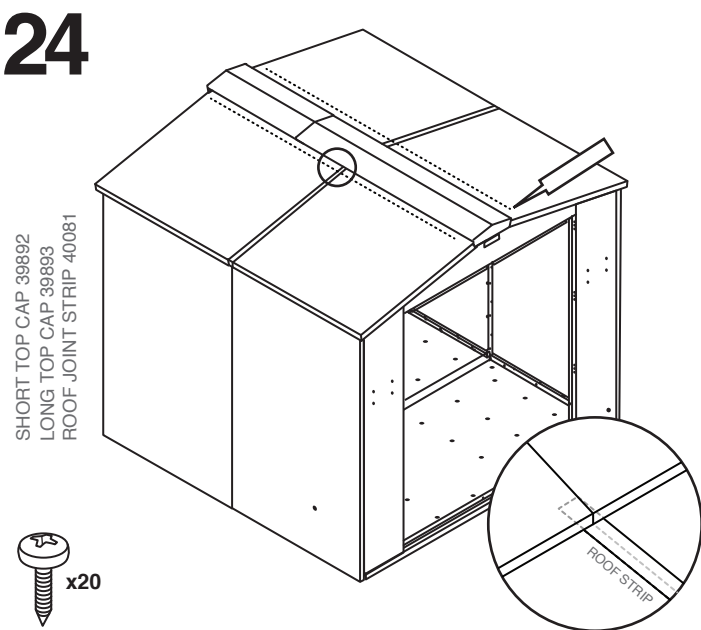

25

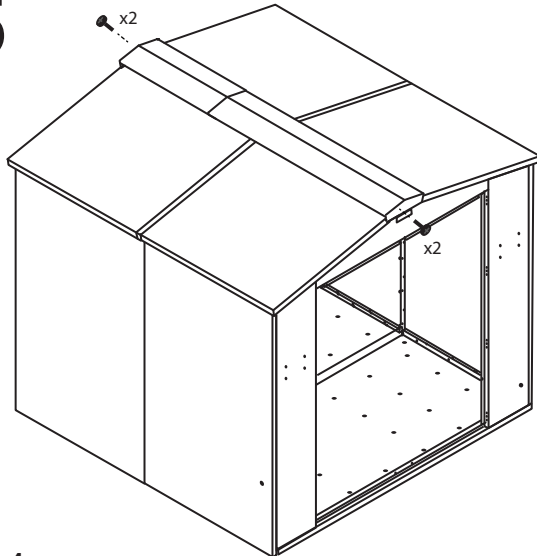


26

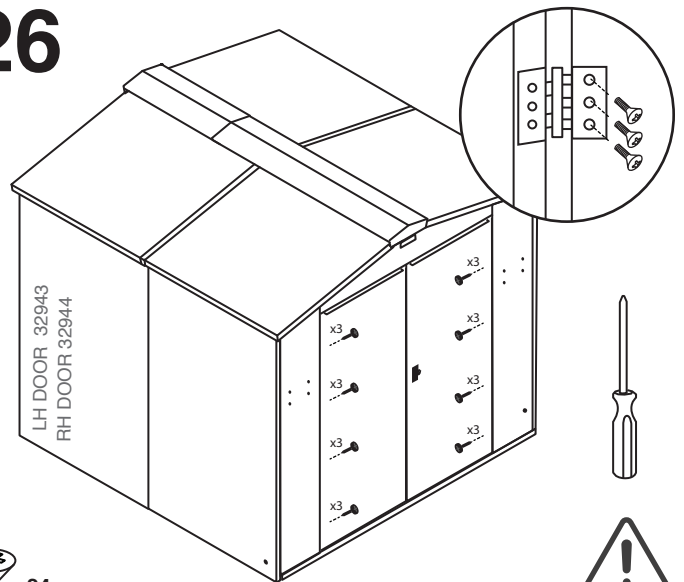

27!

LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPPLAS
AS SUITABLE

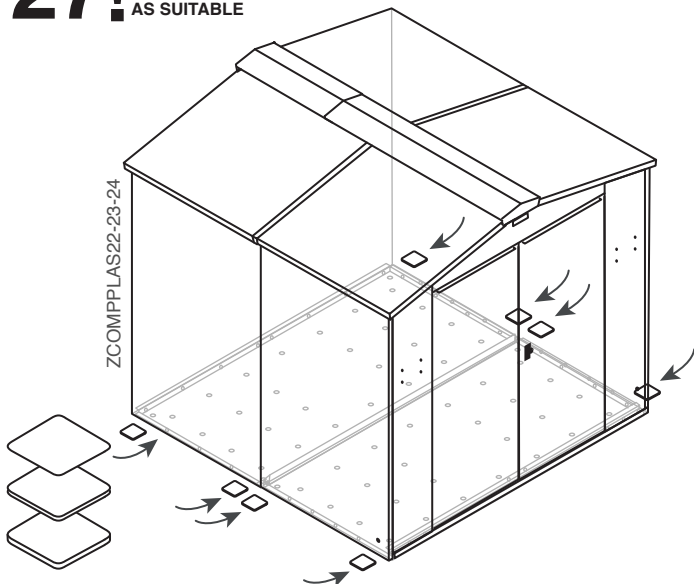

28

