
GLADIATOR

BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2410mm x 2640mm x 50mm.

LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor the unit in to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). **If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to block the fixing holes from underneath.** Please note, the product must be bolted down to comply with LPS1175.

TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.

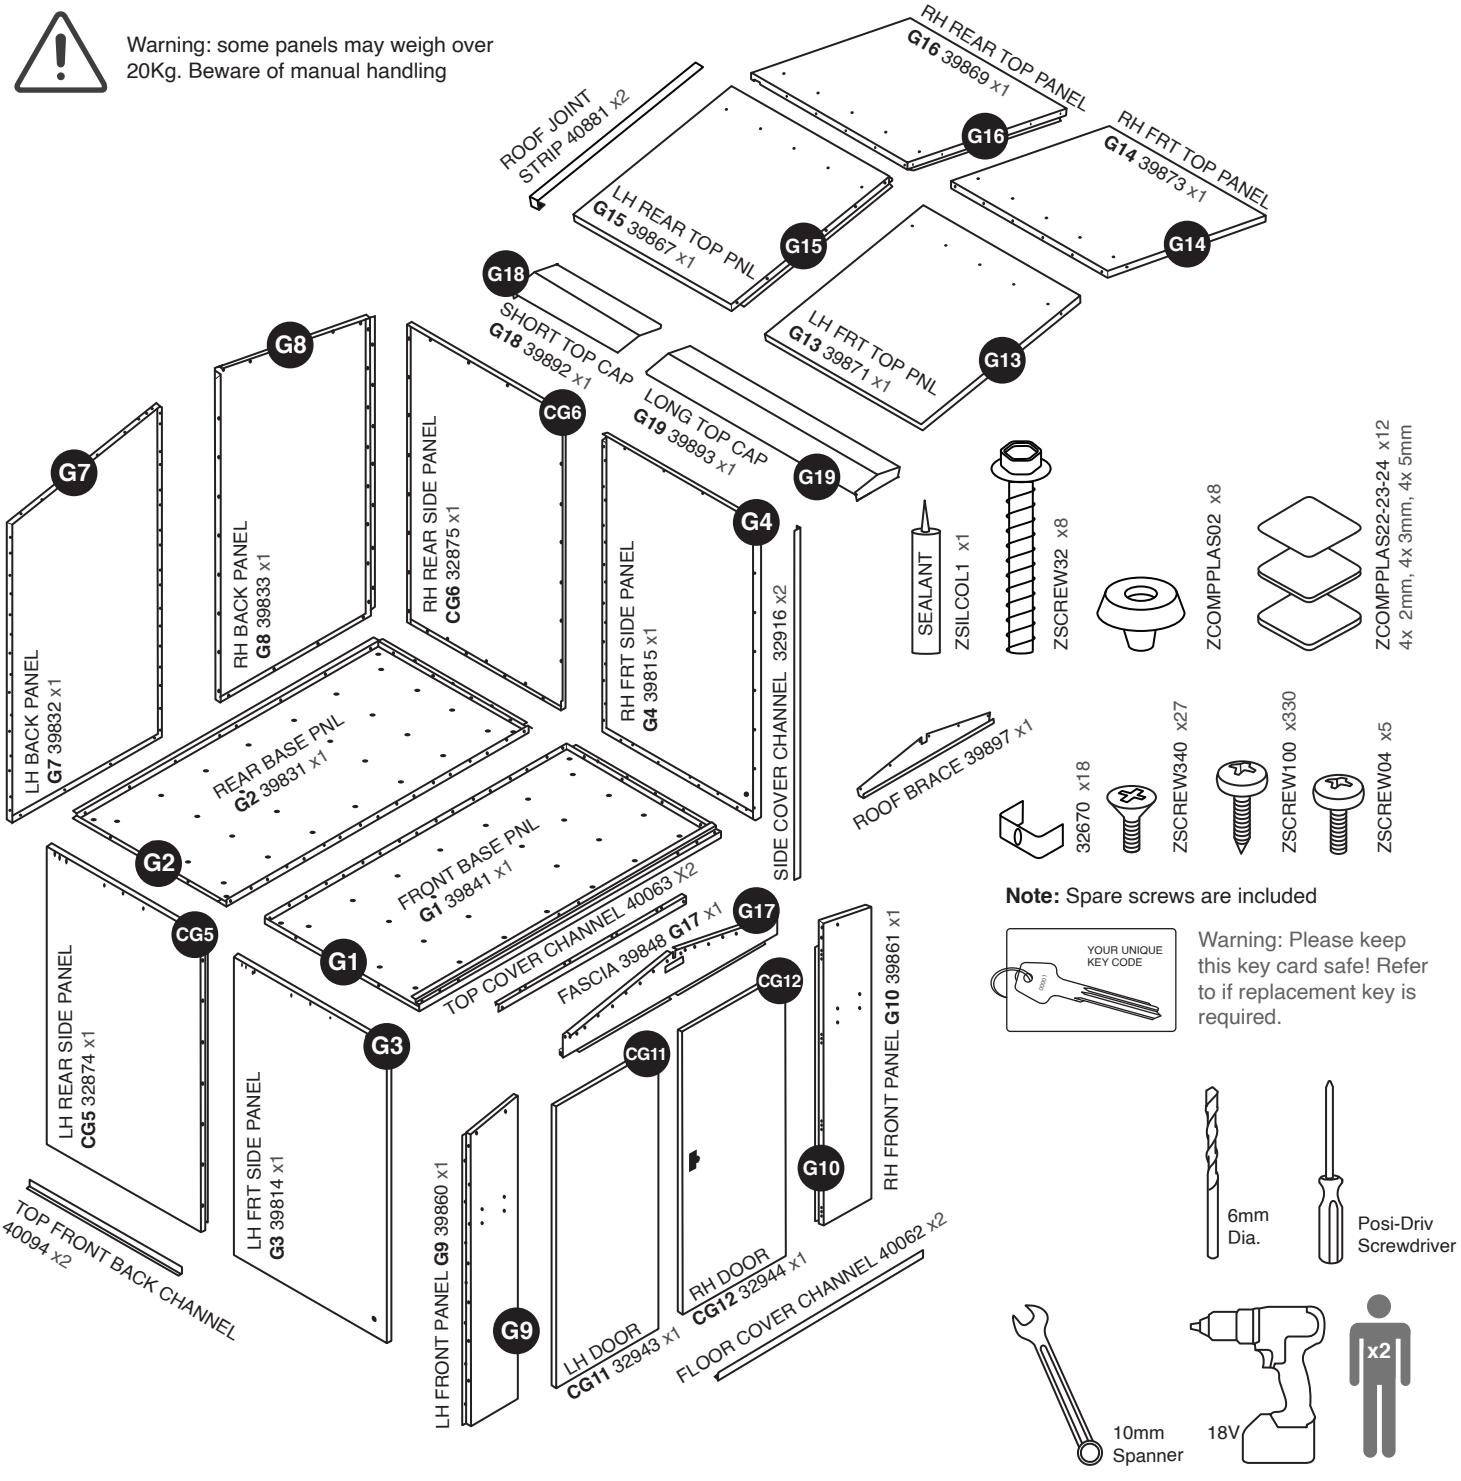


For maintenance instructions of this product visit www.asgardsss.co.uk

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1!

IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

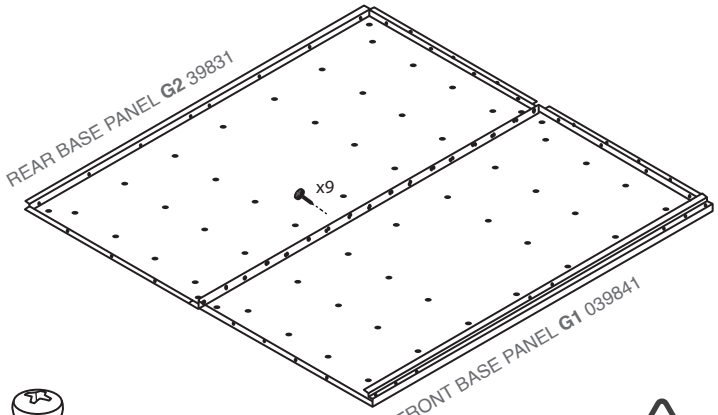


x9

2

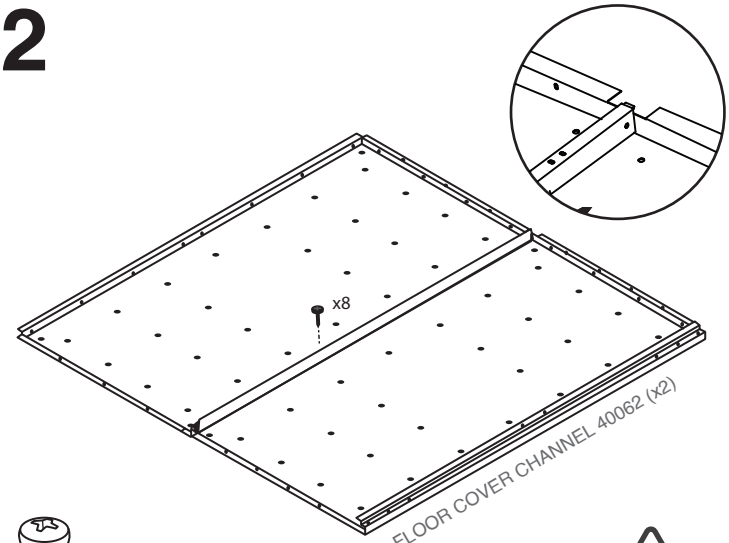


x8

3

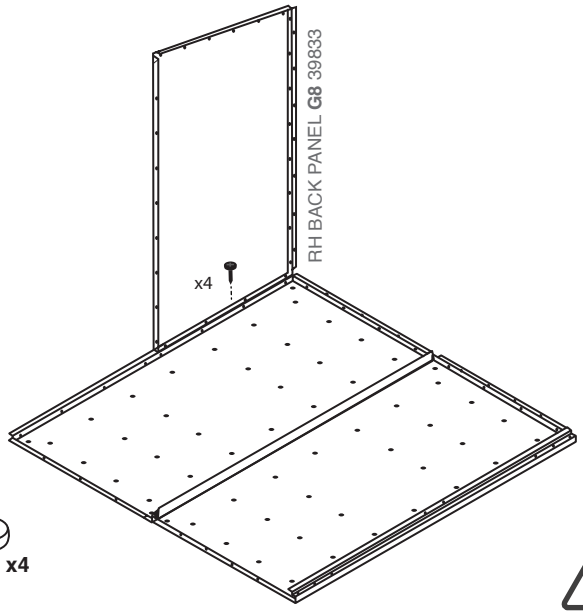


x4

4

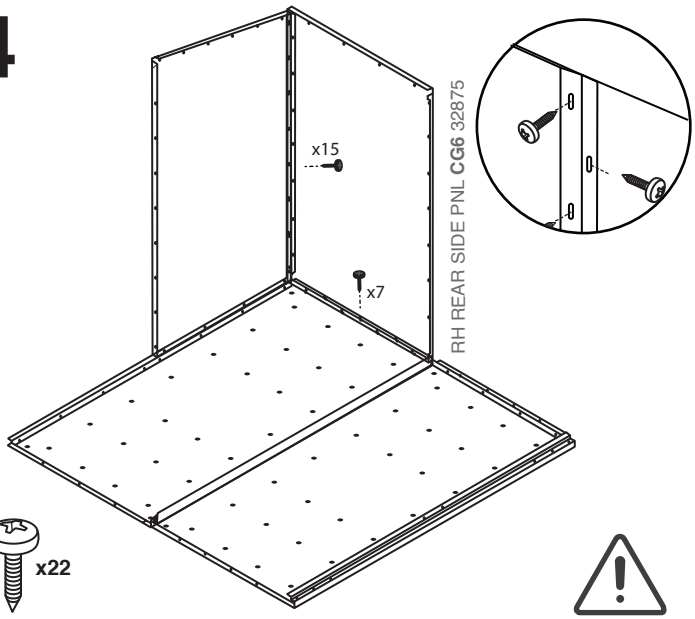


x22

5

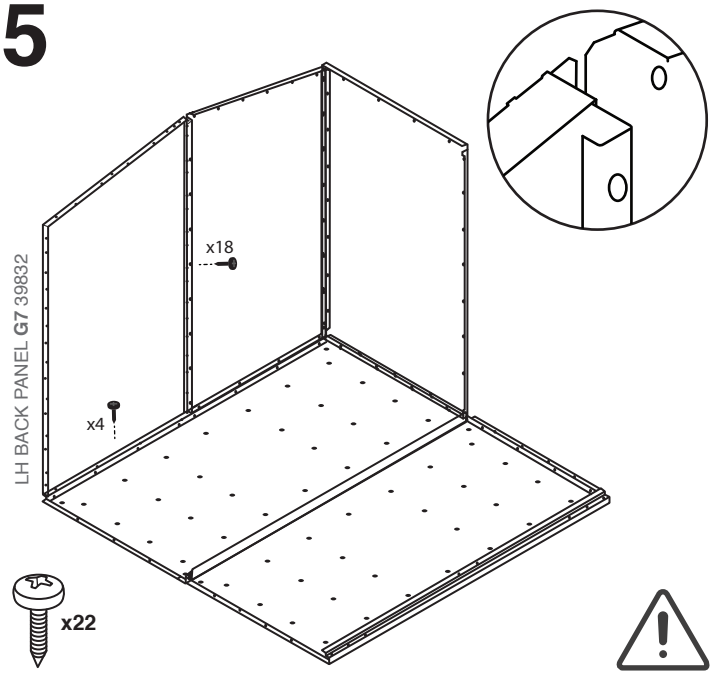

x22


6

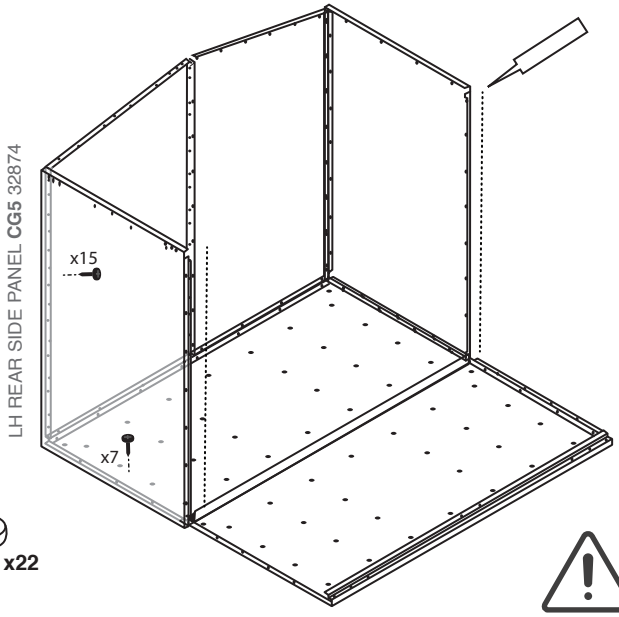


x22

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


7

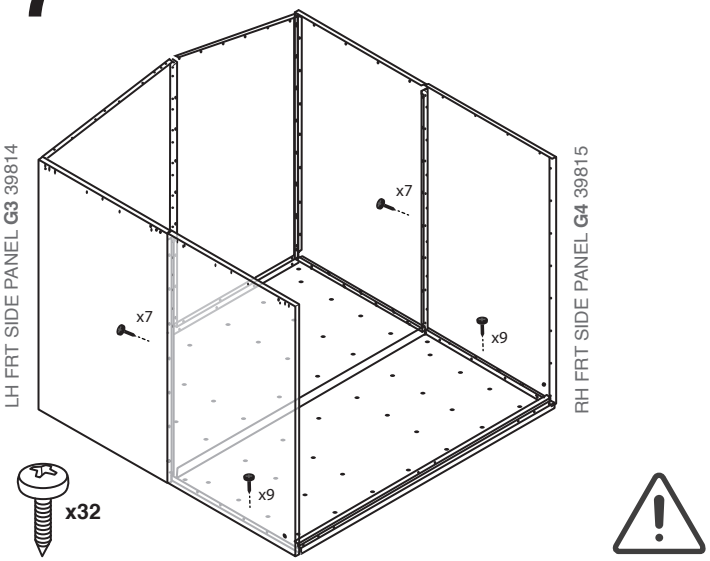


8

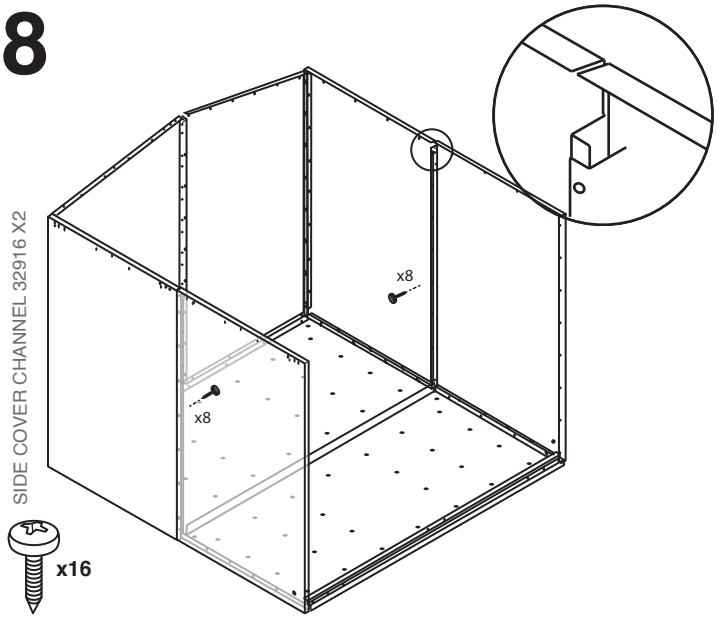


9

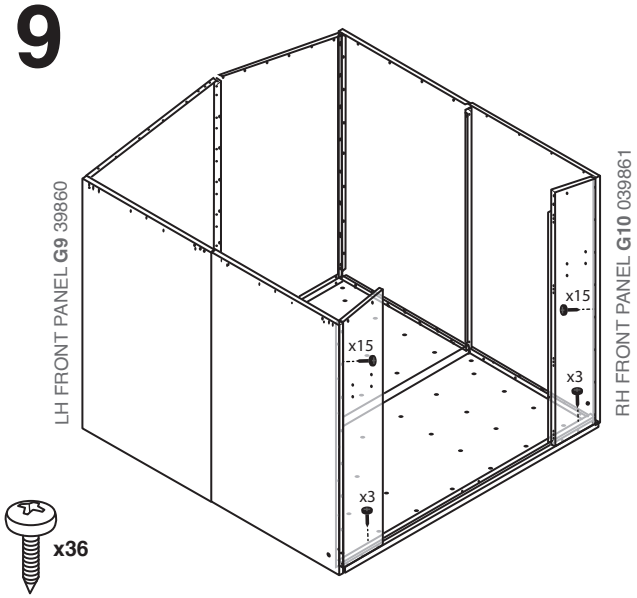


10

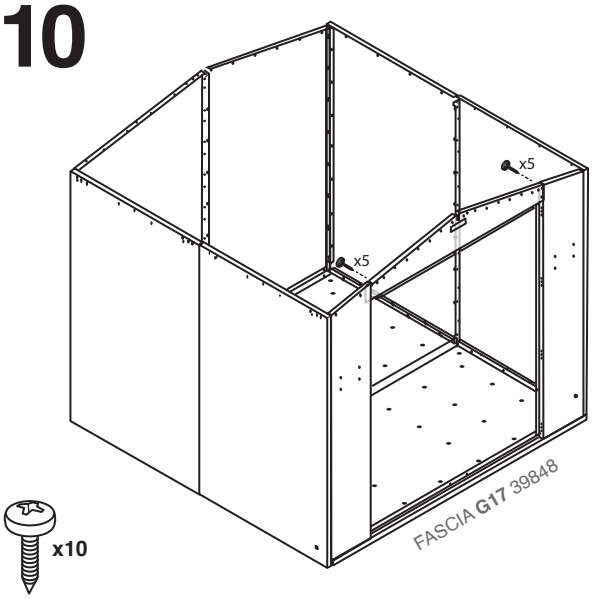

11

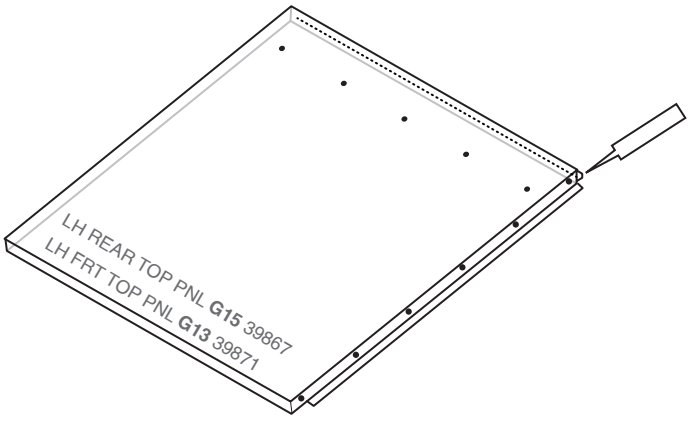


12

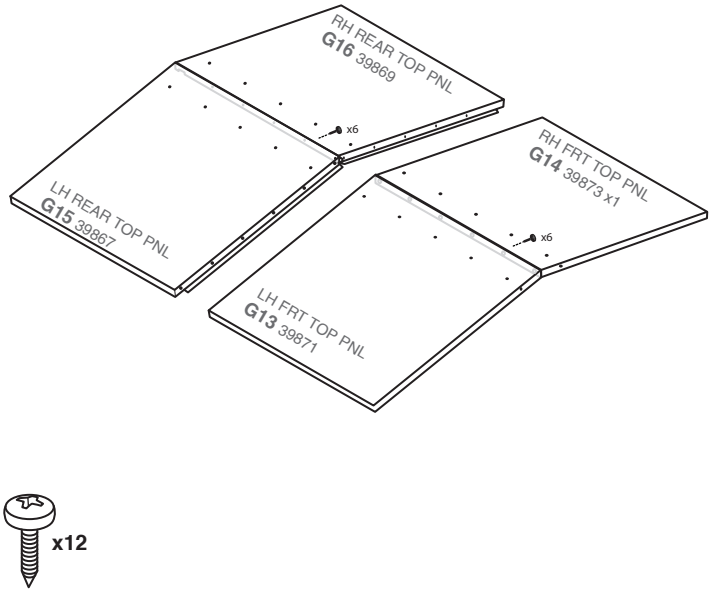


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

13

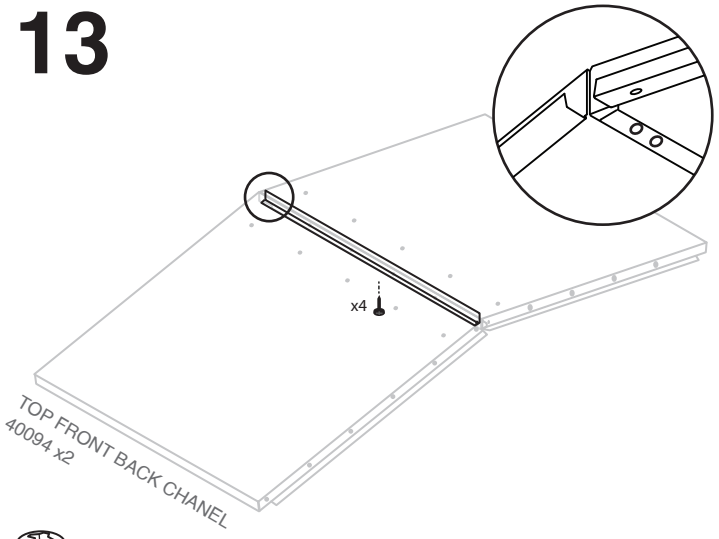

x8


14

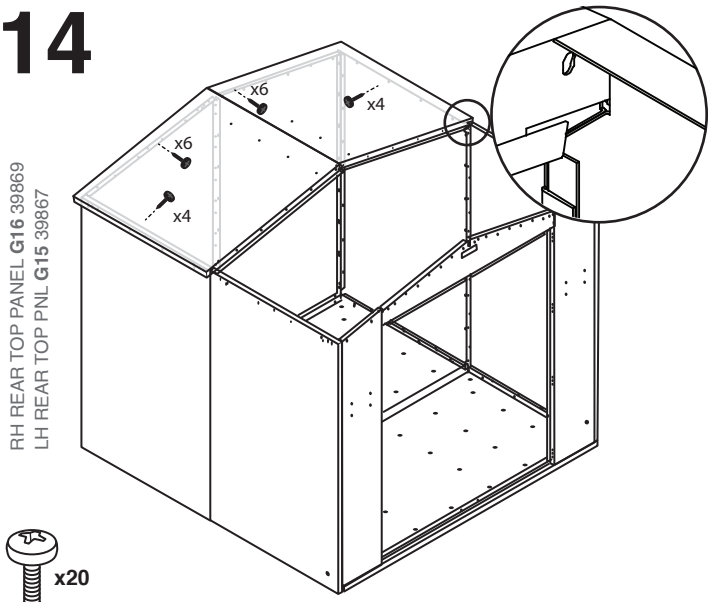


RH REAR TOP PANEL **G16** 39869
LH REAR TOP PNL **G15** 39867

x20

15

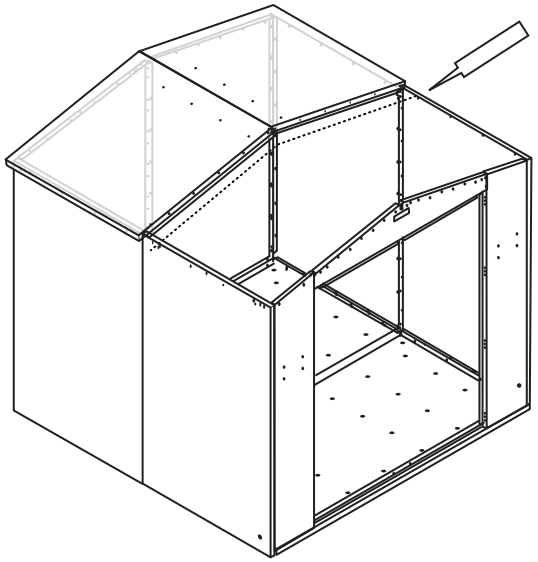


16

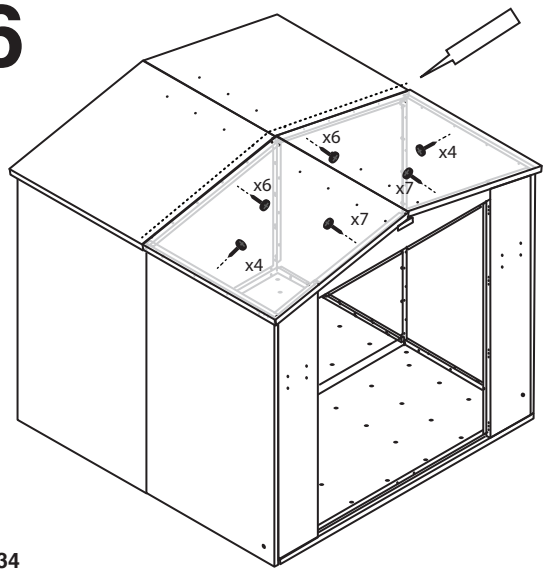

LH FRT TOP PNL **G13** 39871
RH FRT TOP PANEL **G14** 39873


x34

17

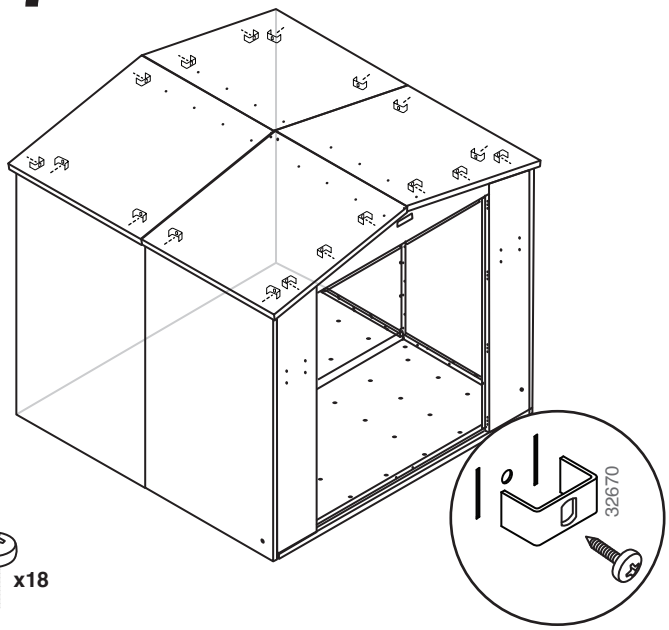


x18

18

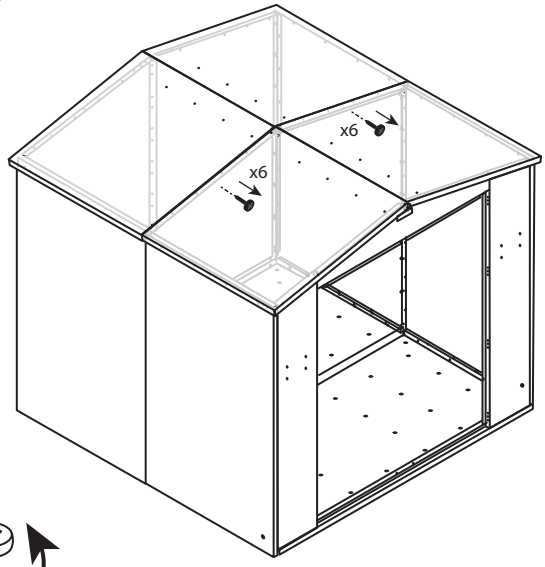


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


19

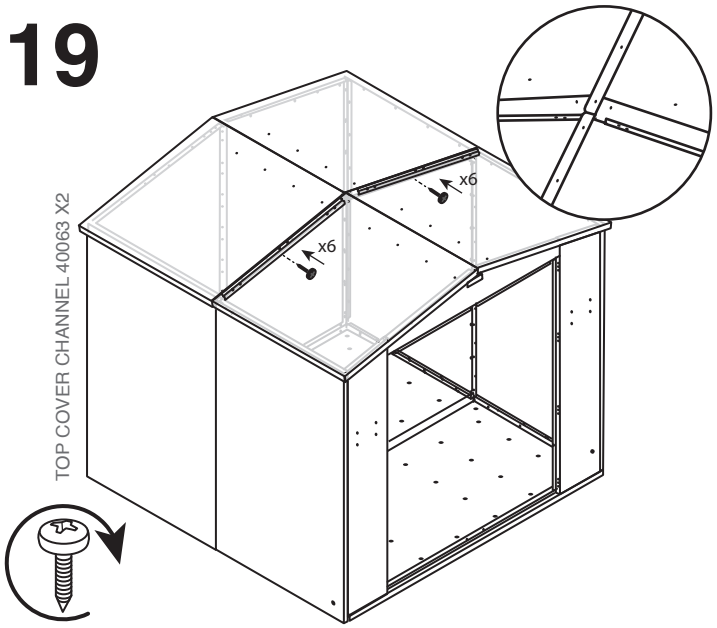


20

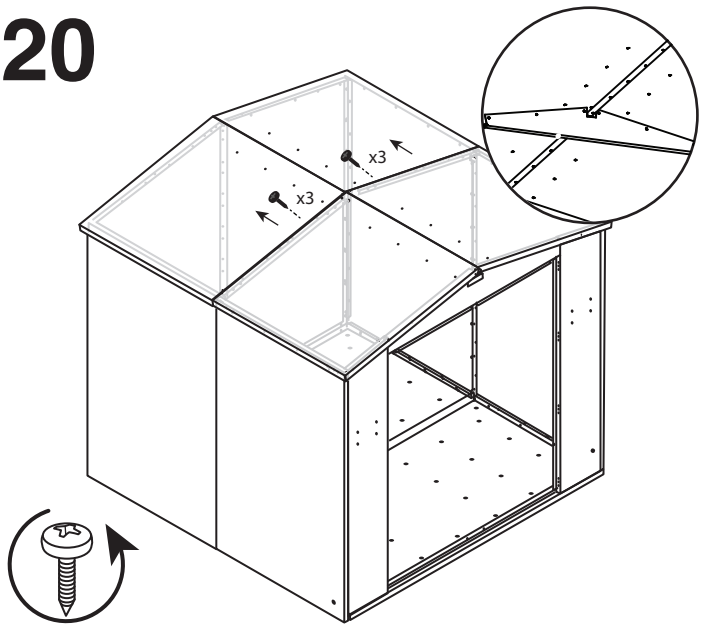

21

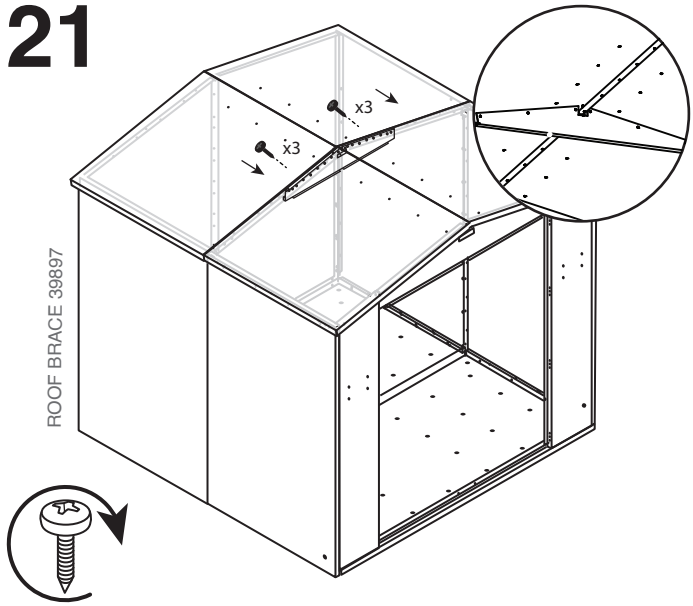


22

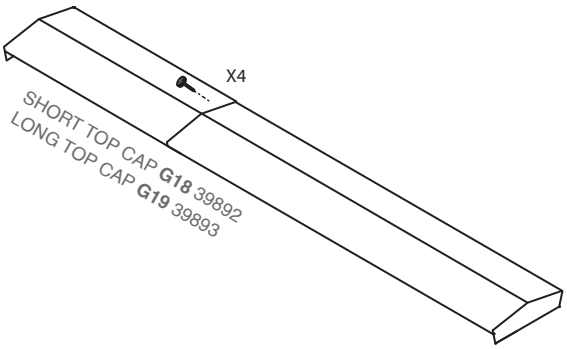





23!

NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

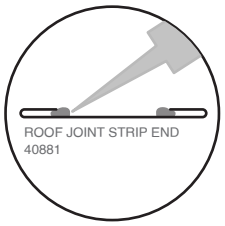


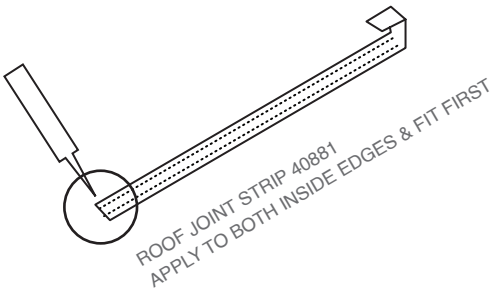

24

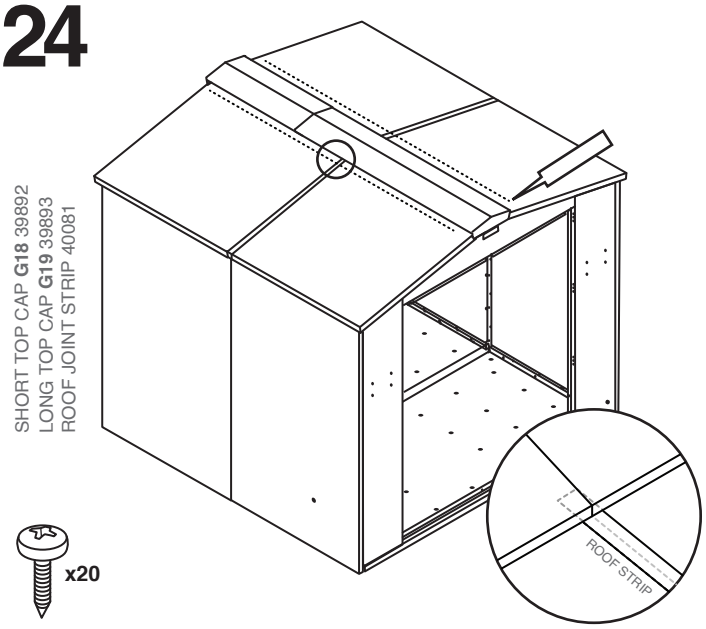


25

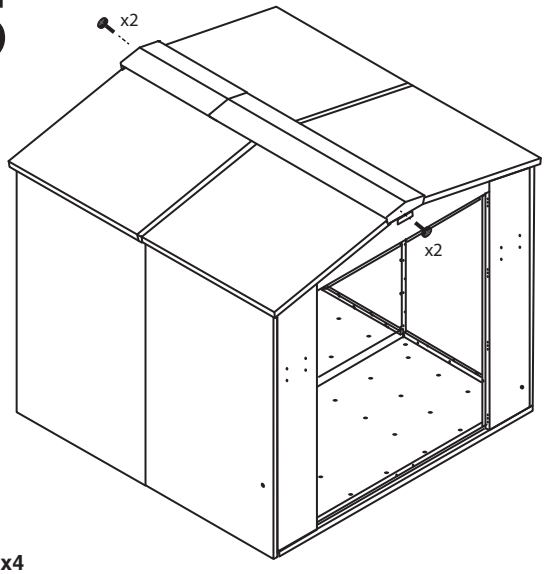



x4


26

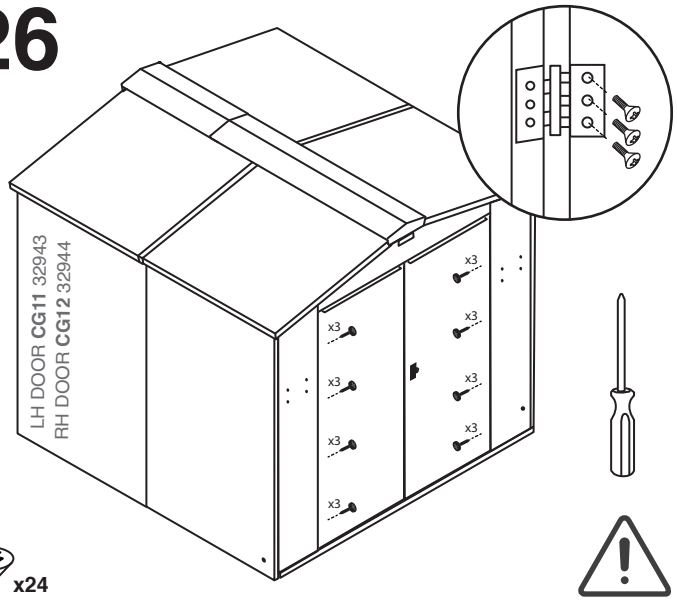




x24

27! LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

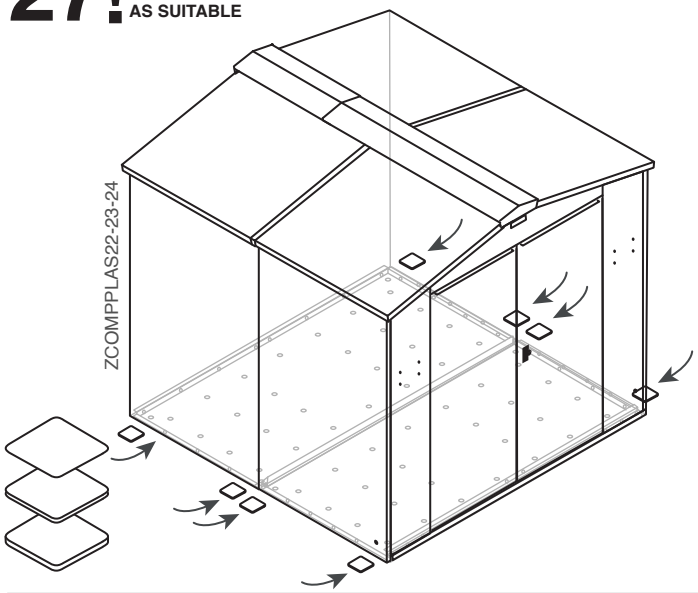

28

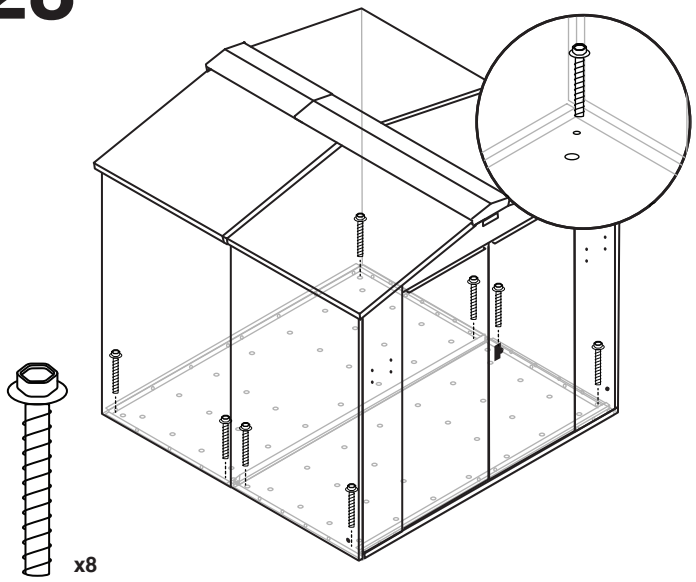

x8