

## CENTURION BIKE STORE X7

### BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.  
Min. distance from walls/ shrubbery: 1000mm.  
Min. base size (WxDxH) 3790mm x 1730mm x 50mm.

### LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to seal the fixing holes from underneath. **Please note product must be bolted down to comply with LPS1175.**

### TOOLS REQUIRED







Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.









Warning: some panels may weigh over 20Kg  
Beware of manual handling

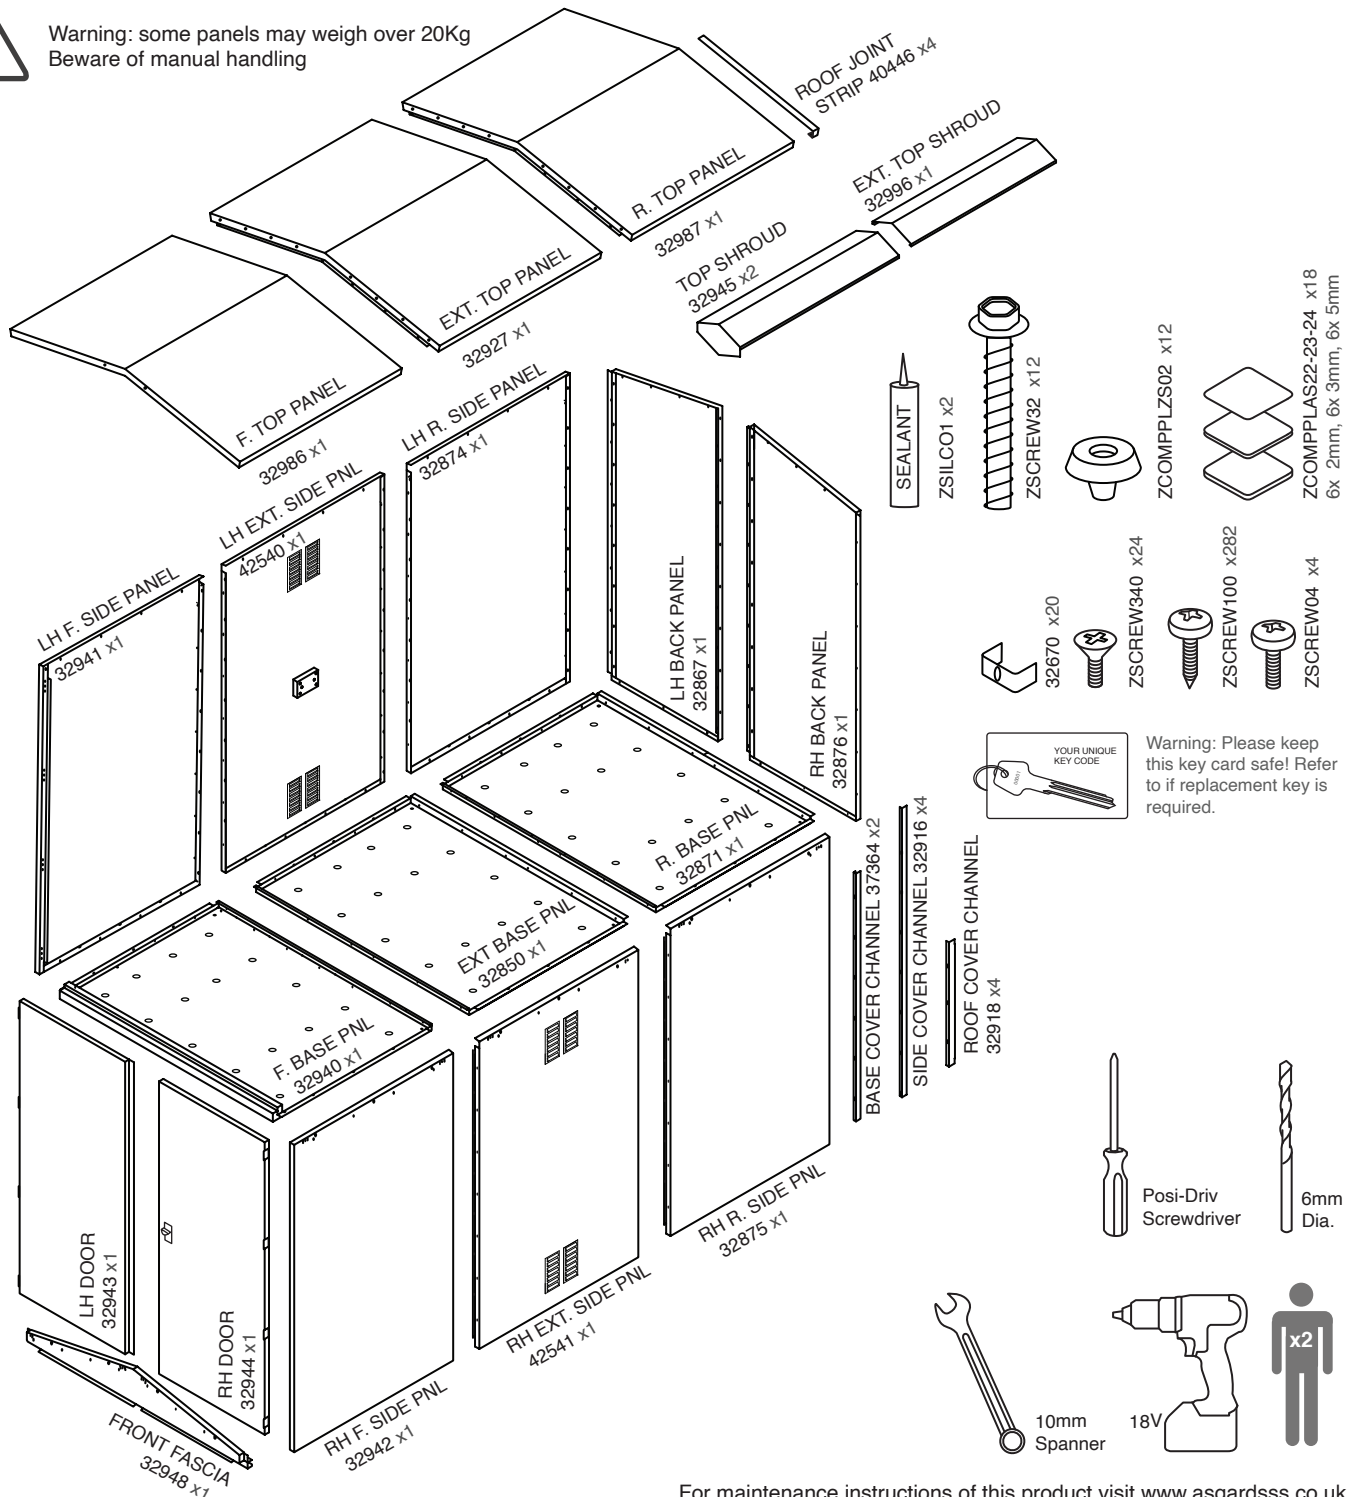

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

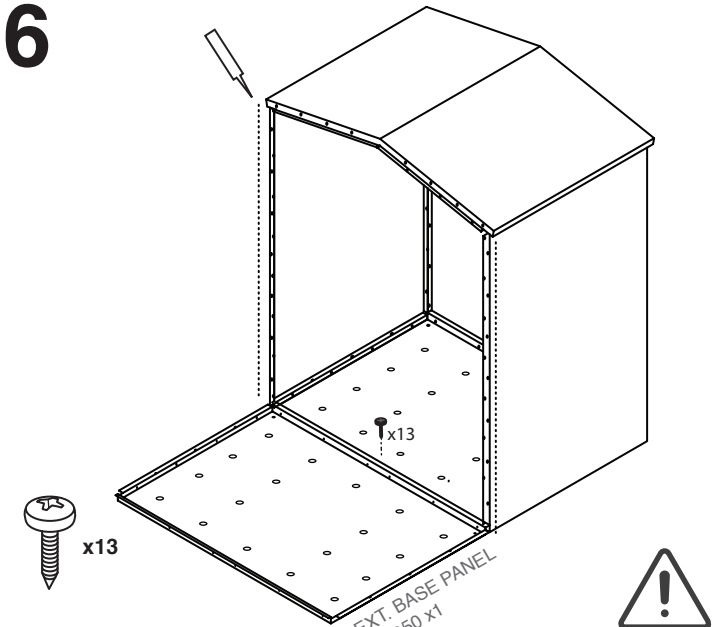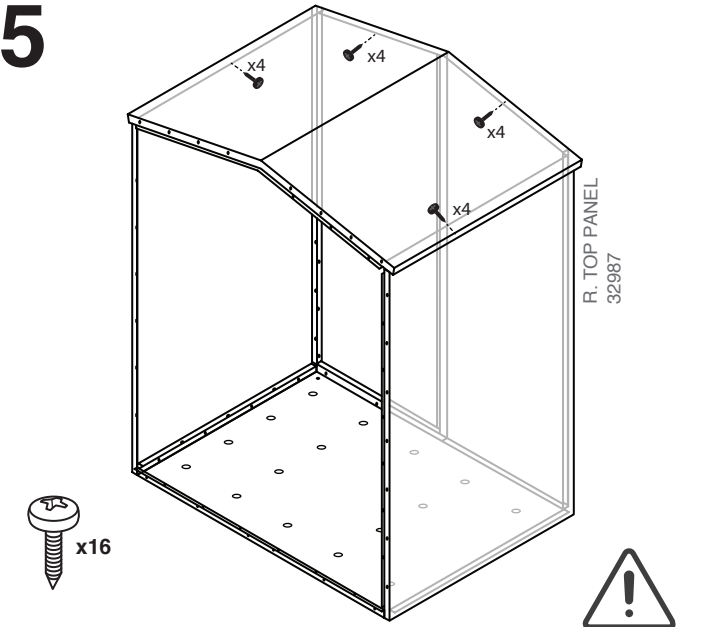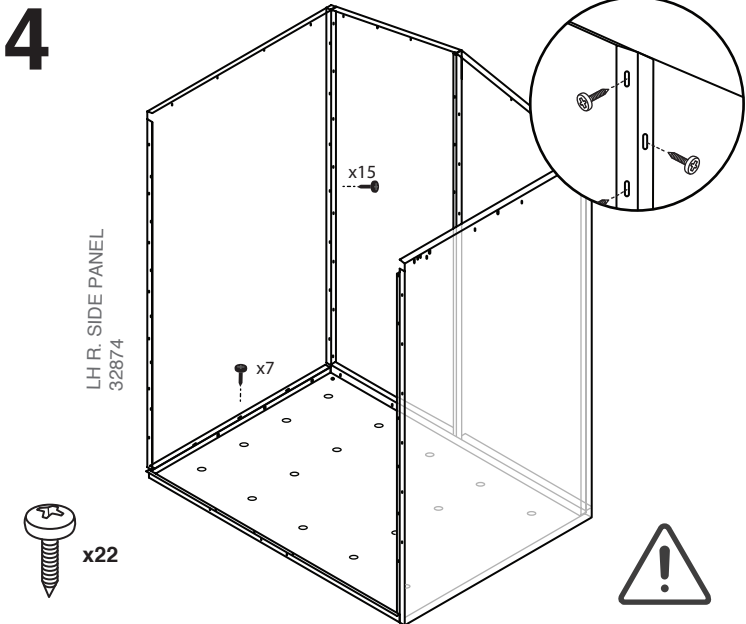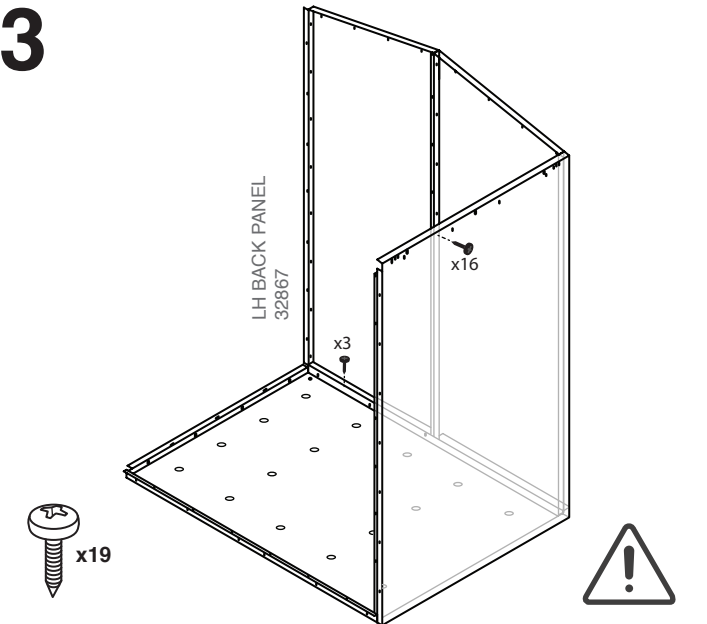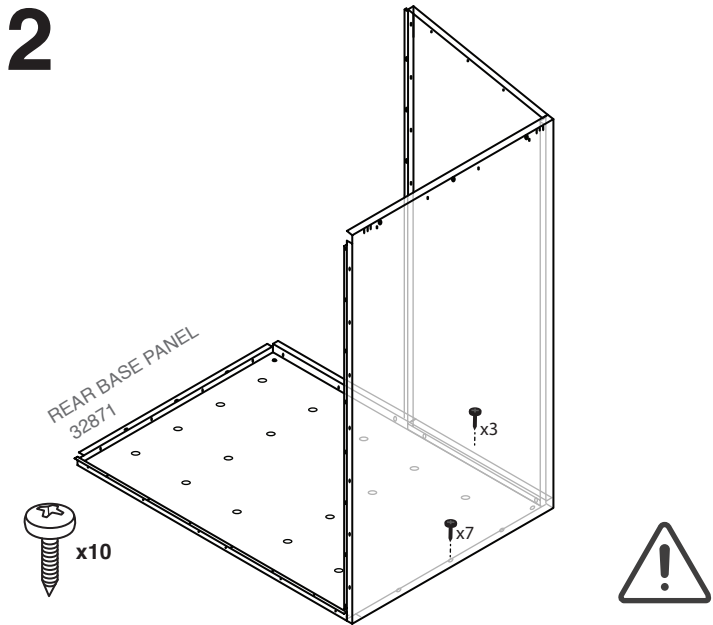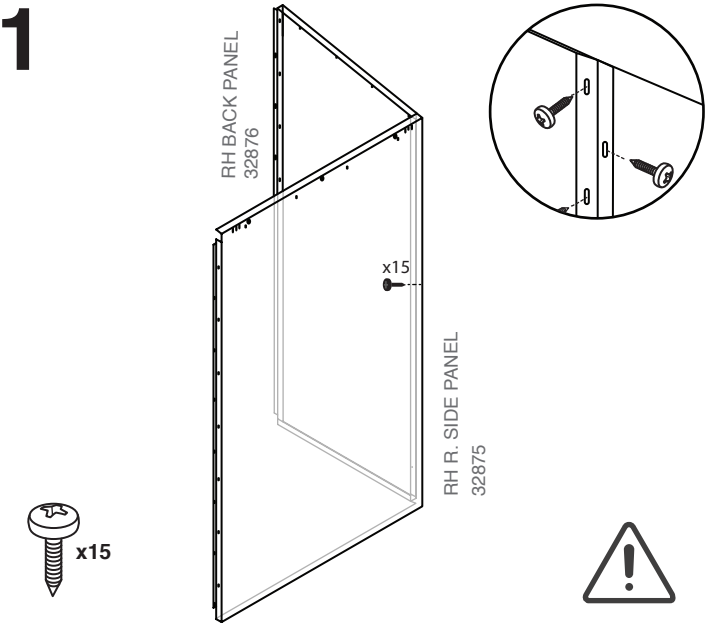

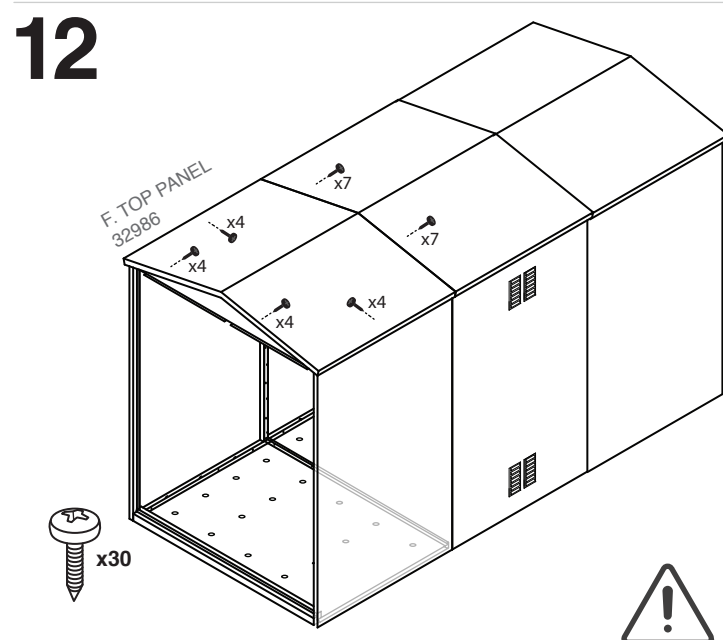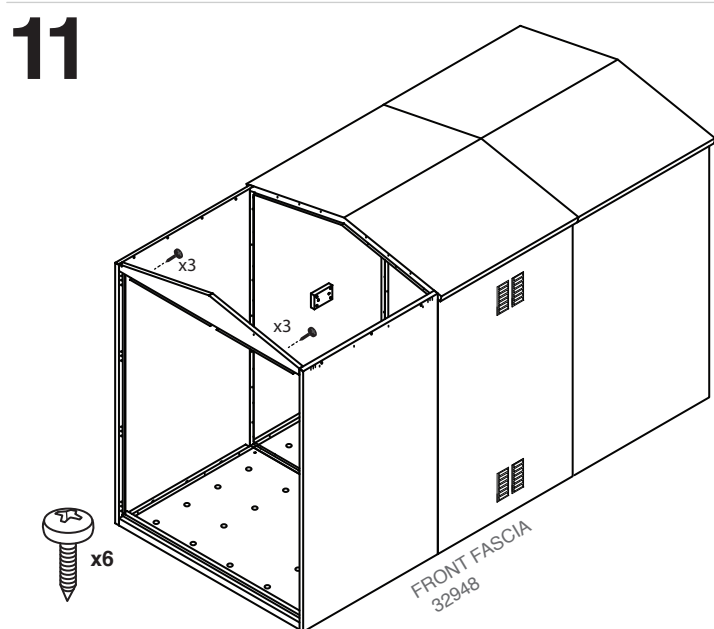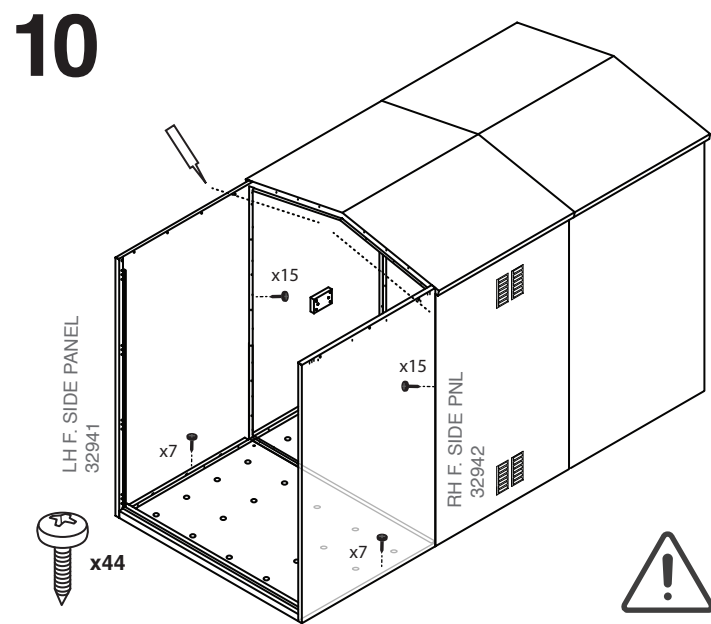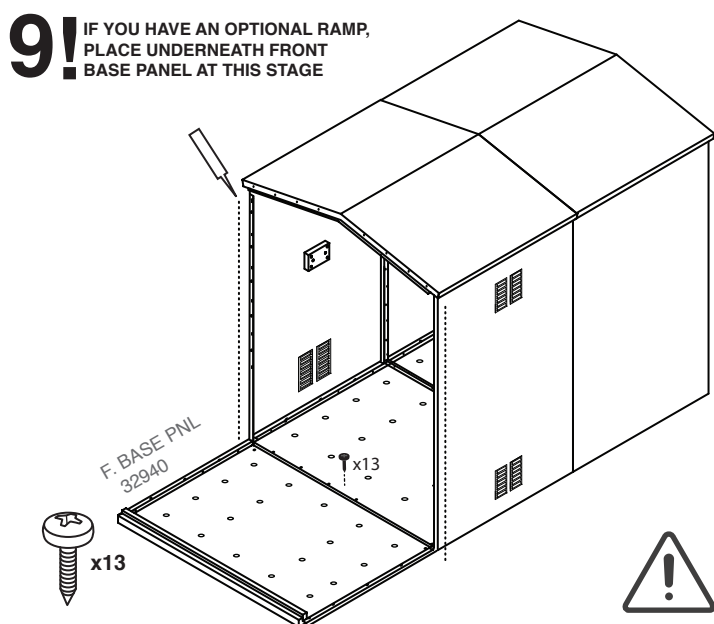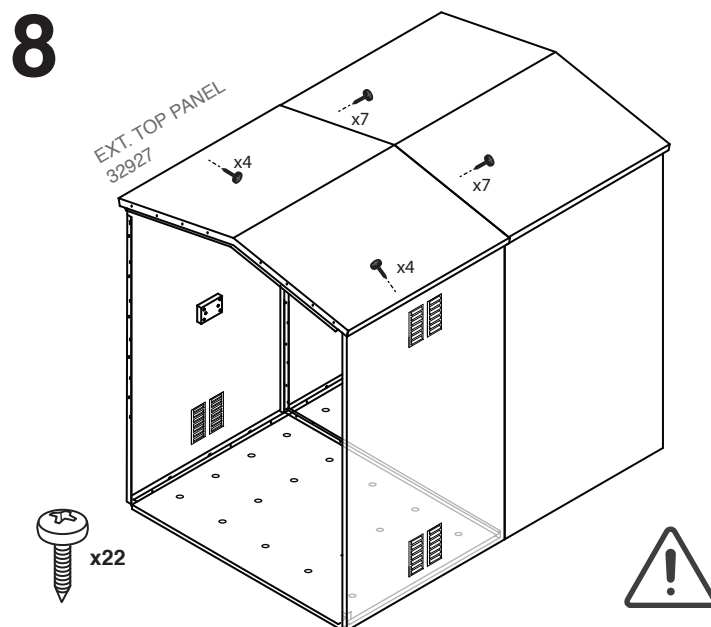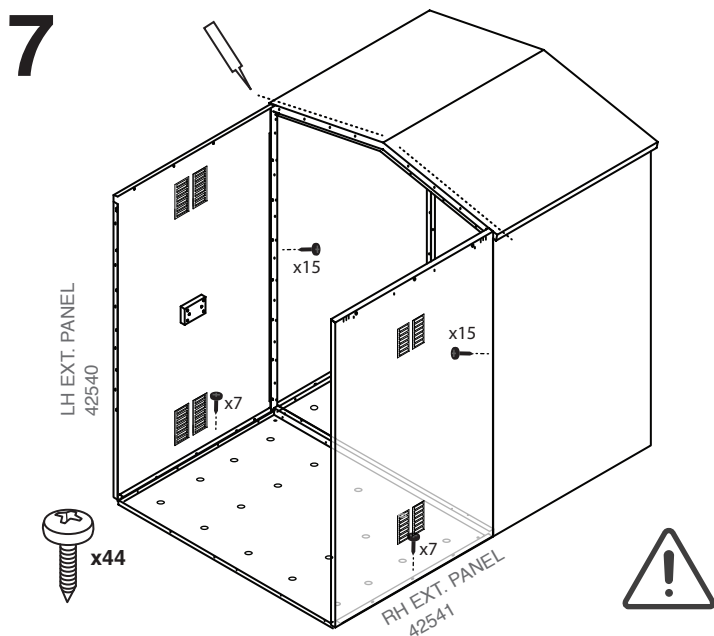

[illegible]

**14!** NO SCREWS REQUIRED  
TOP END OF STRIP TRAPPED  
UNDER TOP CAP

1ST TOP SHROUD  
32945

EXT. TOP SHROUD  
32996

2ND TOP SHROUD  
32945

ROOF JOINT STRIP 40446  
APPLY TO ALL INSIDE EDGES  
AND FIT FIRST

ROOF JOINT STRIP END  
40446

x8

x4

# 15

SHROUDS 32945 & 32996  
ROOF JOINT STRIP 40446

x2

x2

x4

SHROUDS  
ROOF STRIP


This diagram illustrates the process of attaching shrouds and a roof joint strip to the roof of the enclosure. It shows a top-down view of the enclosure with dashed lines indicating the placement of the shrouds and the roof joint strip. A circular callout provides a detailed view of the intersection where the shrouds and the roof strip meet. The diagram includes the following components and quantities:

- SHROUDS 32945 & 32996 (x2)
- ROOF JOINT STRIP 40446 (x2)
- SHROUDS (x4)
- ROOF STRIP (x4)

# 16

Diagram 16 shows the assembly of the top of the cabinet. A large screwdriver icon is positioned to the left of the diagram. The diagram illustrates the top panel being attached to the main cabinet body. A circular inset provides a detailed view of the corner joint, showing a small L-shaped bracket labeled '32670' being secured with a screw. The main diagram shows the top panel with pre-drilled holes and the main cabinet body with corresponding slots for the screws.

**17 !** REMOVE SCREWS WHICH ALIGN WITH THE COVER CHANNELS. ALIGN AND PLACE SCREWS BACK

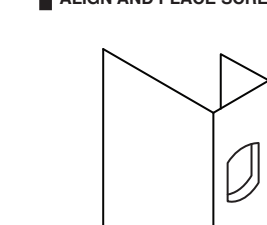

SIDE COVER CHANNEL 32916  
ROOF COVER CHANNEL 32918  
BASE COVER CHANNEL 37364

**18!** LEVEL SHED UNTIL DOORS  
ALIGN USING ZCOMPPLAS  
AS SUITABLE

ZCOMPPLAS22-23-24

19

