

CENTURION BIKE STORE X7

BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 3790mm x 1730mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to seal the fixing holes from underneath. **Please note product must be bolted down to comply with LPS1175.**

TOOLS REQUIRED







Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.









Warning: some panels may weigh over 20Kg
Beware of manual handling

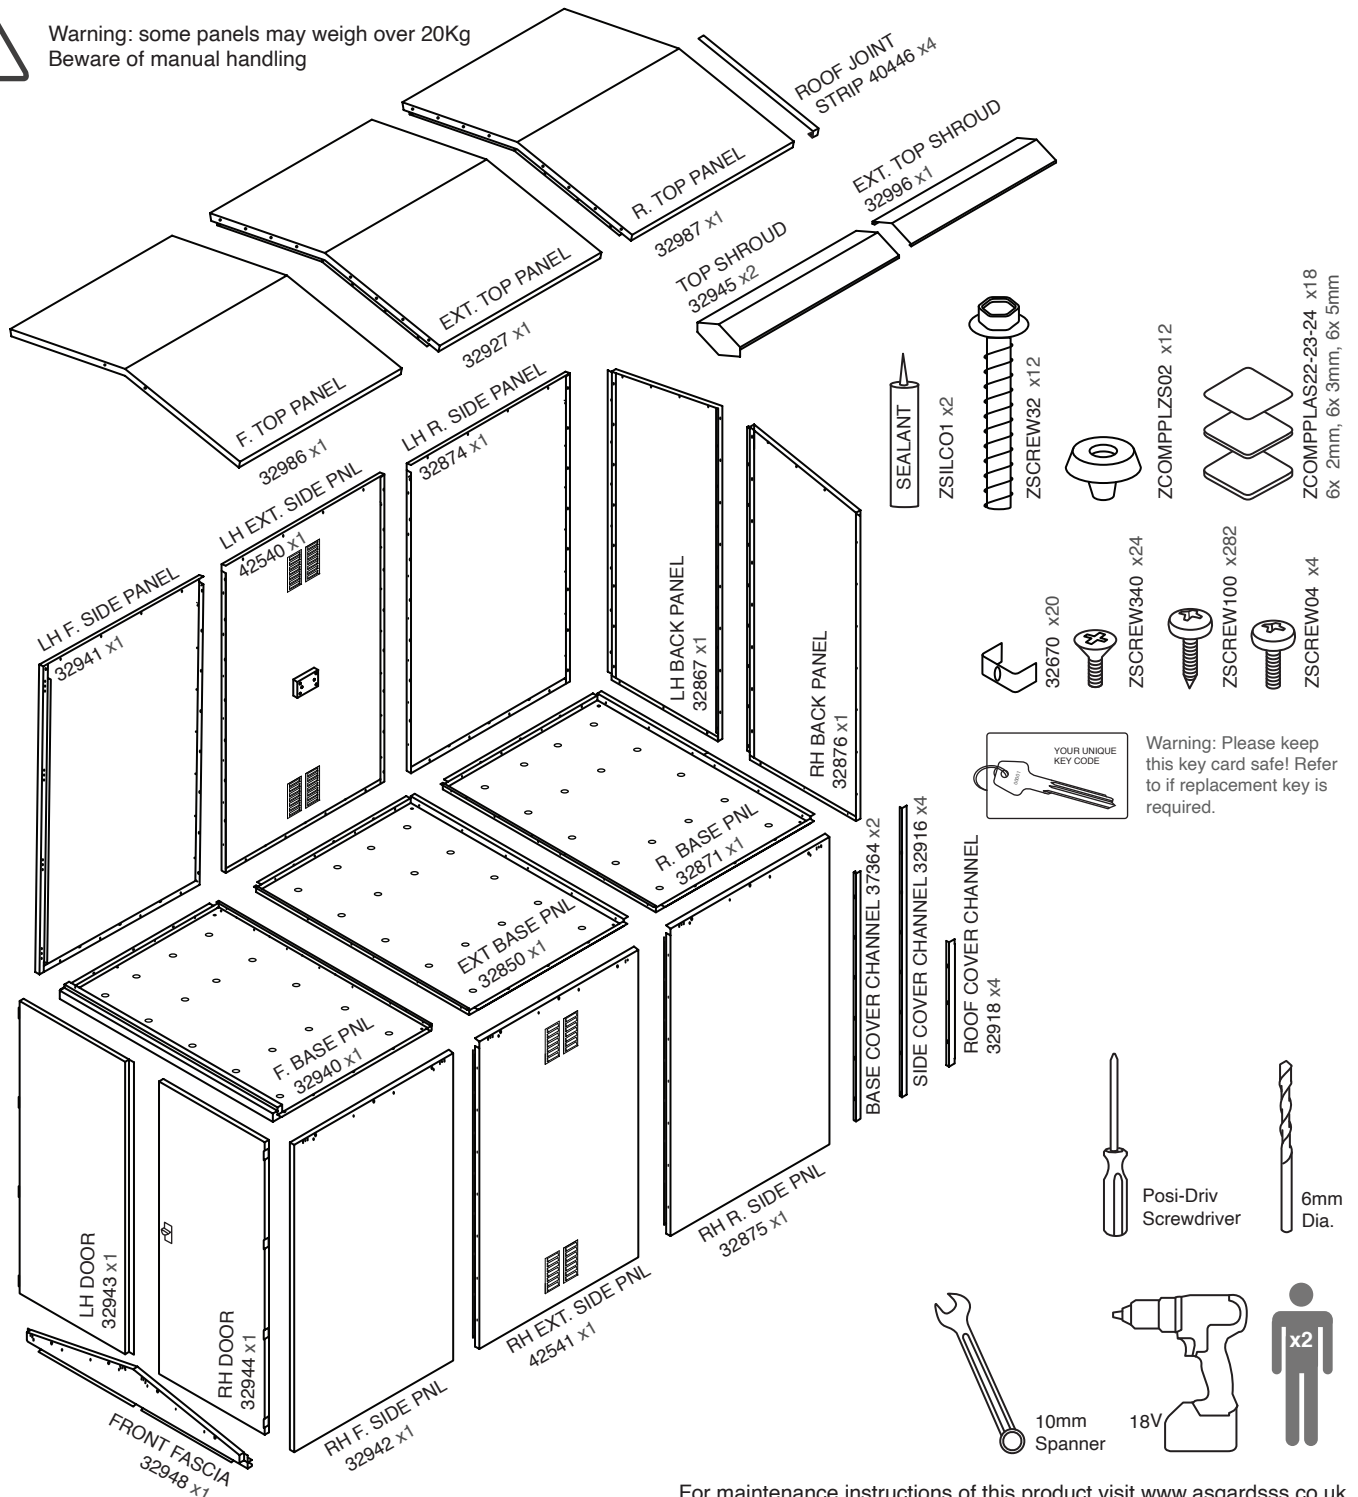

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

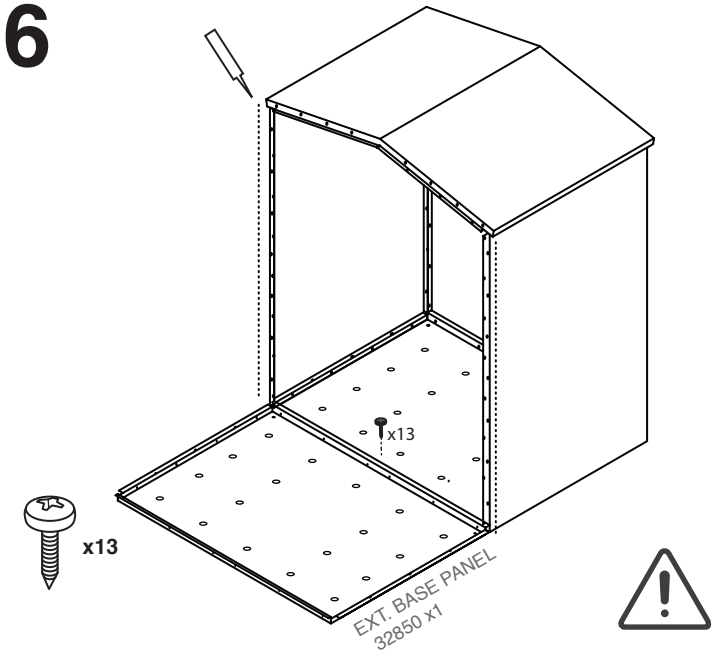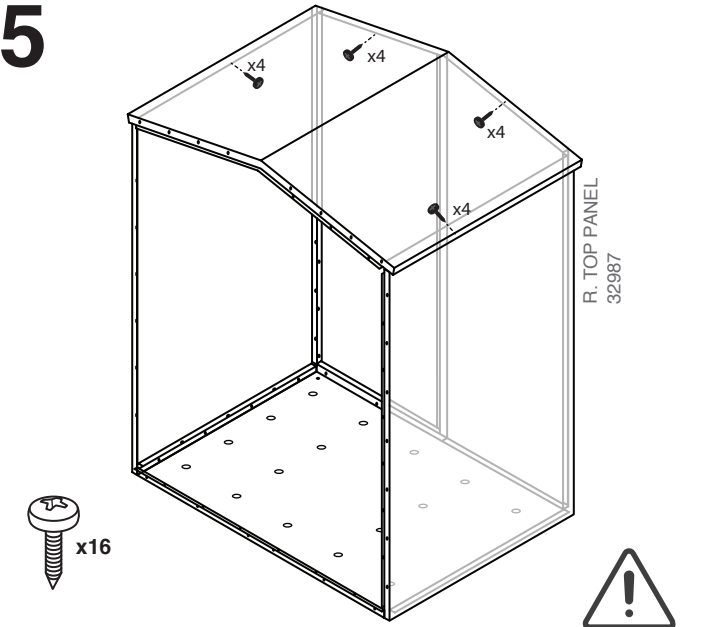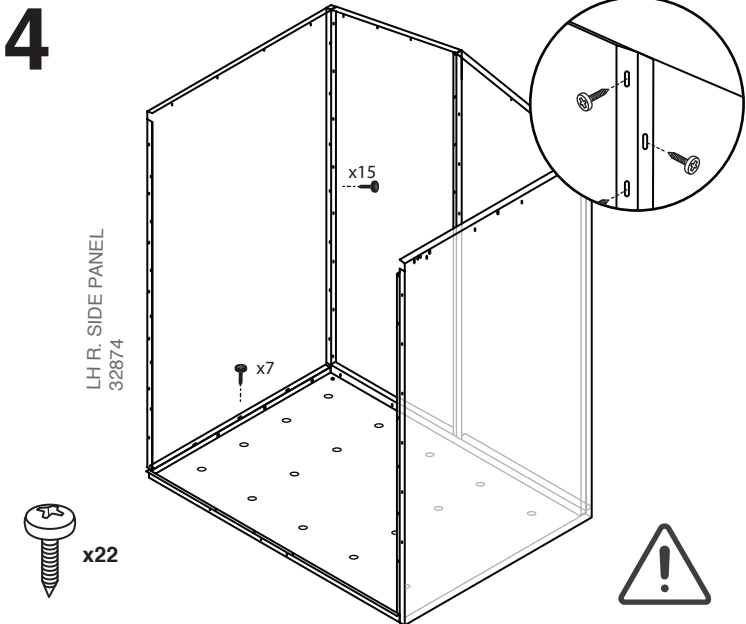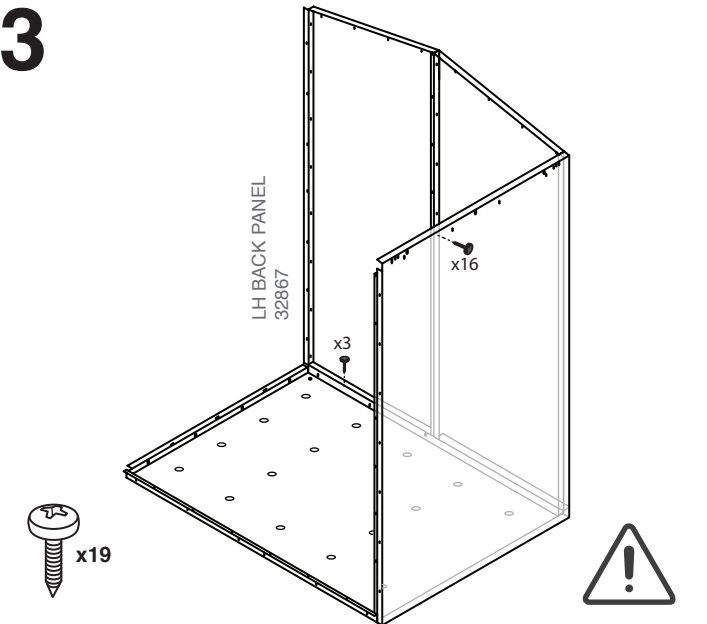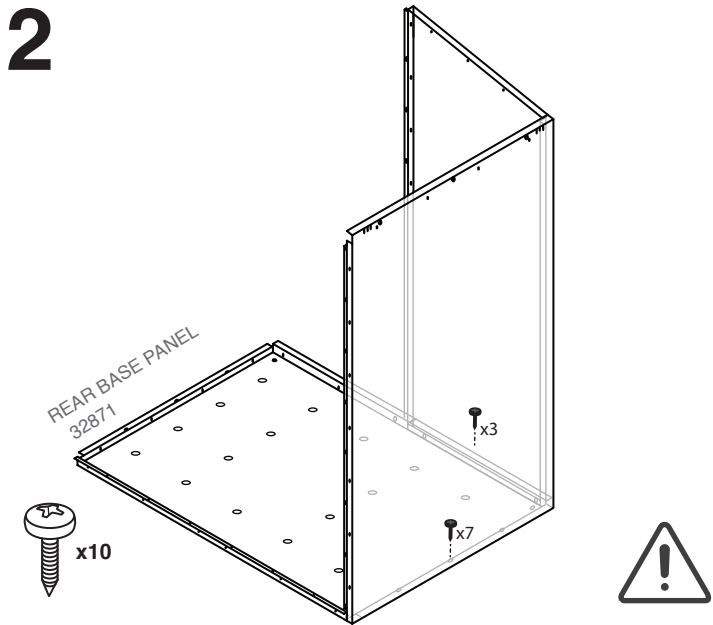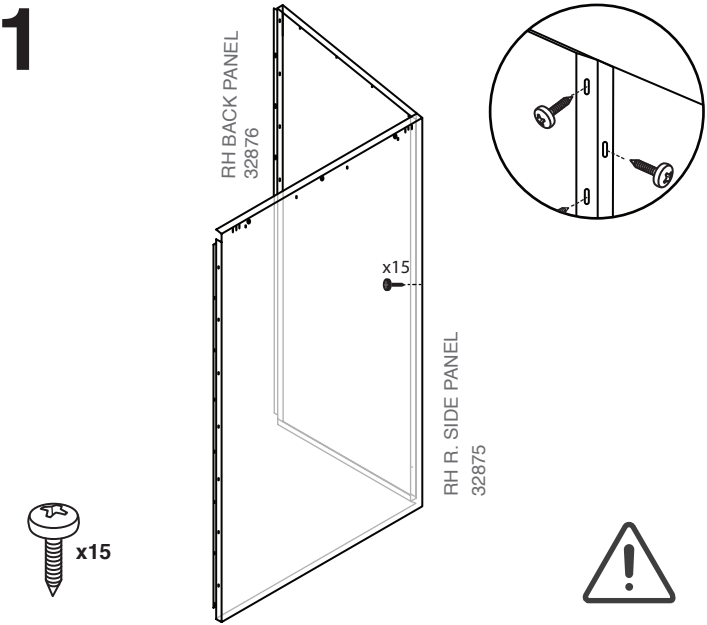

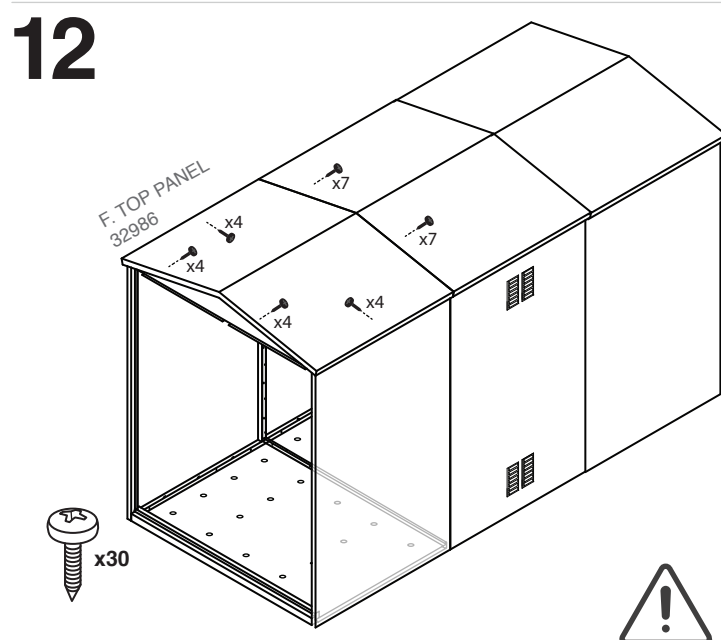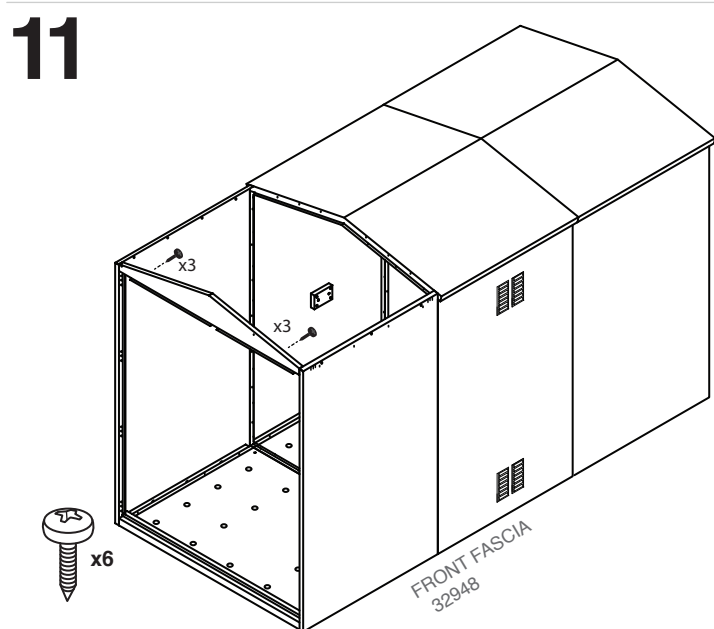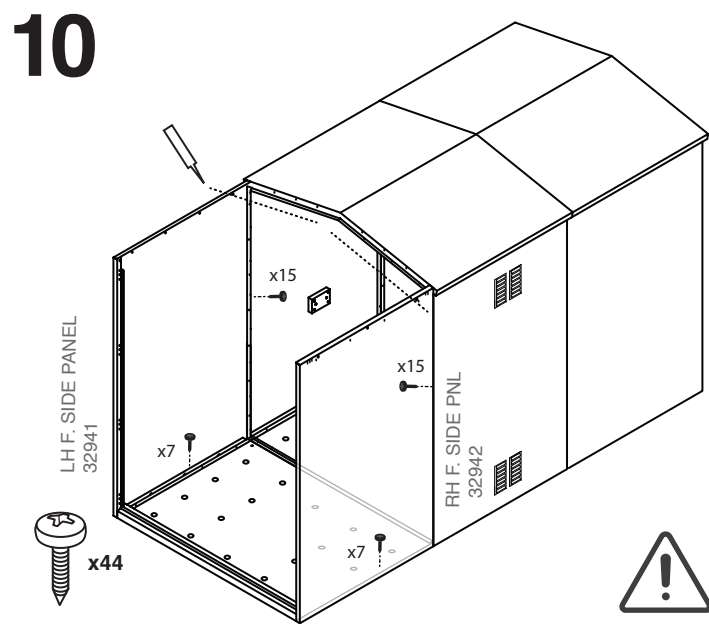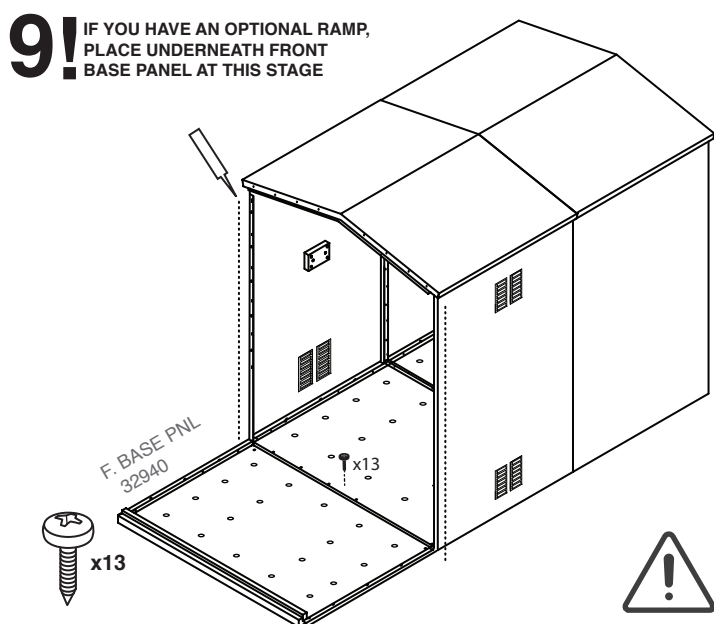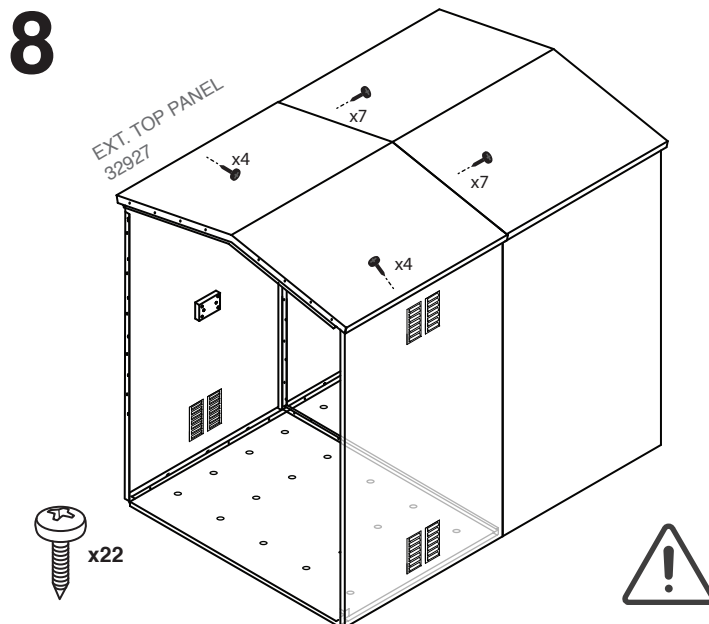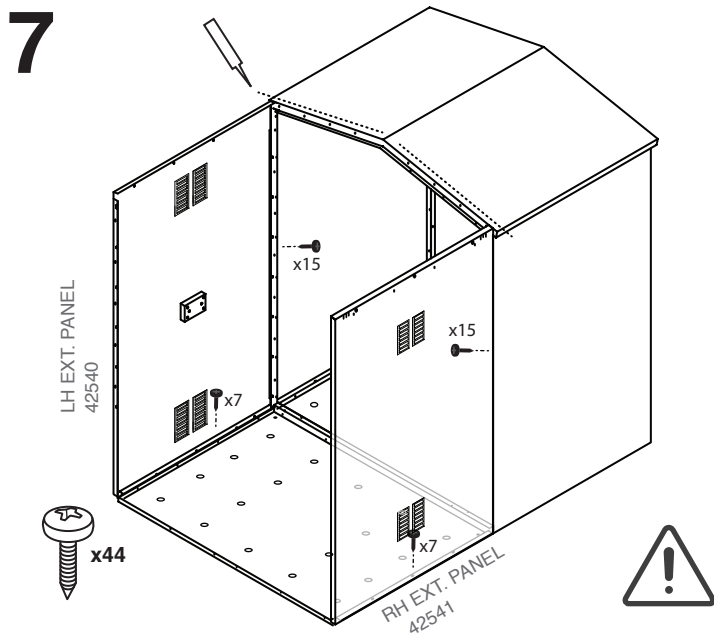

[illegible]

14! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

ROOF JOINT STRIP END
40446

1ST TOP SHROUD
32945

EXT. TOP SHROUD
32996

2ND TOP SHROUD
32945

x4

x4

x4

ROOF JOINT STRIP 40446
APPLY TO ALL INSIDE EDGES
AND FIT FIRST

x8

15

SHROUDS 32945 & 32996
ROOF JOINT STRIP 40446

x2

x2

x4


SHROUDS
ROOF STRIP

This diagram illustrates the process of attaching shrouds and a roof joint strip to the roof of the enclosure. The main view shows the enclosure with a roof joint strip being applied along the ridge. Two shrouds are shown being attached to the roof panels. A circular inset provides a detailed view of the shroud and roof strip intersection. The required tools and quantities are listed on the left: a screwdriver (x2) and a screw (x4).

16

Diagram 16 illustrates the step of attaching the top of the cabinet. A large screwdriver icon is shown on the left, labeled 'x20'. A circular inset on the right shows a close-up of a corner bracket labeled '32670' being attached to the top edge of the cabinet with a screw.

17 ! REMOVE SCREWS WHICH ALIGN WITH THE COVER CHANNELS.
ALIGN AND PLACE SCREWS BACK

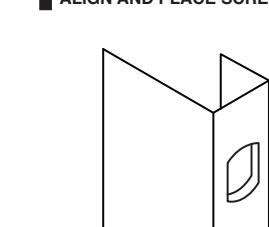

SIDE COVER CHANNEL 32916
ROOF COVER CHANNEL 32918
BASE COVER CHANNEL 37364

18! LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPPLAS
AS SUITABLE

ZCOMPPLAS22-23-24

19

