

CENTURION BIKE STORE X7

BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 3790mm x 1730mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to seal the fixing holes from underneath. **Please note product must be bolted down to comply with LPS1175.**

TOOLS REQUIRED







Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.









Warning: some panels may weigh over 20Kg
Beware of manual handling

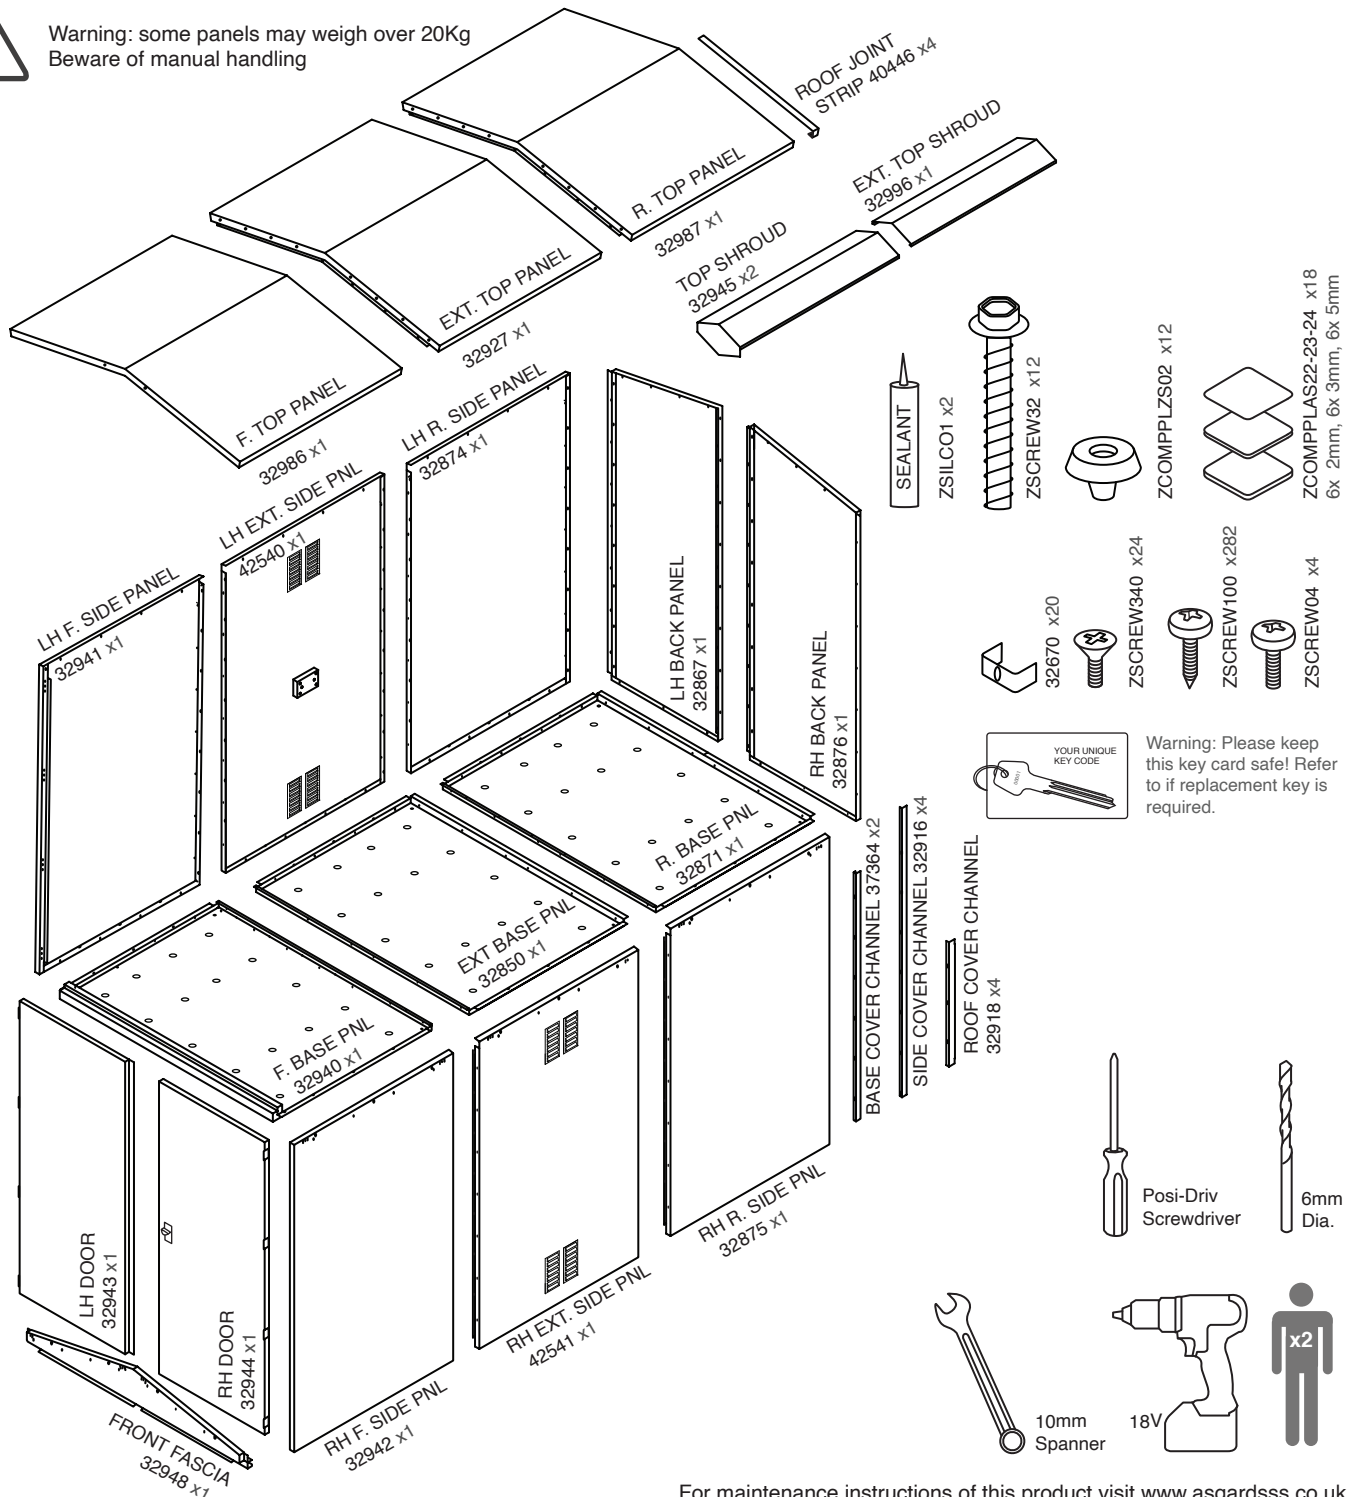

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

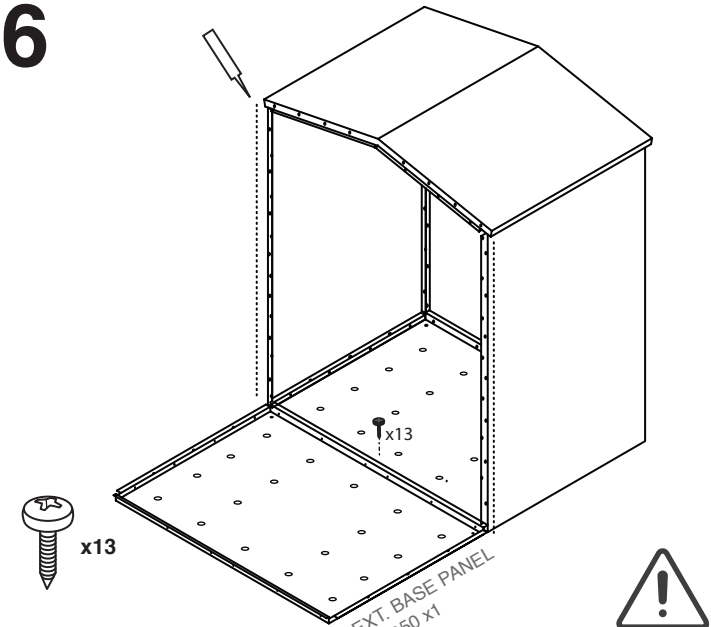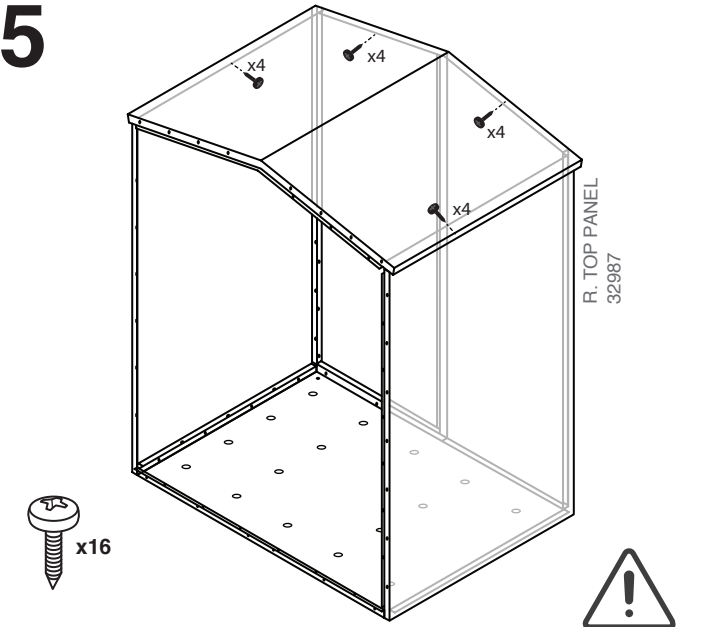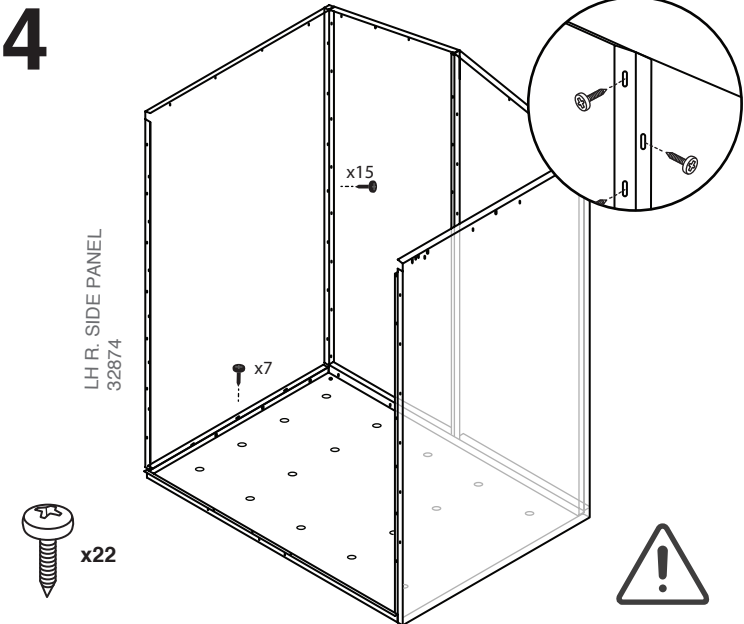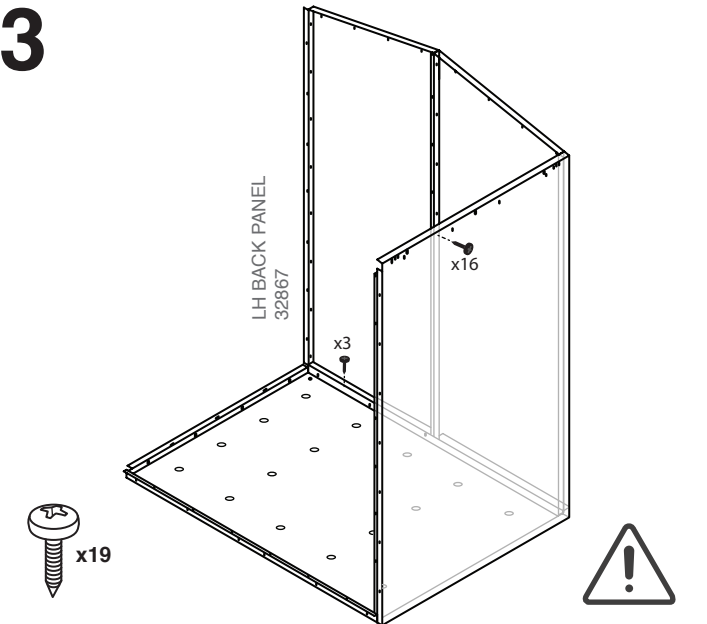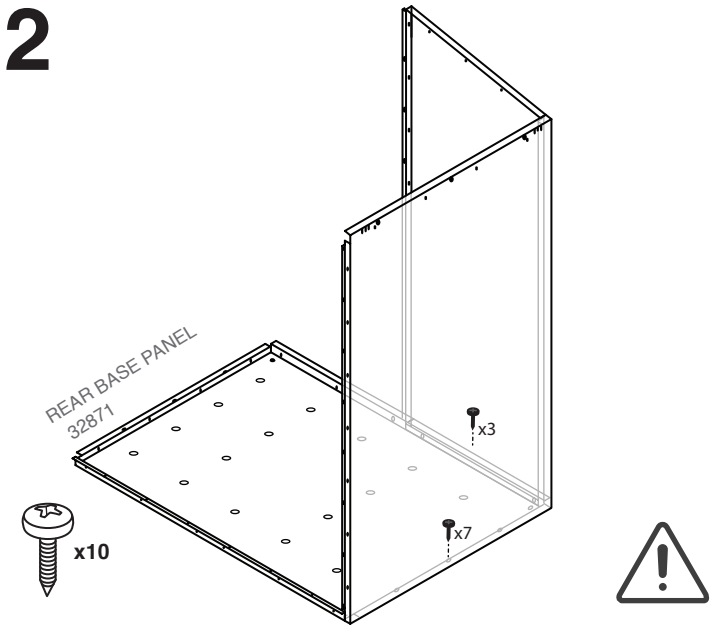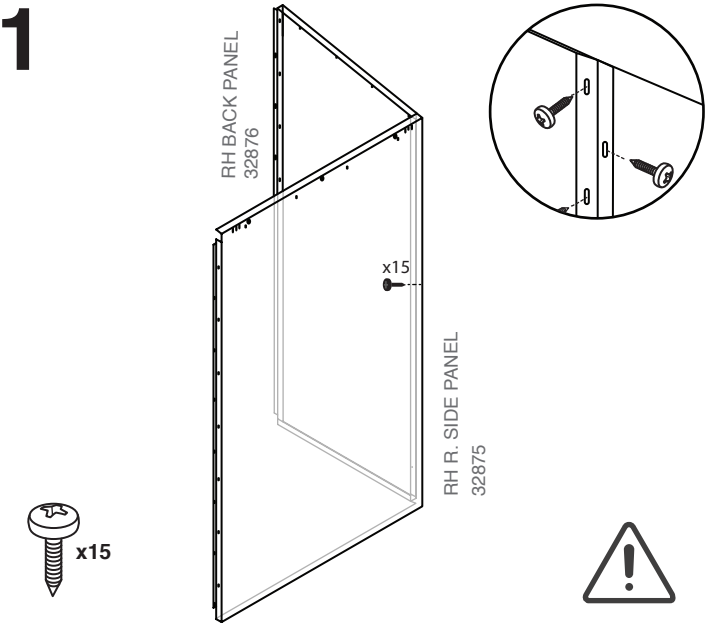

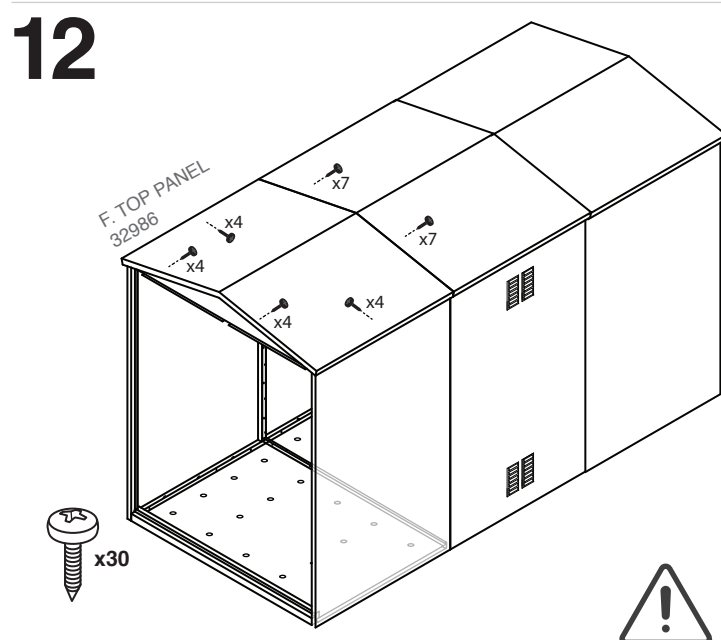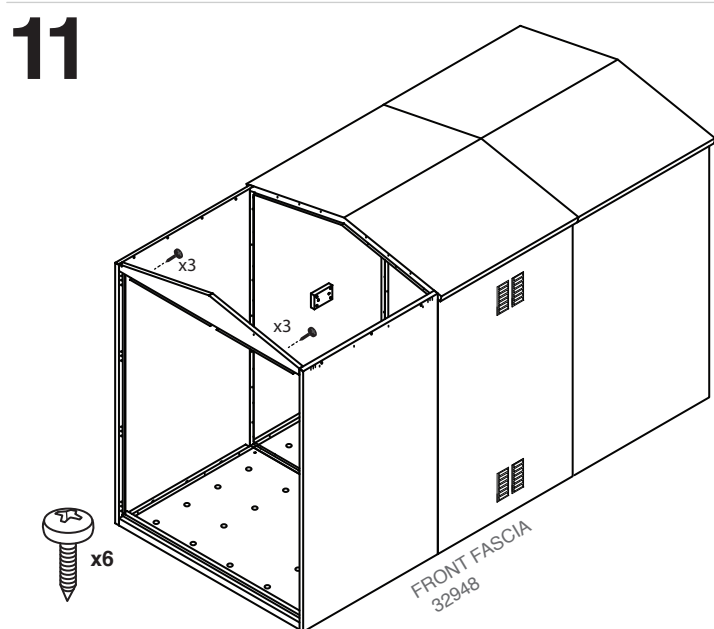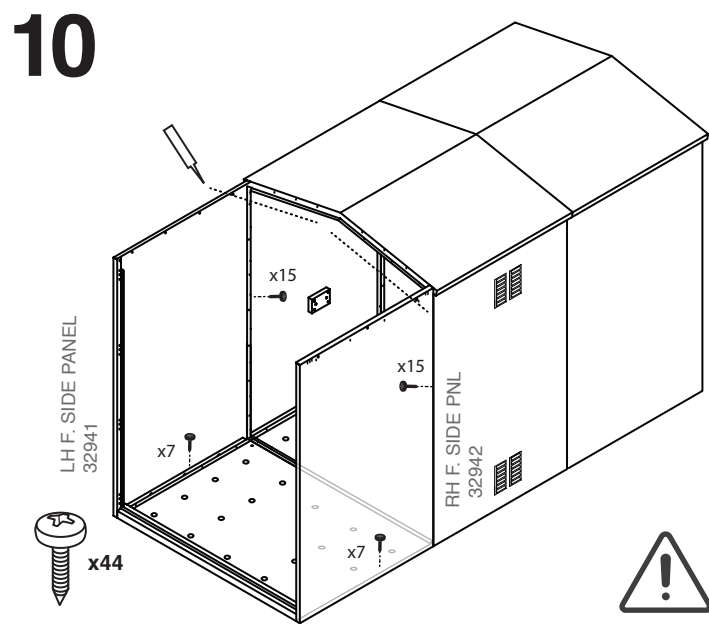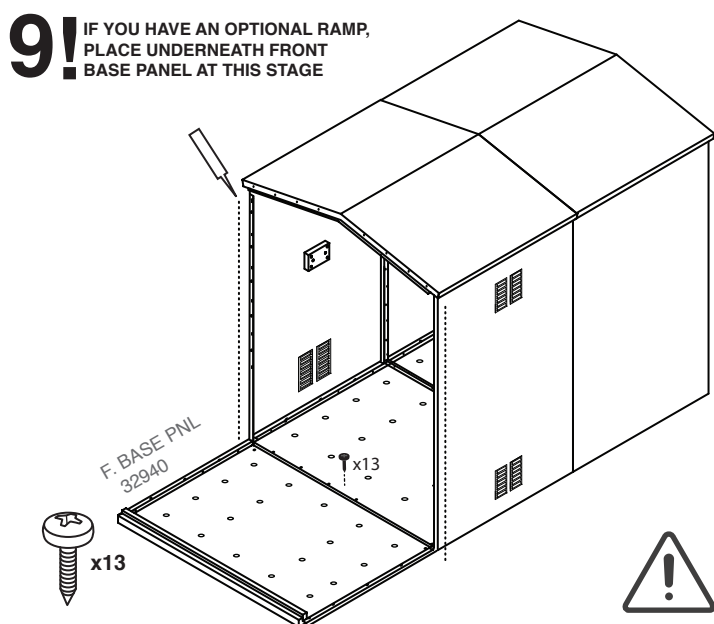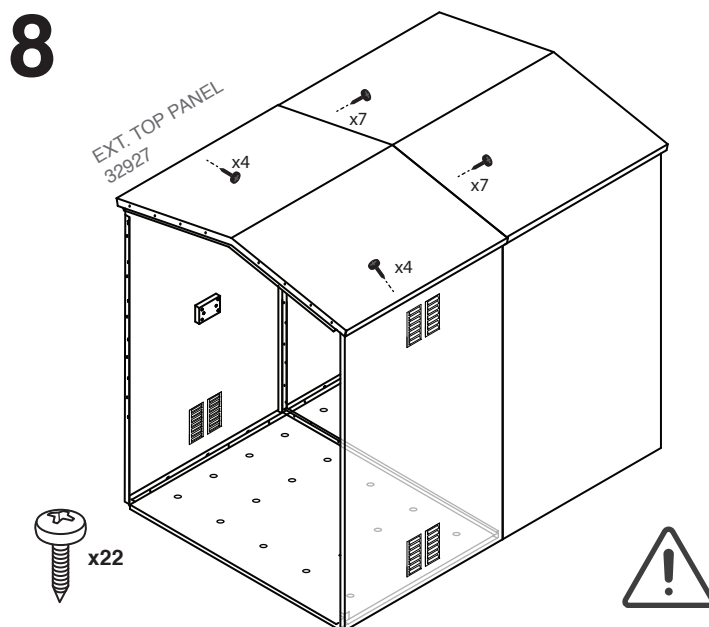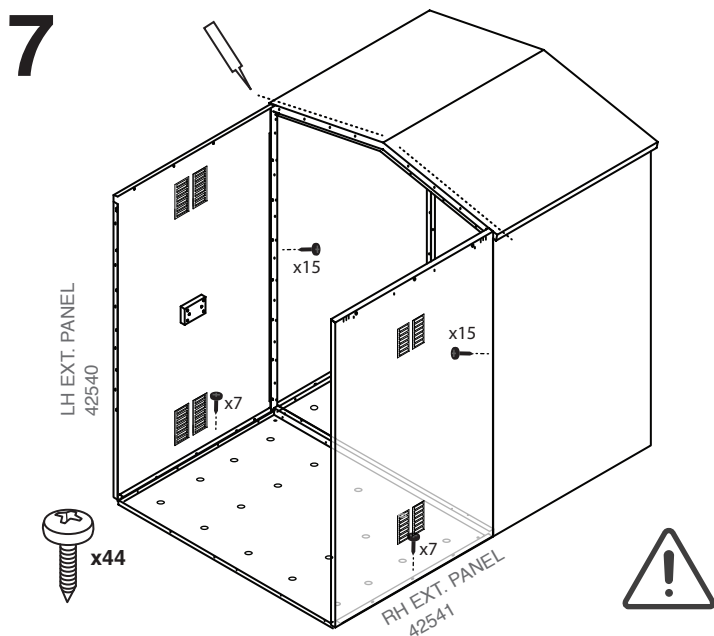

[illegible]

14! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

Diagram illustrating the assembly of the roof joint strip (40446) using the top cap (32945) and the roof joint strip (40446). The diagram shows the strip being inserted into the top cap, with the top end of the strip trapped under the top cap. The diagram also shows the strip being secured with screws (x8) and the top cap being secured with screws (x4).

Labels in the diagram include:

- 1ST TOP SHROUD 32945
- EXT. TOP SHROUD 32996
- 2ND TOP SHROUD 32945
- ROOF JOINT STRIP 40446
- APPLY TO ALL INSIDE EDGES AND FIT FIRST
- NO SCREWS REQUIRED
- TOP END OF STRIP TRAPPED UNDER TOP CAP

15

SHROUDS 32945 & 32996
ROOF JOINT STRIP 40446

x2

x2

x4

SHROUDS
ROOF STRIP


This diagram illustrates the process of attaching roof shrouds and a joint strip to the top of the unit. It shows a perspective view of the unit's roof with two shrouds being positioned. A circular callout provides a detailed view of the shrouds and the joint strip meeting at a corner. The diagram includes the following components and quantities:

- SHROUDS 32945 & 32996 (x2)
- ROOF JOINT STRIP 40446 (x2)
- Four screws (x4) for securing the shrouds.

16

Diagram 16 illustrates the step of attaching the top of the cabinet. A large screwdriver icon is shown on the left, labeled 'x20'. A circular inset on the right shows a close-up of a corner bracket labeled '32670' being attached to the top edge of the cabinet frame with a screw.

**17 ! REMOVE SCREWS WHICH ALIGN WITH THE COVER CHANNELS.
ALIGN AND PLACE SCREWS BACK**

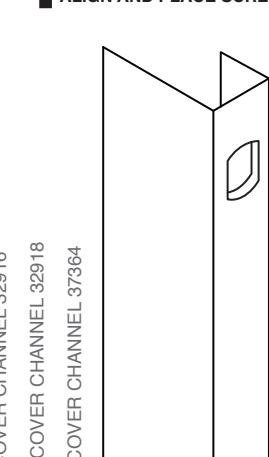

SIDE COVER CHANNEL 32916
ROOF COVER CHANNEL 32918
BASE COVER CHANNEL 37364

18! LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPPLAS
AS SUITABLE

ZCOMPPLAS22-23-24

19

