SECURE STORE


BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 1600mm x 1000mm x 50mm.

LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). **If not anchoring the unit, fit the self-seal plugs BEFORE BUILDING to block the fixing holes 4 from underneath**.

TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill, a 10mm socket spanner and all weather sealent suitable for steel and concete.

Warning: panels weigh over 20Kg
Beware of manual handling

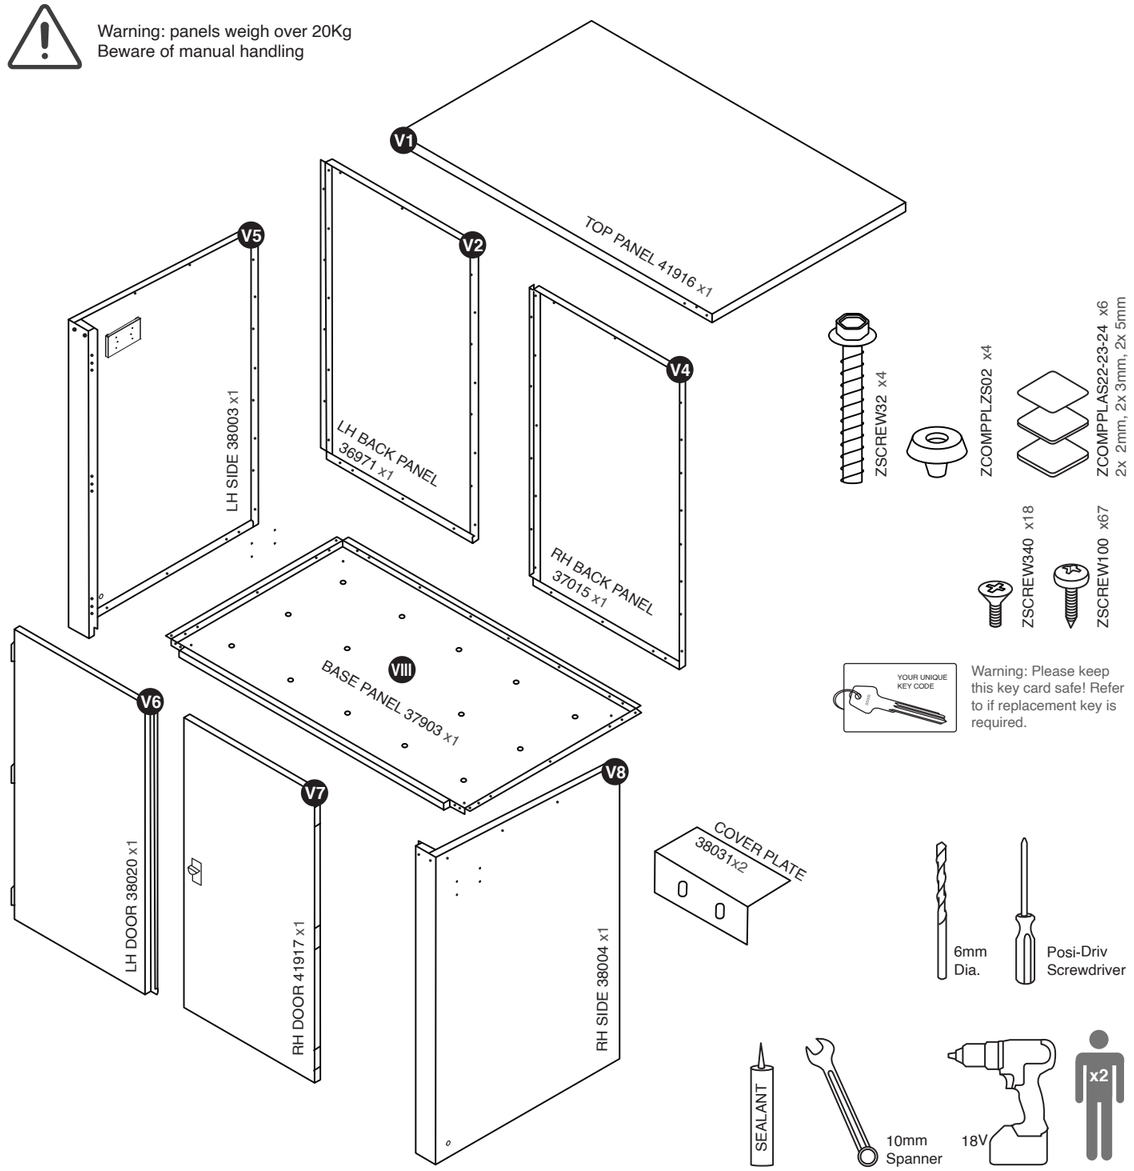


For maintenance instructions of this product visit www.asgardsss.co.uk

41915/15.07.26/JB/REV6


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

1!


NOTE IF NOT ANCHORING THE UNIT FIT 4X SELF-SEAL PLUGS TO THE UNDERSIDE OF THE BASE

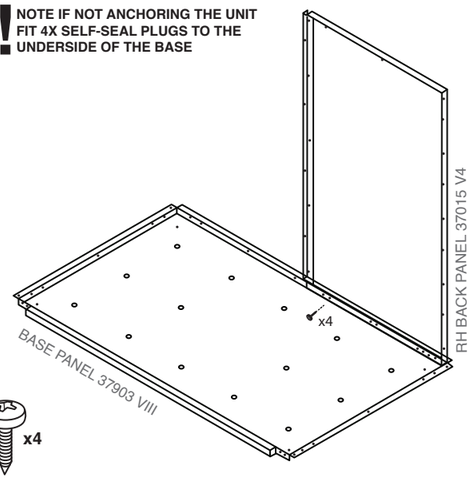


2

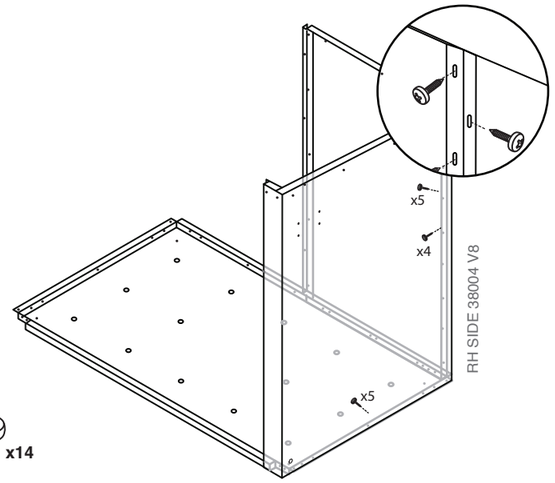


7

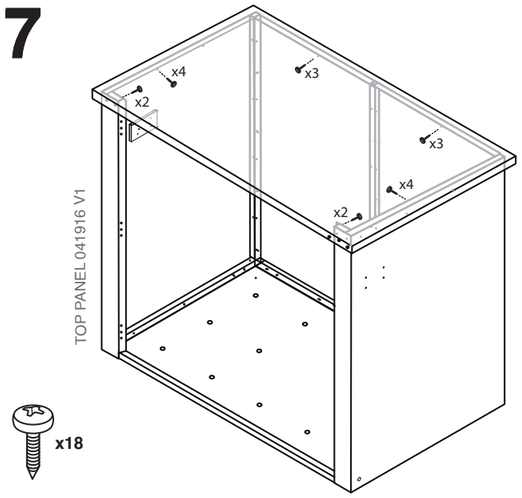


8

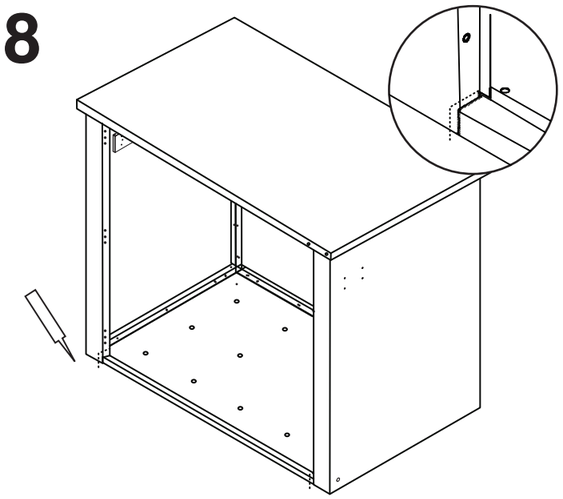


3

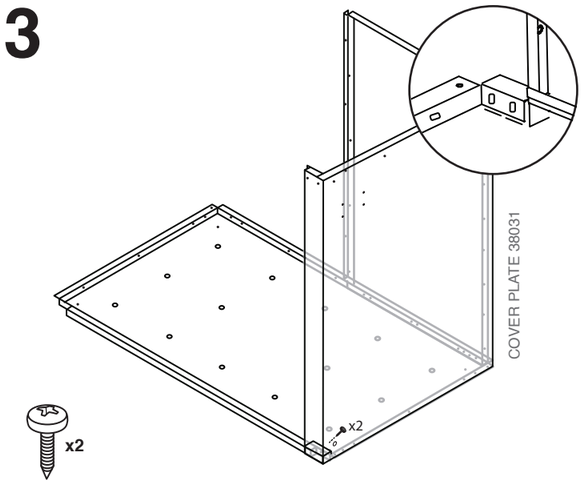

4

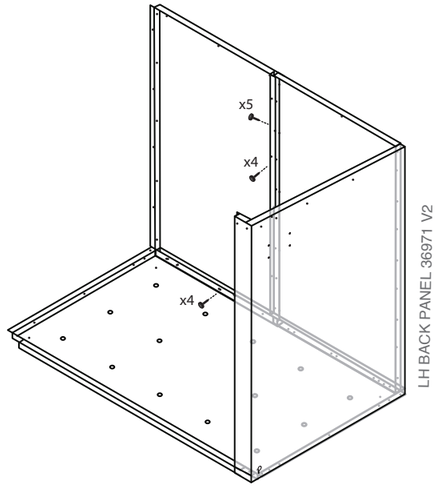


9

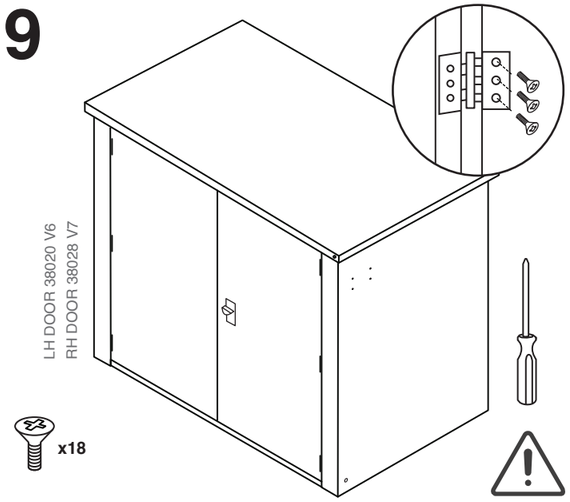


10!


LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

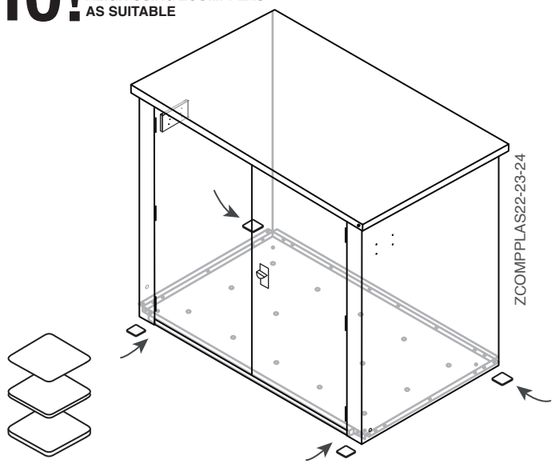

5

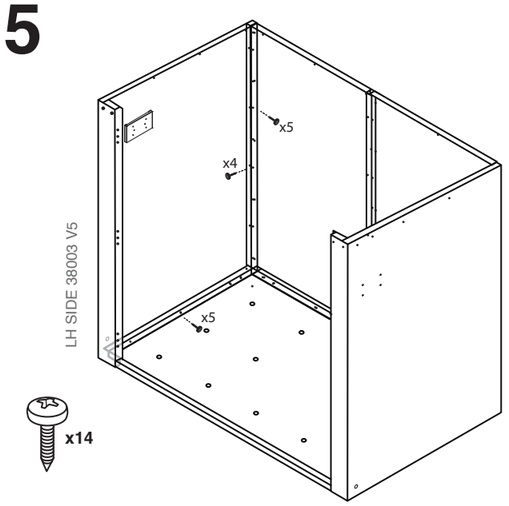

6

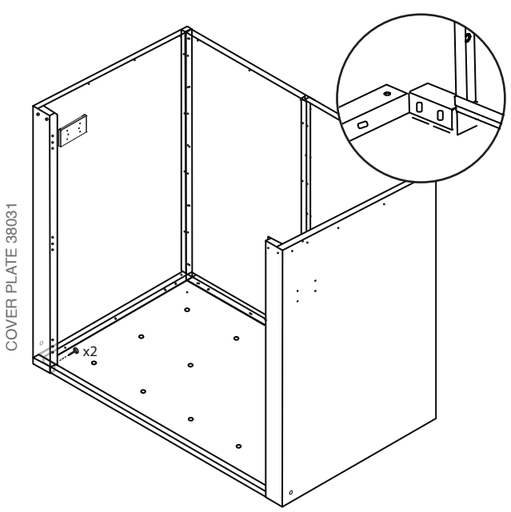

11

