

YALE GROUND ANCHOR BRACKET







COMPATIBILITY

All sheds excluding Vertical Bike Locker and Flexistore range only if fitting it to a wooden subfloor


TOOLS REQUIRED

M10 Ratchet, M17 Spanner, Phipps Screwdriver, Marker Pen, 10mm Drill

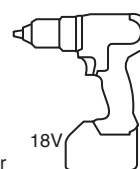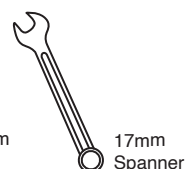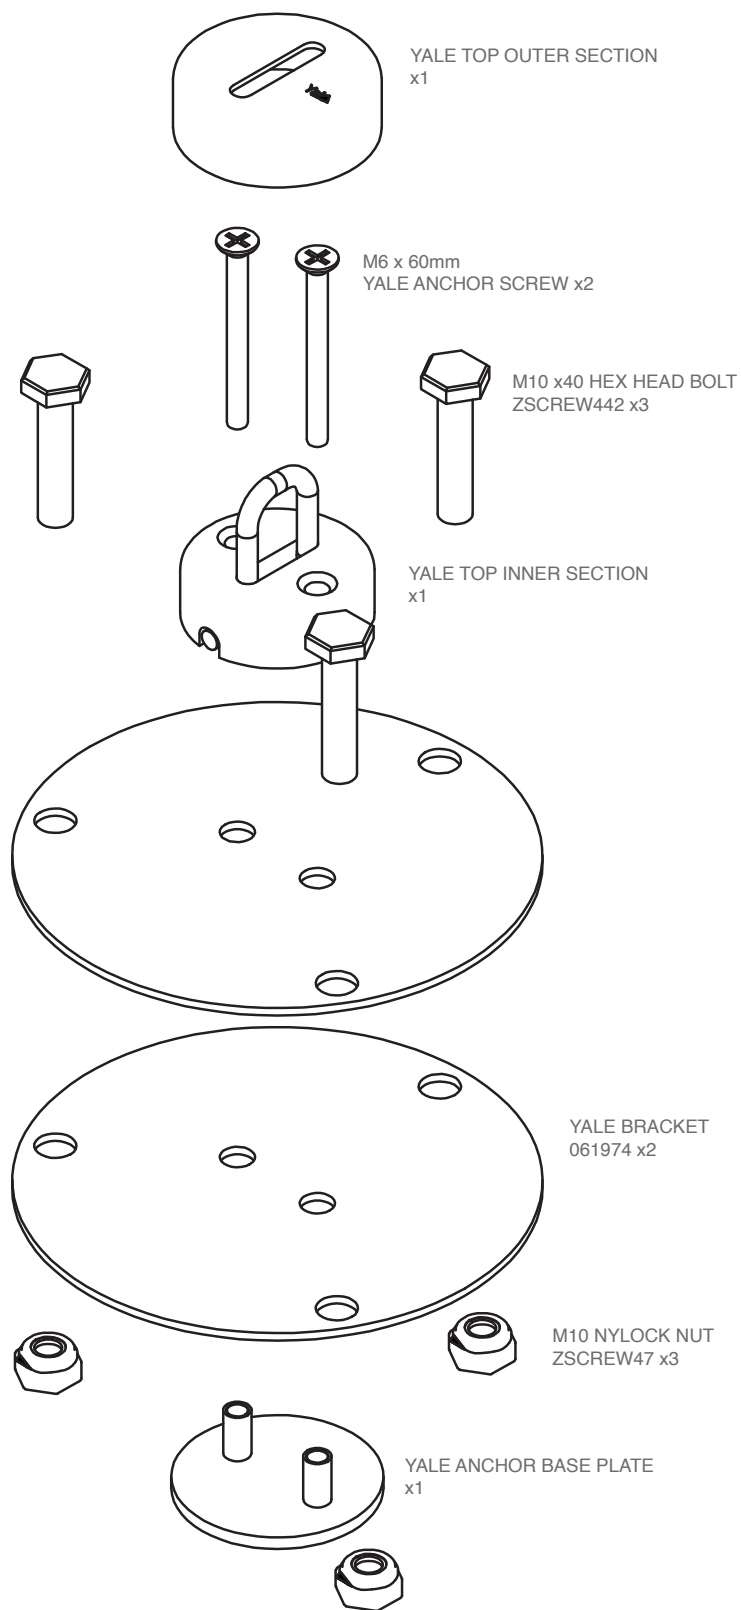


For maintenance instructions of this product visit www.asgardsss.co.uk


1! INSTALL PRIOR TO FITTING WOODEN SUBFLOOR,
IF SUBFLOOR ALREADY INSTALLED, PLEASE
REMOVE THE SUBFLOOR OUT OF THE SHED

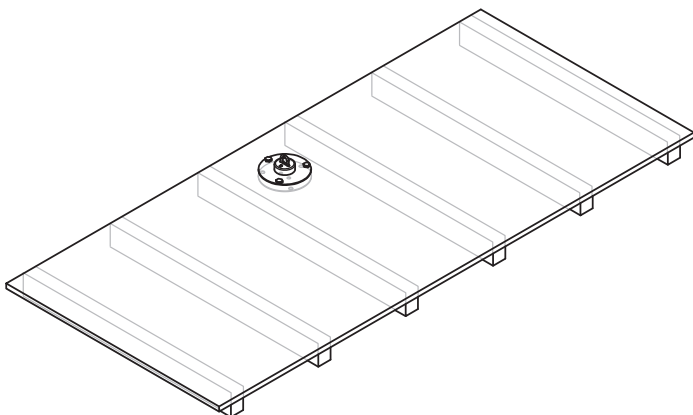


2! USE YALE BRACKET DISC AS TEMPLATE
TO DRILL 5x M10 HOLES

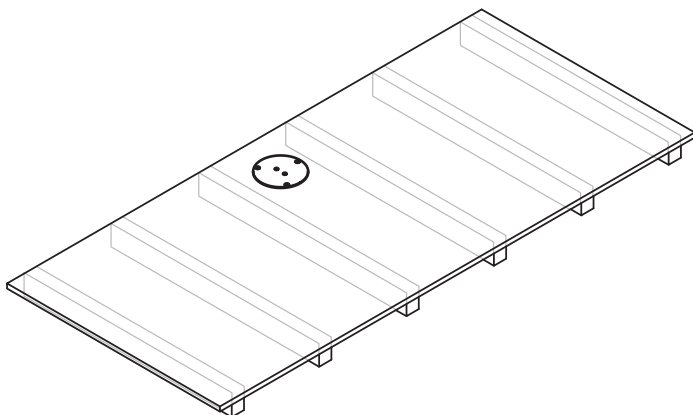


3! PLACE YALE ANCHOR PLATE UNDER
YALE BRACKET, SLOTTING TOGETHER
THE 2 CENTRE HOLES

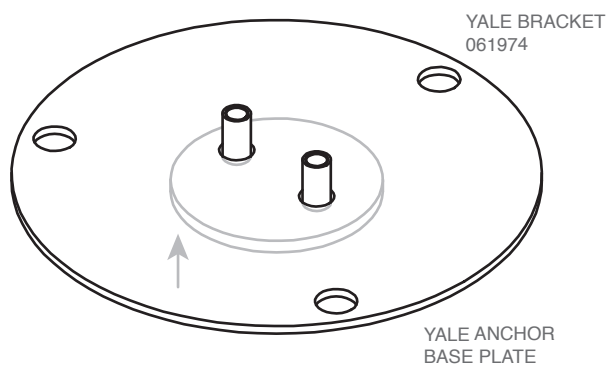

4! PLACE STEP 3 CONFIGURATION UNDER
SUBFLOOR. ADD NEXT YALE BRACKET ON
TOP OF SUBFLOOR & CONNECT TOGETHER

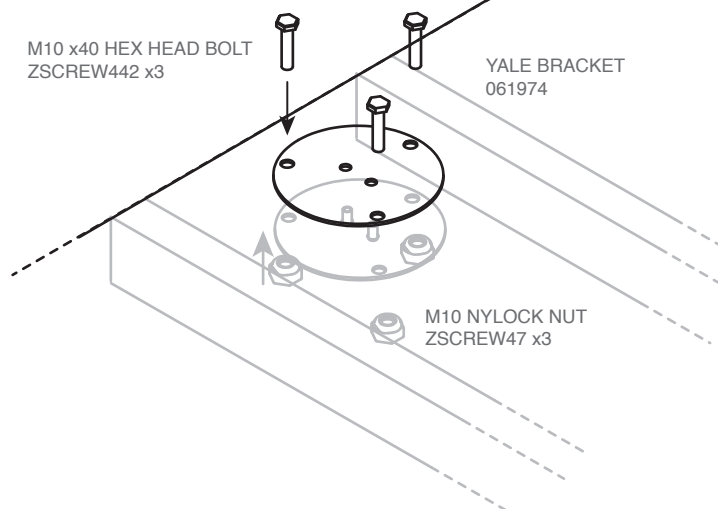

5! CONNECT YALE TOP INNER SECTION
TO YALE BASE PLATE USING YALE
ANCHOR SCREWS

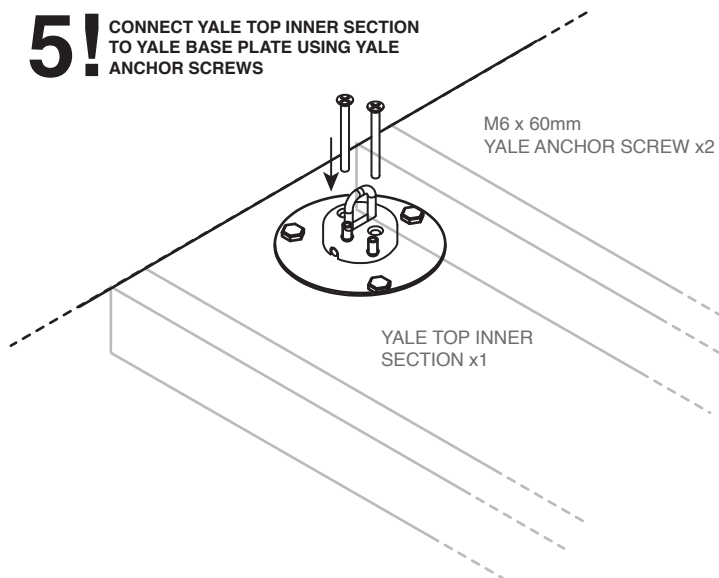

6! FINISH WITH YALE TOP OUTER
SECTION

