
SENTRY SHED

BASE INSTRUCTIONS
Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2400mm x 1200mm x 50mm.

LEVELING THE UNIT
Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor the unit to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to seal the fixing holes from underneath.

TOOLS REQUIRED
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill, a 10mm socket or spanner.

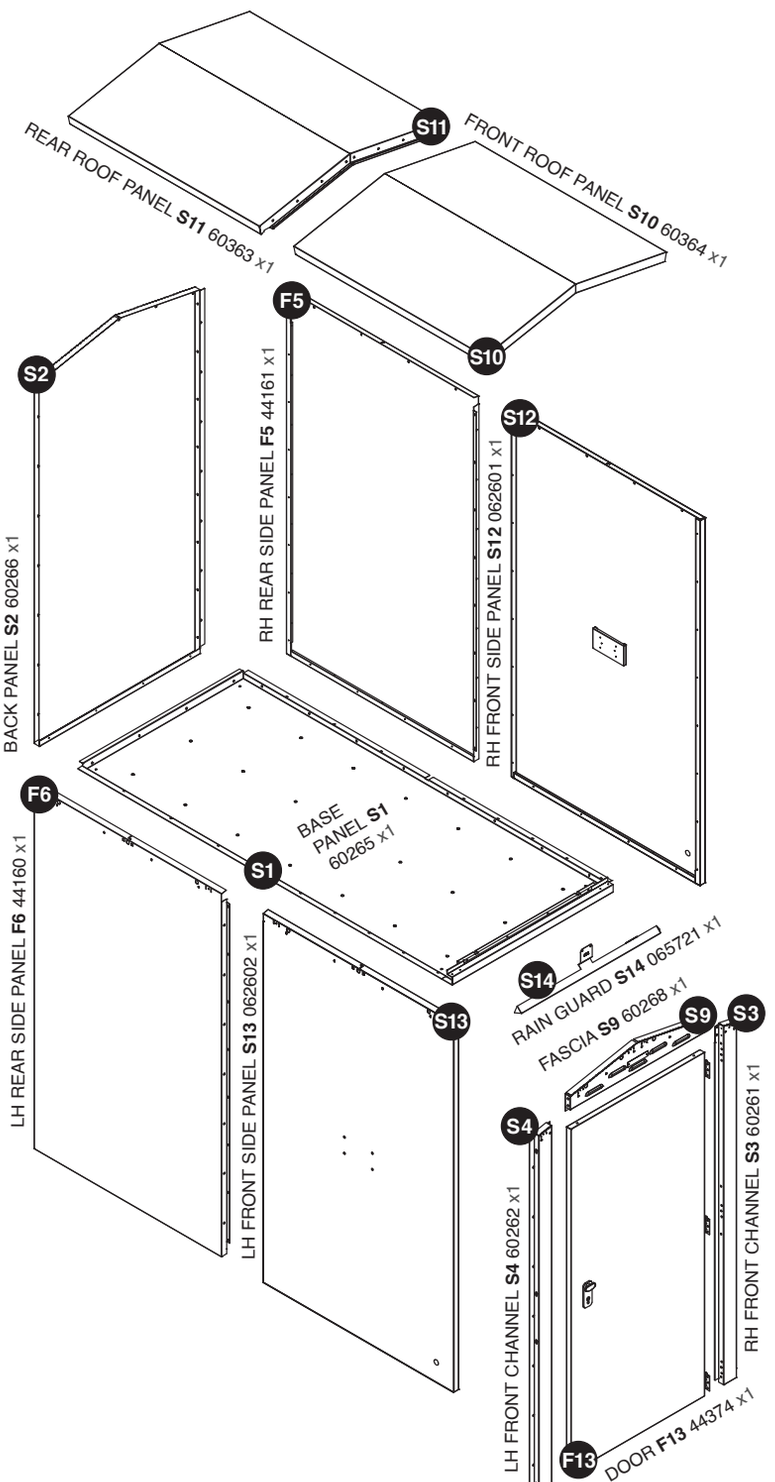


Warning: some panels may weigh over 20Kg. Beware of manual handling


SEALANT ZSILCOL1 x1


ZSCREW32 x4



ZCOMPPLAS02 x12


ZCOMPPLAS22-23-24 x6
2x 2mm, 2x 3mm, 2x 5mm


32670 x18


ZSCREW340 x9


ZSCREW61 x188




Warning: Please keep this key card safe! Refer to if replacement key is required.


Posi-Driv Screwdriver


6mm Dia.


10mm Spanner

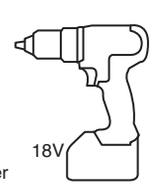

18V



For maintenance instructions of this product visit www.asgardsss.co.uk


PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

1

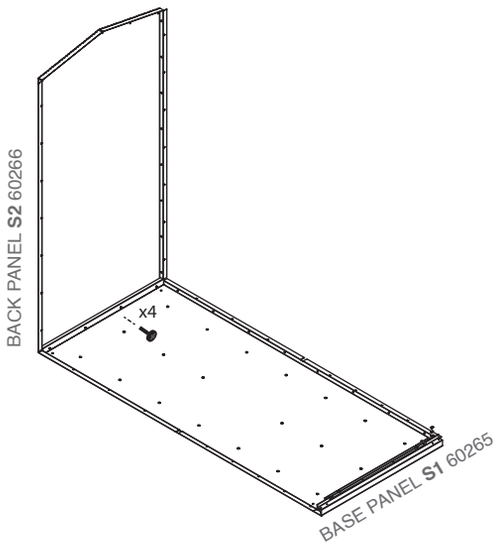


x4

2

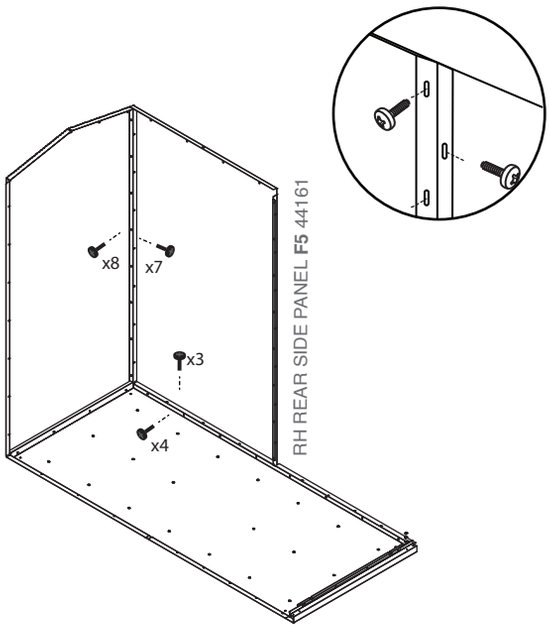


x22

3

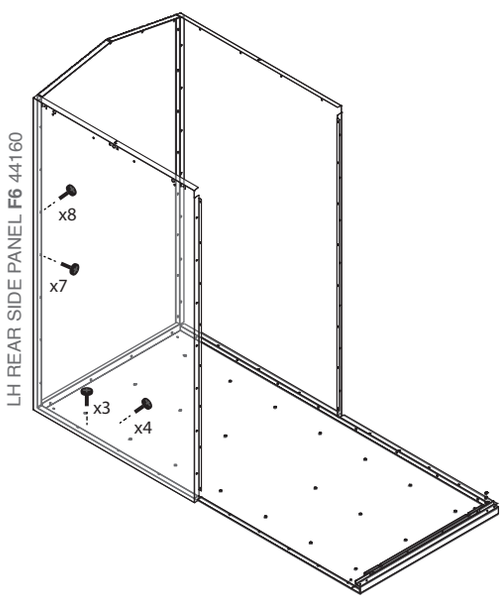


x22

4

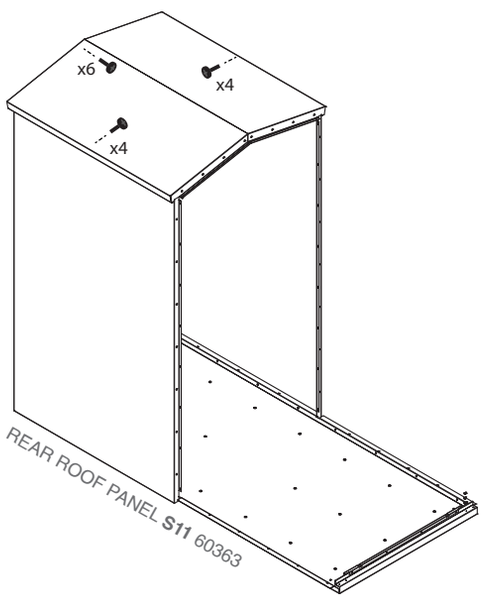


x14

5

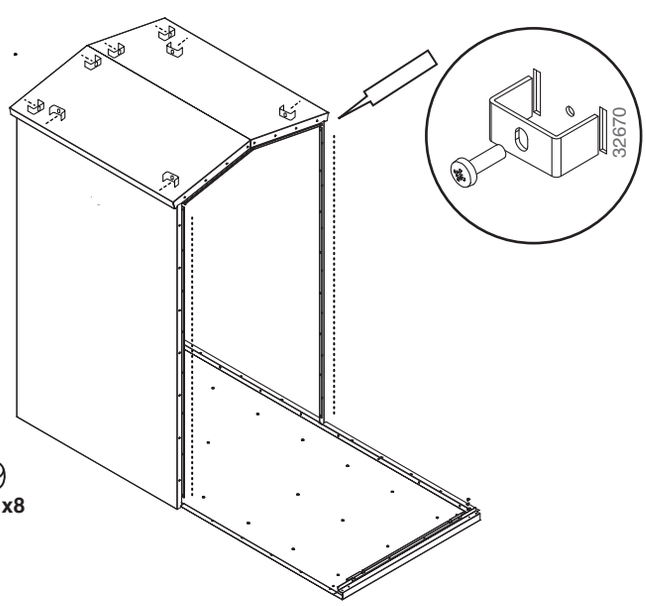


x8

6

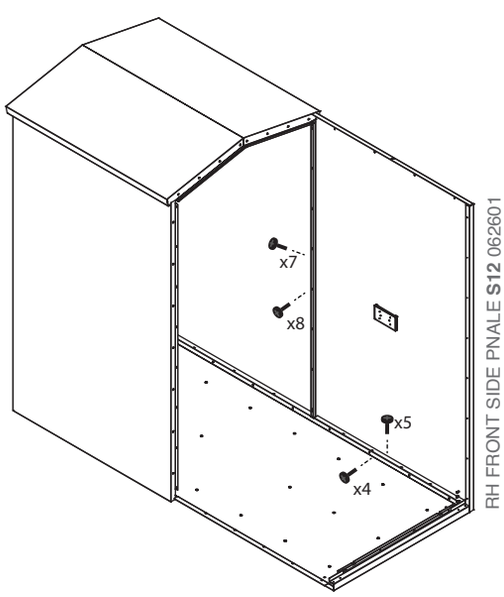

x24


7! RUN A CONTINUOUS BEAD OF SILICONE UP THE VERTICAL FRONT JOINTS & ALONG THE TOP EDGE OF BASE WHERE IN CONTACT WITH THE FRONT CHANNELS

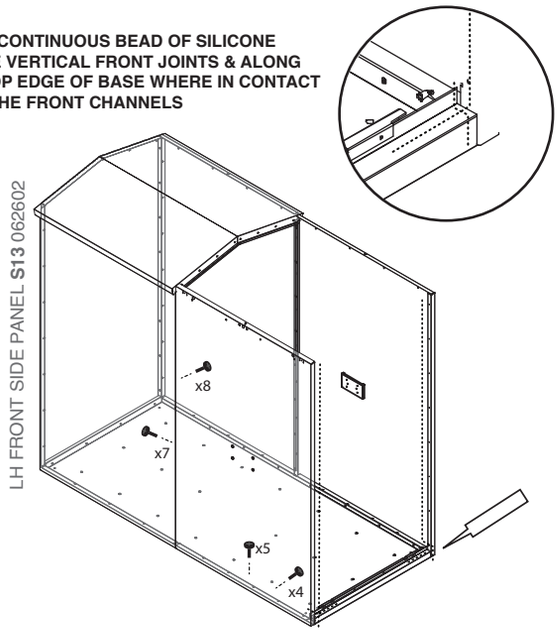





x24

8! PARTIALLY SCREW IN A ZSCREW61 INTO HOLES 1, 4, 5 & 8 ON BOTH SIDES OF THE SHED, LEAVING A GAP OF 5MM



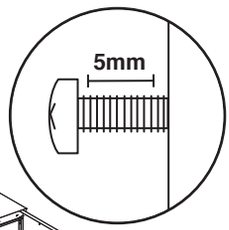

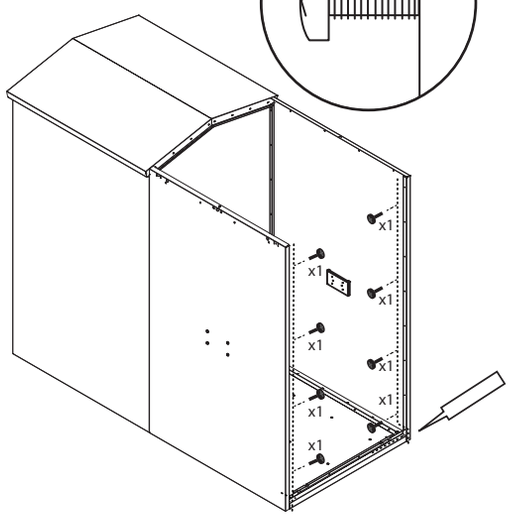




x8


9! PLACE CHANNELS OVER SCREWS AND DROP INTO PLACE




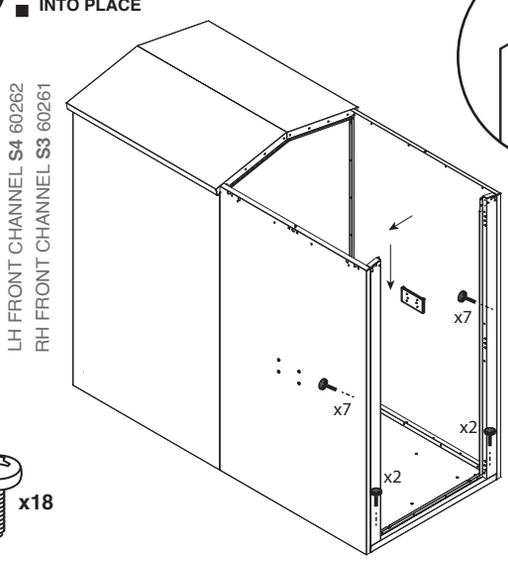

x18


10! TIGHTEN SCREWS FROM STEP 8 THROUGH THE ACCESS HOLES

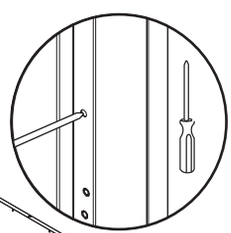

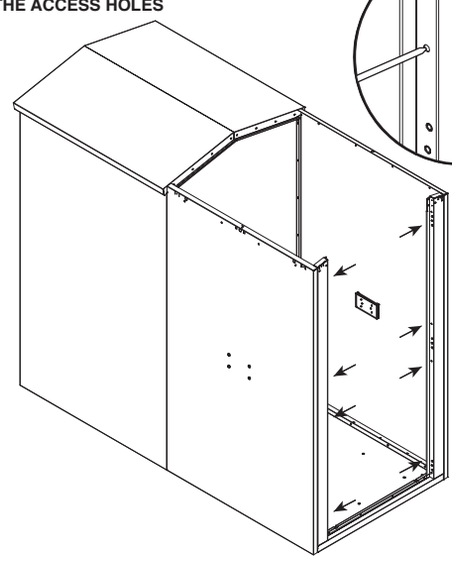




11! SEAL ACCESS HOLES WITH ZCOMPPLAS02

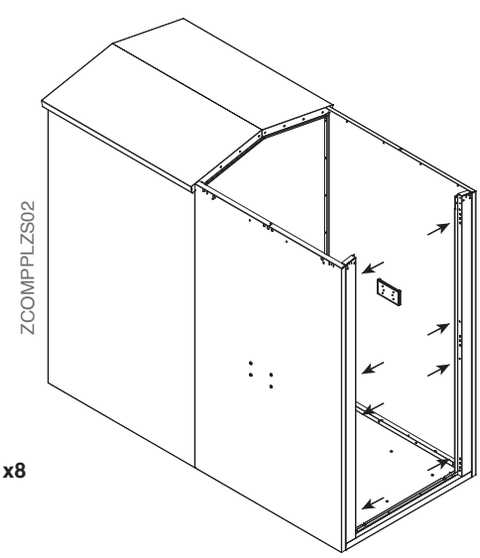



x8


12

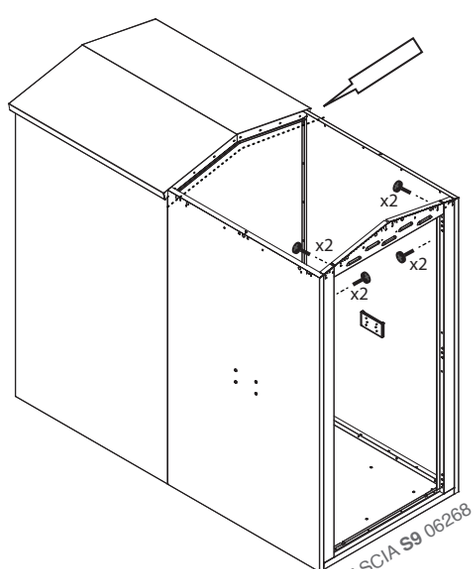



x8


13

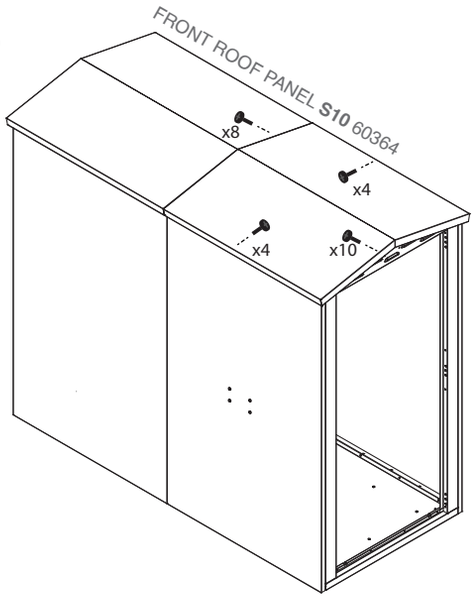



x26


14

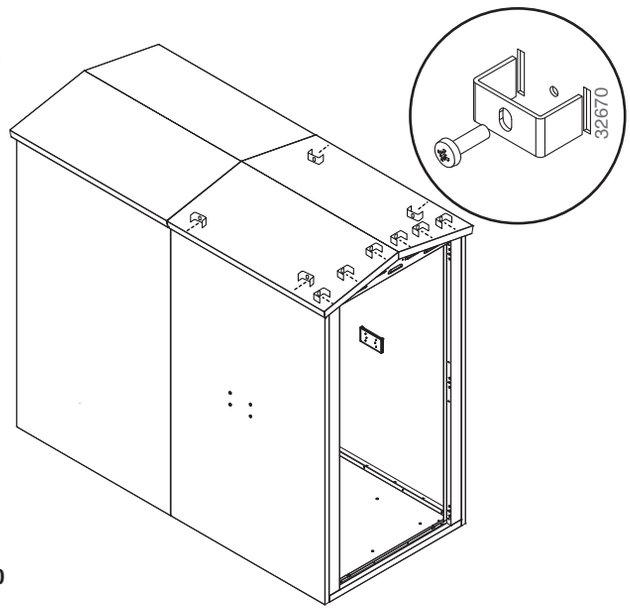



x10

15

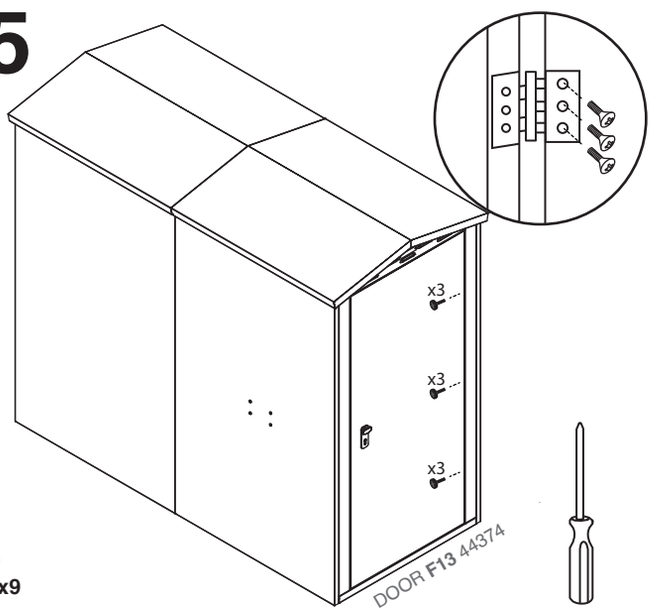




x9


16!


SLOT THE THREE TABS ON THE RAINGUARD THROUGH THE VENTS

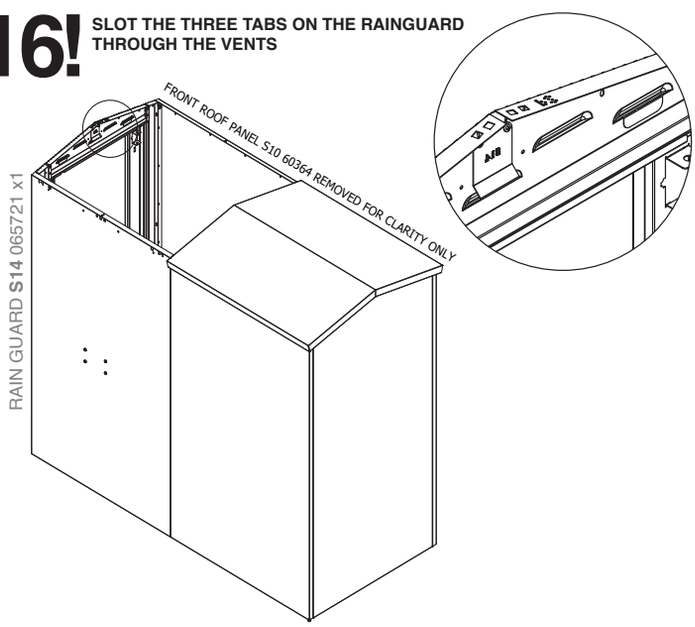

17!

APPLY A BEAD OF SILICONE TO THE UNDERSIDE OF THE RAIN GUARD AND BEND DOWN THE TWO SMALLER TABS

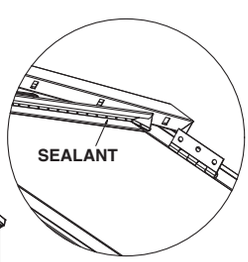


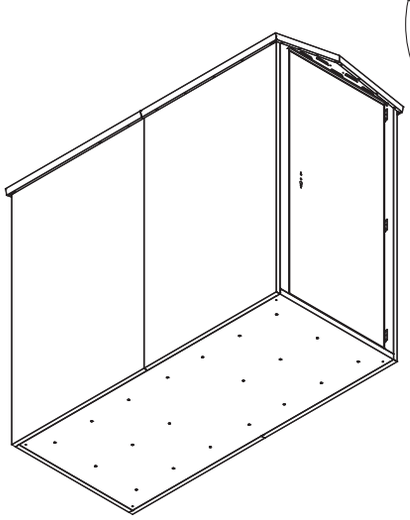





18!

LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

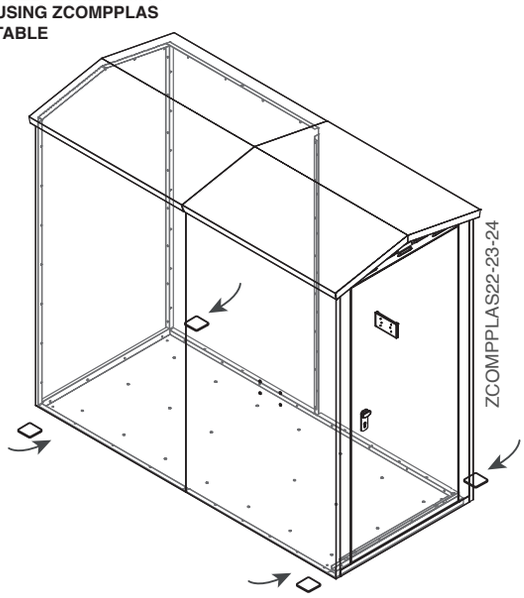



19

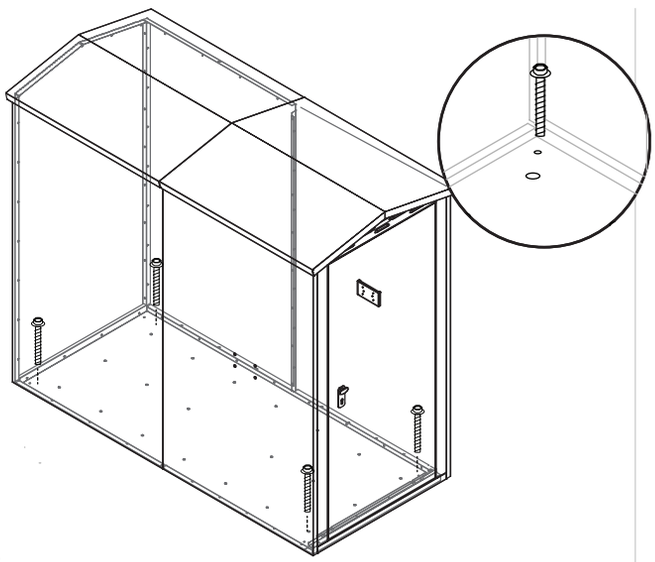



x4

20! SEAL ALL INTERNAL CORNERS

