

CENTURION P3 GARDEN SHED - ELECTRIC READY



BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 5916mm x 1730mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.


It is always recommended to anchor the unit to the ground. Drill through the four holes in each of the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs **BEFORE BUILDING** to seal the fixing holes from underneath. **Please note product must be bolted down to comply with LPS1175.**

TOOLS REQUIRED







Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.




Warning: some panels may weigh over 20Kg
Beware of manual handling

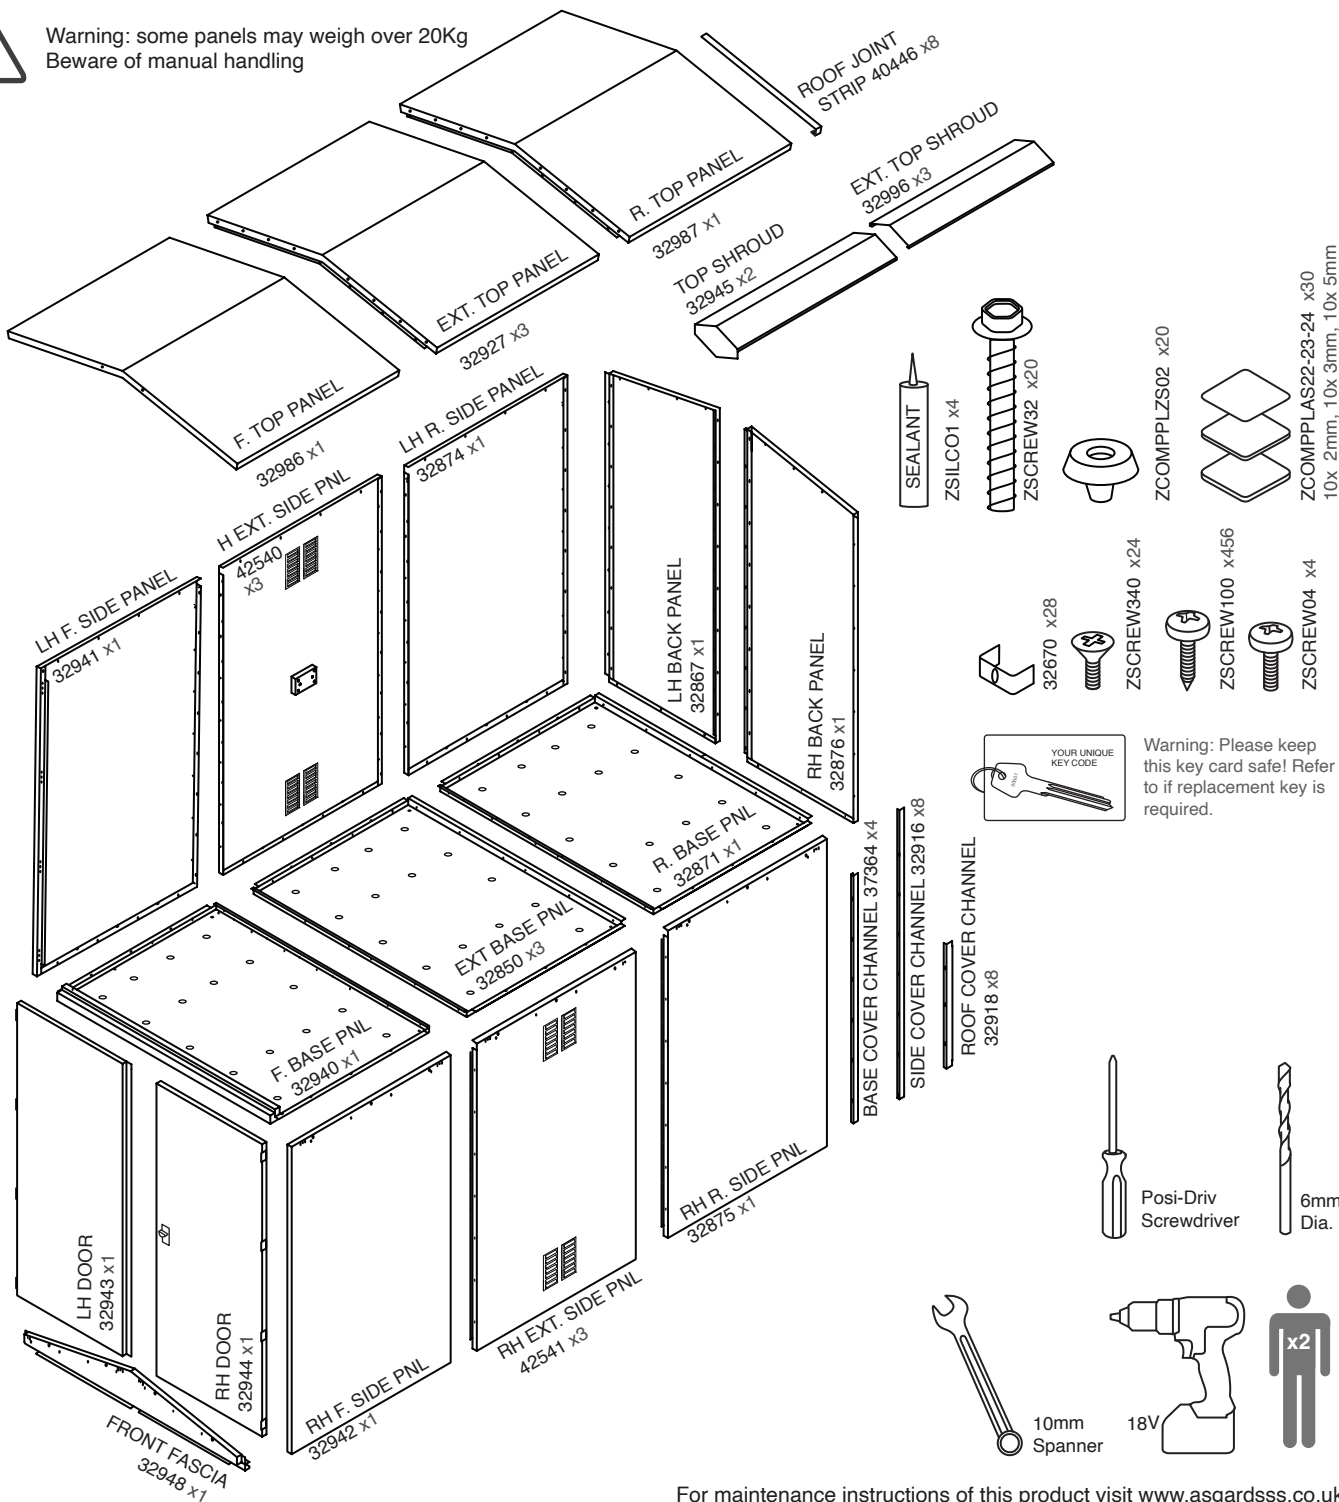

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

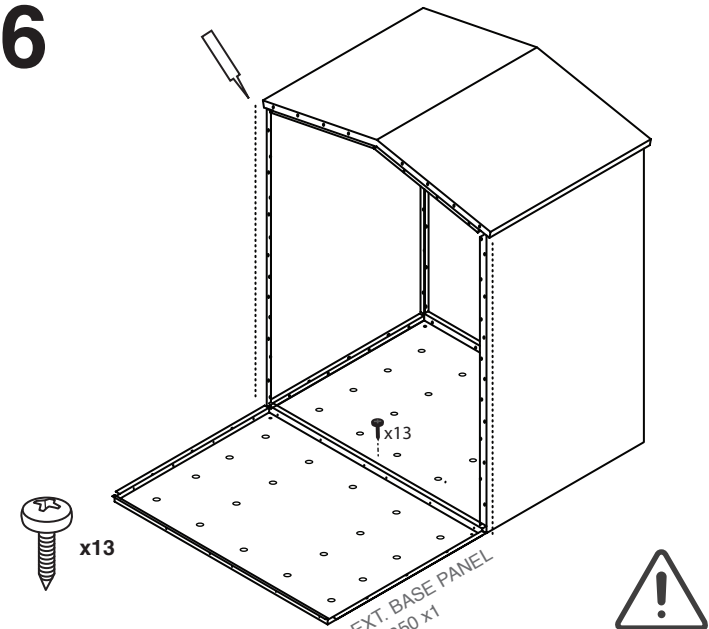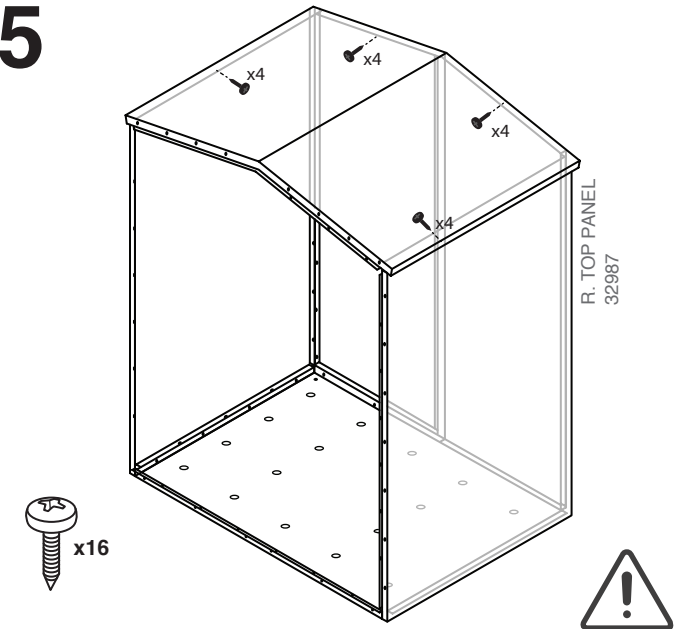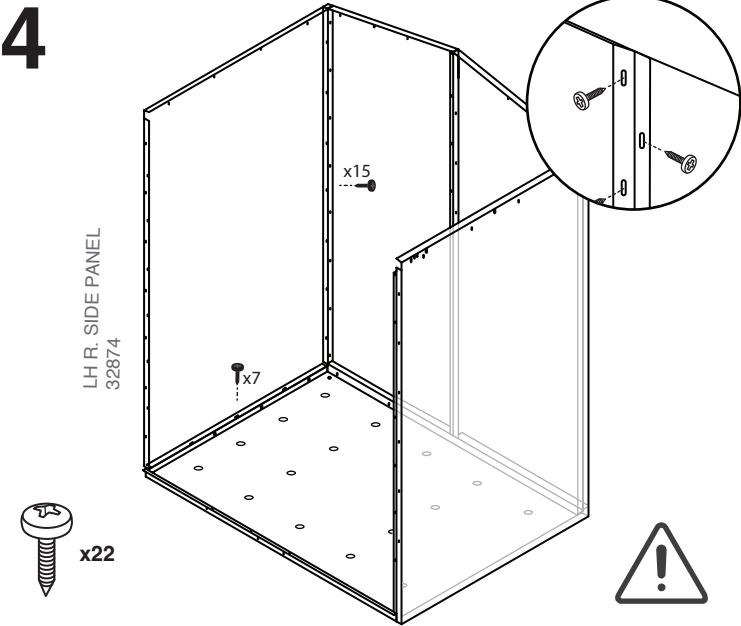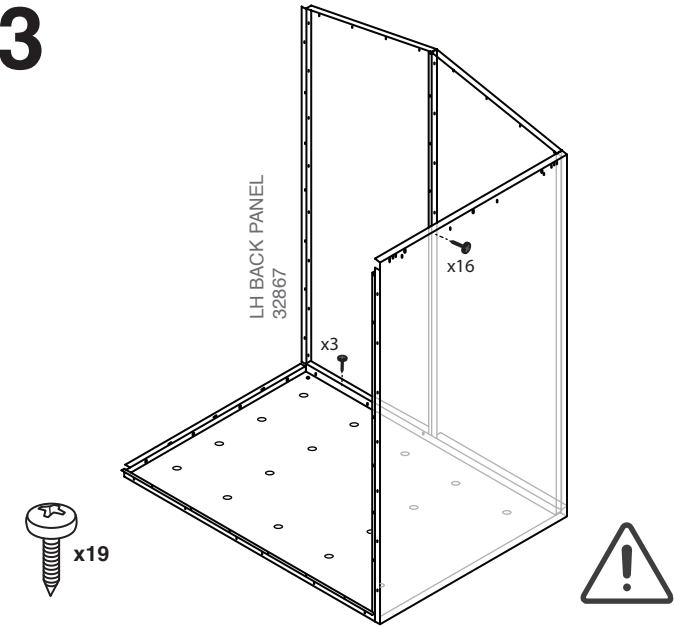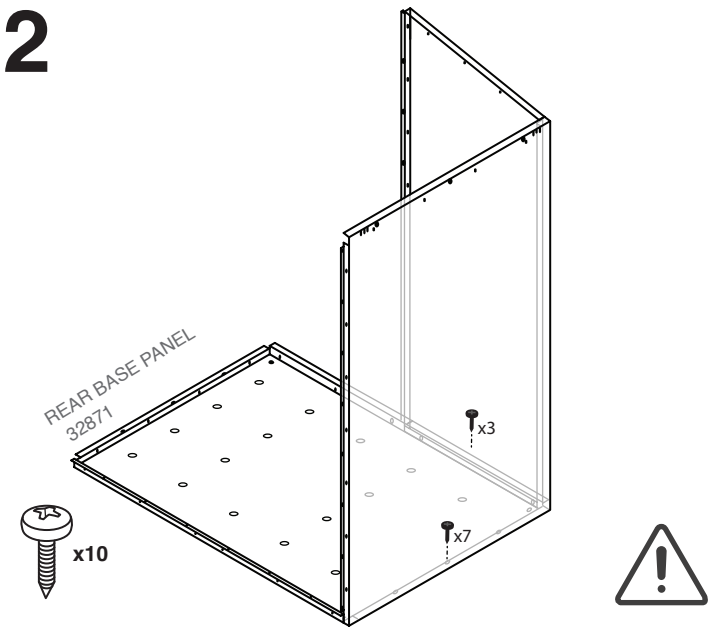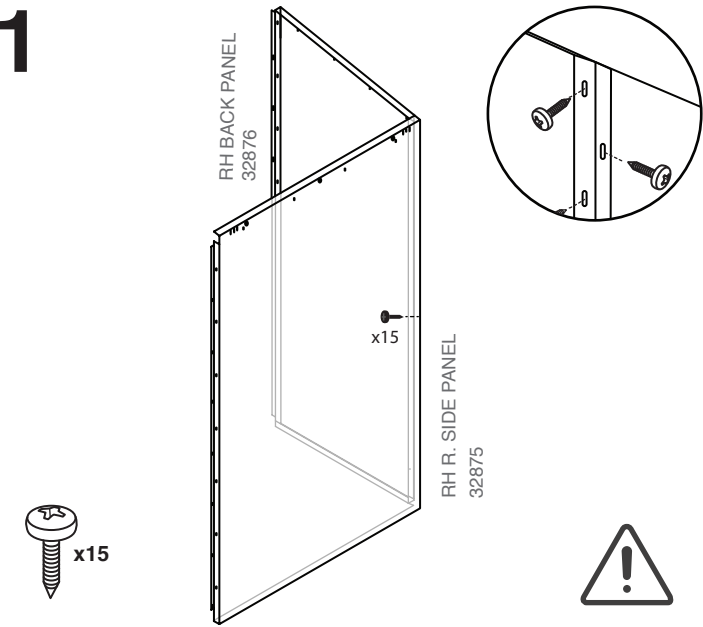


7

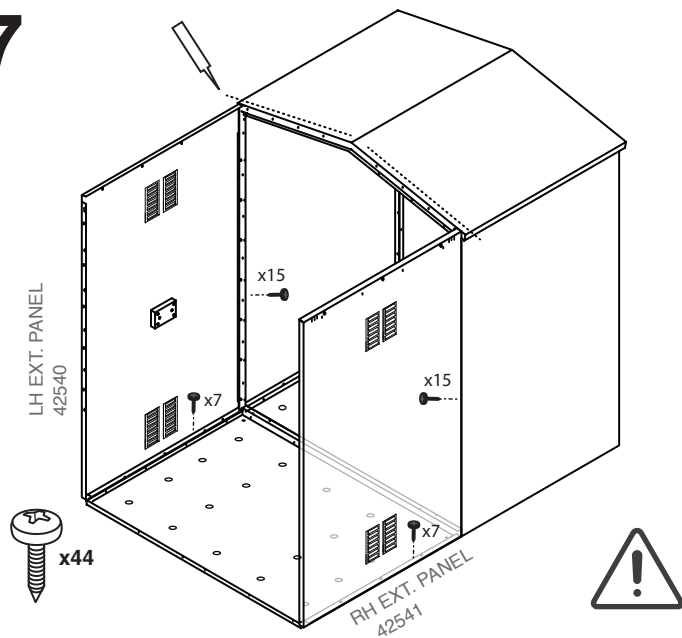


8

REPEAT 6-8 x3

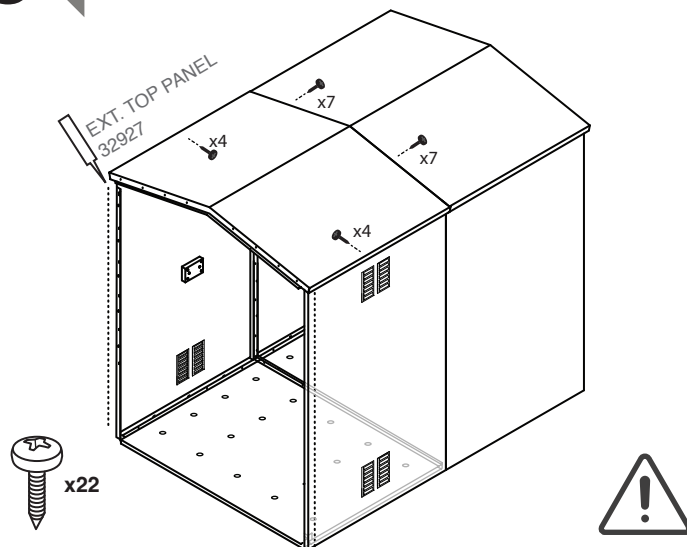


9


IF YOU HAVE AN OPTIONAL RAMP, PLACE UNDERNEATH FRONT BASE PANEL AT THIS STAGE

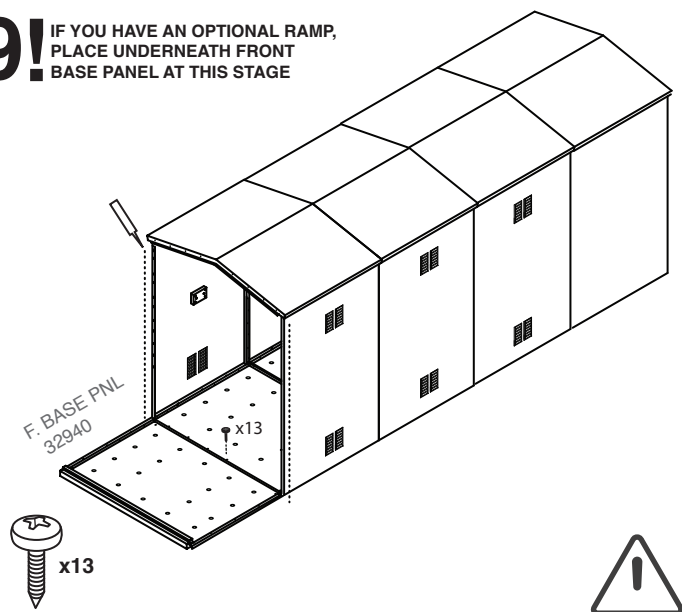


10

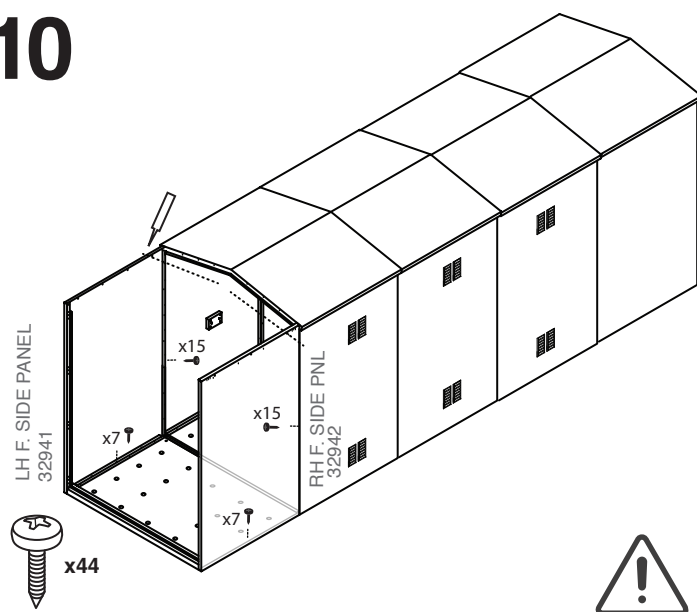

11

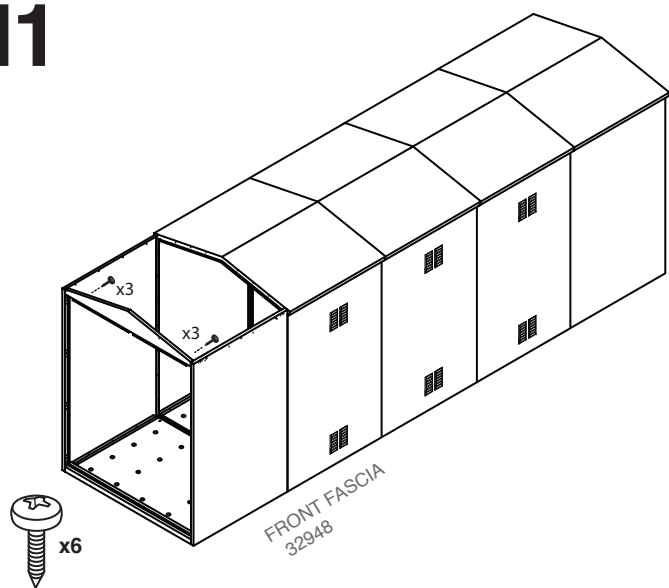

12

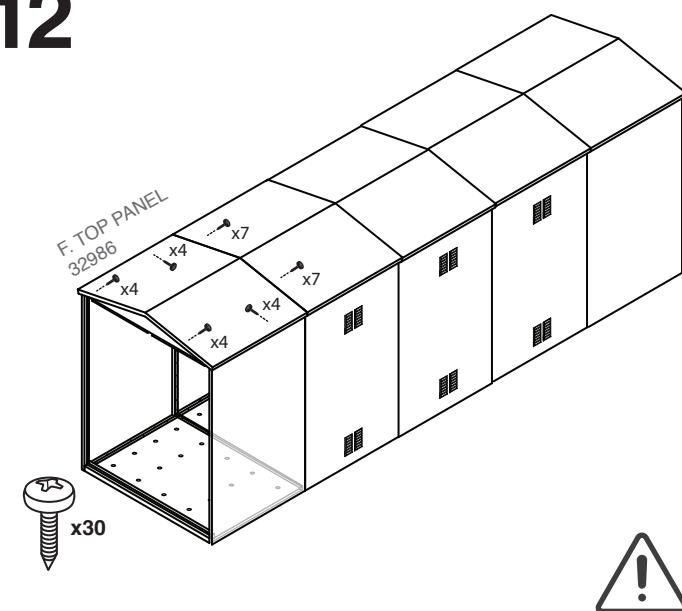

13

LH DOOR
32943

x3
x3
x3
x3
x3

RH DOOR
32944

x3
x3
x3
x3
x3

x24

Diagram 13 illustrates the process of attaching the door to the frame. The diagram shows a perspective view of the unit with the left door (LH DOOR 32943) and right door (RH DOOR 32944) being attached. Callouts indicate 'x3' screws for the top and bottom of each door. A circular inset shows a close-up of the door hinge assembly with two screws. A screwdriver icon and a warning triangle are also present.

14! NO SCREWS REQUIRED
TOP END OF STRIP TRAPPED
UNDER TOP CAP

ROOF JOINT STRIP END
40446

x4

x4

x4

TOP SHROUD
32945 x2

EXT. TOP SHROUD
32996 x3

x16

ROOF JOINT STRIP 40446
APPLY TO ALL INSIDE EDGES
AND FIT FIRST

15


SHROUDS 32996 & 32945
ROOF JOINT STRIP 40446

x2

x4


ROOF STRIP

16

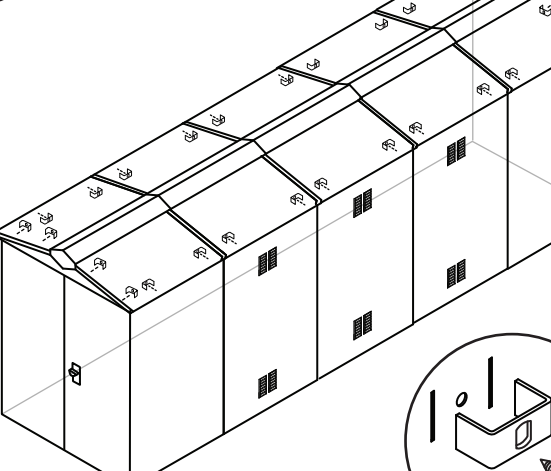

This diagram shows the final assembled unit, a long 16-drawer cabinet. A circular inset provides a detailed view of the corner assembly, showing an L-shaped bracket (part 32670) being secured with a screw (part 32670) to join the side and front panels.

17 ! REMOVE SCREWS WHICH ALIGN WITH THE COVER CHANNELS.
ALIGN AND PLACE SCREWS BACK

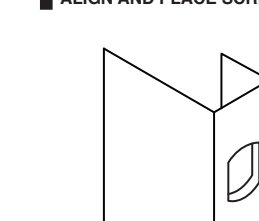

SIDE COVER CHANNEL 32916
ROOF COVER CHANNEL 32918
BASE COVER CHANNEL 37364

18!

LEVEL SHED UNTIL DOORS
ALIGN USING ZCOMPPLAS
AS SUITABLE

ZCOMPPLAS22-23-24

19

