

## FLEXISTORE SUBFLOOR

### COMPATIBILITY

Suitable for the Flexistore 1522 and 1533.

Instructions are illustrated on a Flexistore 1533, however the method applies to both sheds.


### TOOLS REQUIRED

Power driver.


**FLEXISTORE 1522 KIT** 4x Subfloors, 1x Infill Strip, 1x Fixing Bag

**FLEXISTORE 1533 KIT** 6x Subfloors, 2x Infill Strip, 1x Fixing Bag


**Note:** The fitment of the floor joining strip requires the OSB subfloor panels to be correctly positioned (as per the arrows on the instruction), inside the unit.

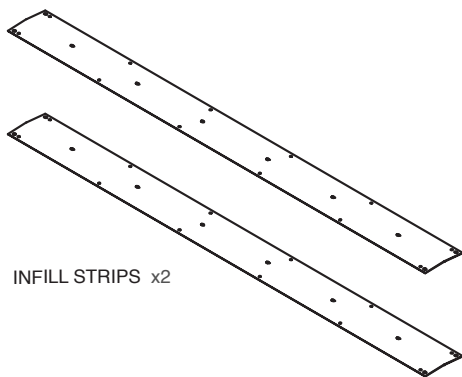


INFILL STRIPS x2

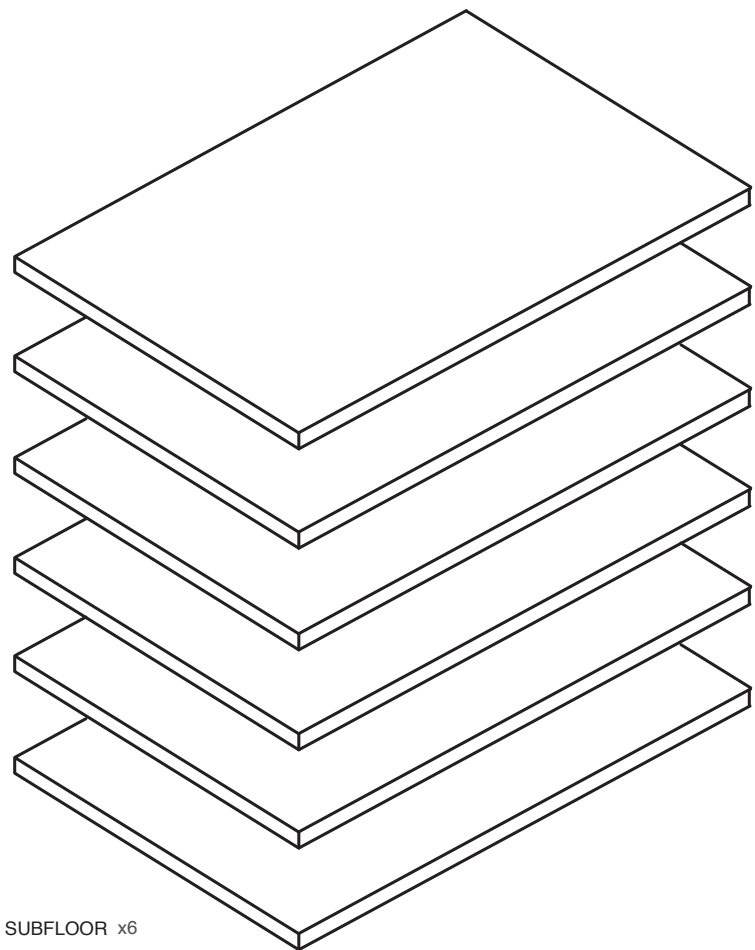


SUBFLOOR x6

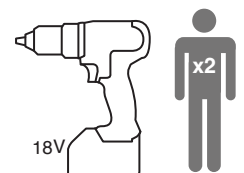


# 1! ASSEMBLE SHED, BOLT DOWN UNIT (OR USE PLUGS) & FIT RAMP PRIOR TO FITTING SUBFLOOR

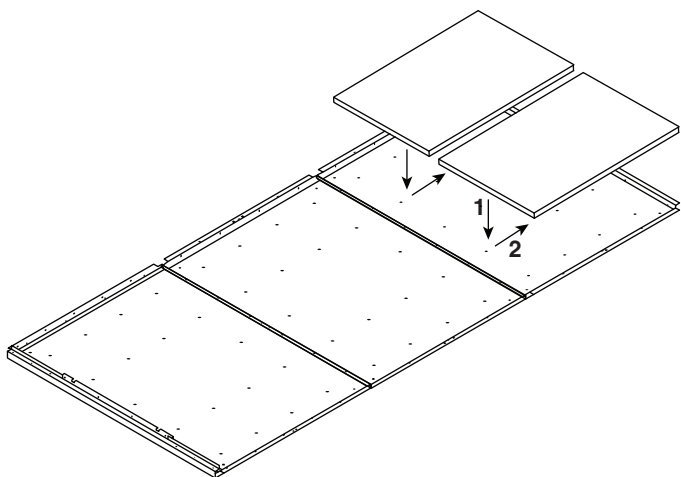


# 2

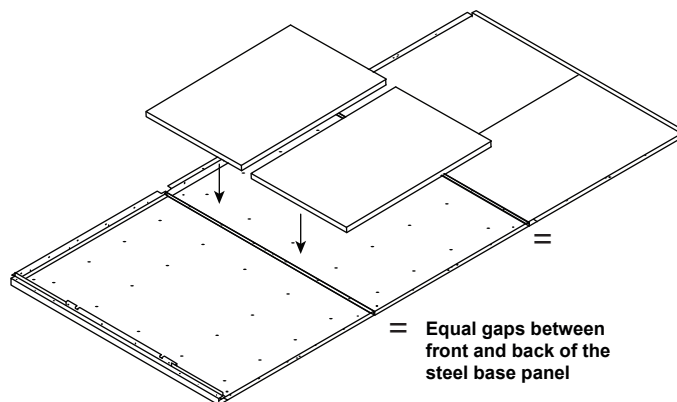


# 3

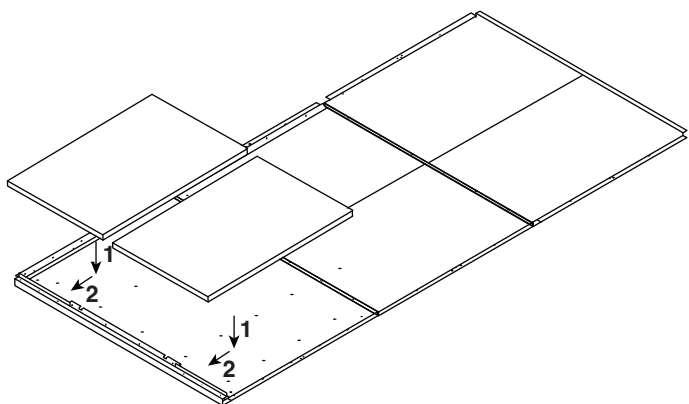

# 4! ALIGN INFILL STRIP WITH BASE JOINT & REMOVE EXISTING TOP BASE JOINT SCREWS

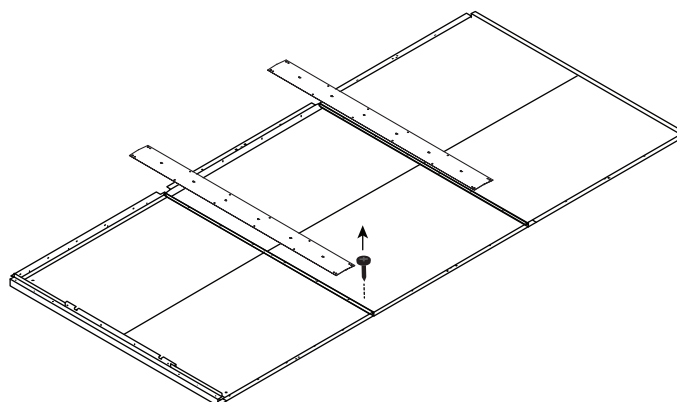

# 5

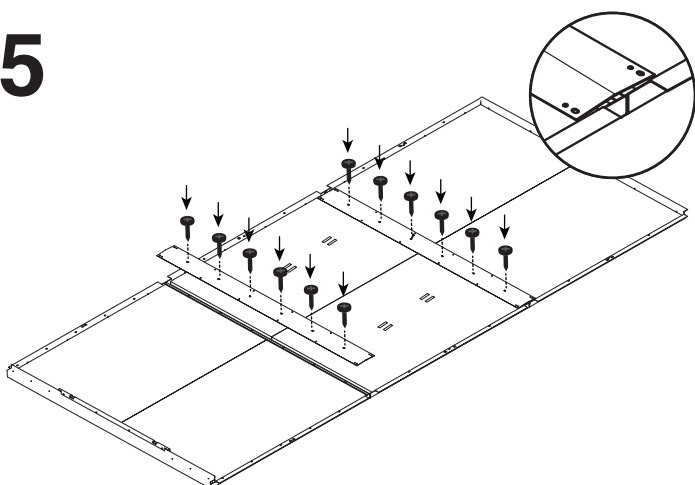

# 6

