


**TOOLS REQUIRED**  
Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill and a 10mm socket or spanner.




PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE


1! SECURE RIGHT HAND SIDE PANEL (V2) TO FLOOR (IIII) WITH ZSCREW100.

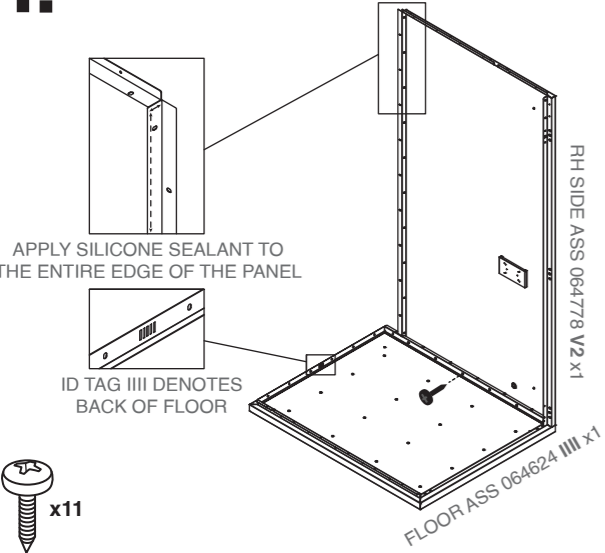


2! SECURE RIGHT HAND PACK PANEL (V4) TO BASE & SIDE PANEL WITH ZSCREW100.

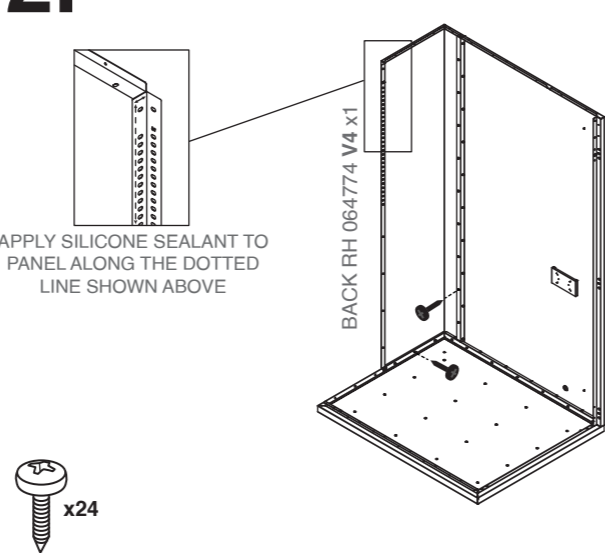


7! POSITION OVERHANGING TOP (V6) AND SECURE WITH 25 ZSCREW100.

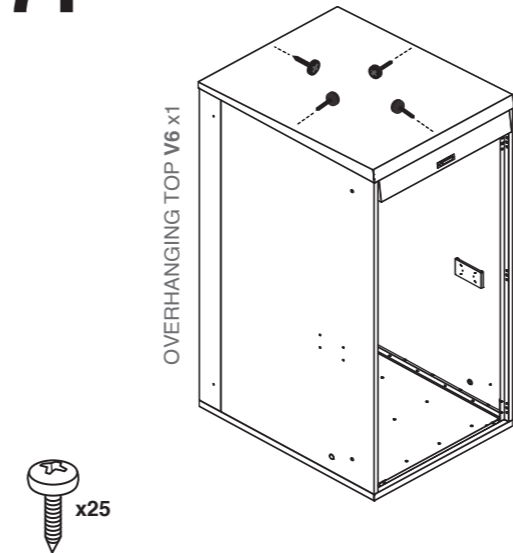


8! POSITION DOOR (V8) AND SECURE WITH 9 ZSCREW340.

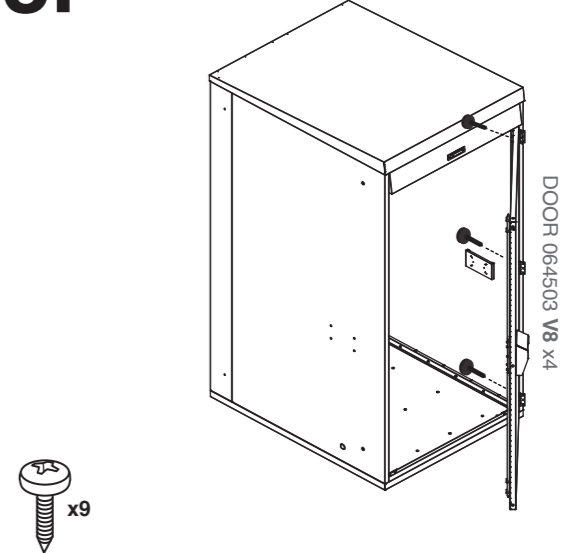


3! SECURE LEFT HAND SIDE PANEL (V1) TO BASE WITH 11 ZSCREW100.

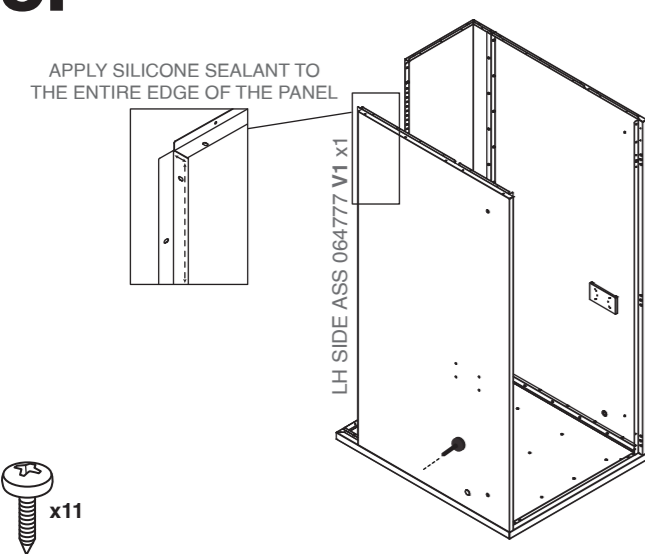


4! SECURE LEFT HAND SIDE PANEL (V1) TO BASE WITH 35 ZSCREW100.

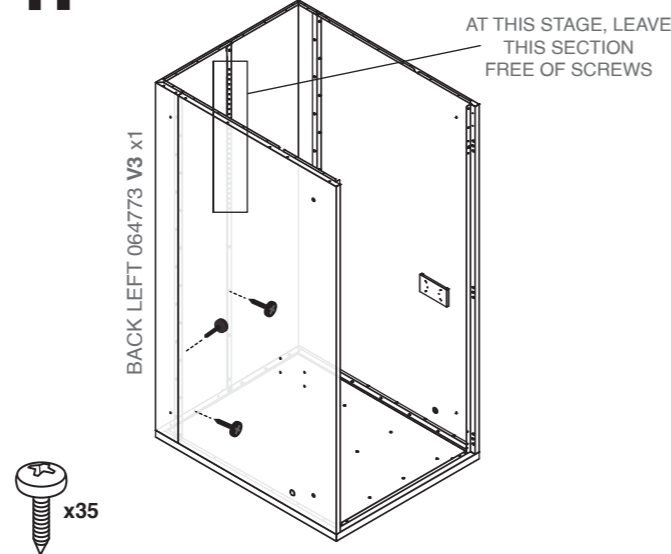


9! ENSURE THE BIKE LOCKER IS LEVEL USING SHIMS. THE DOOR WILL CLOSE CORRECTLY IF SO.

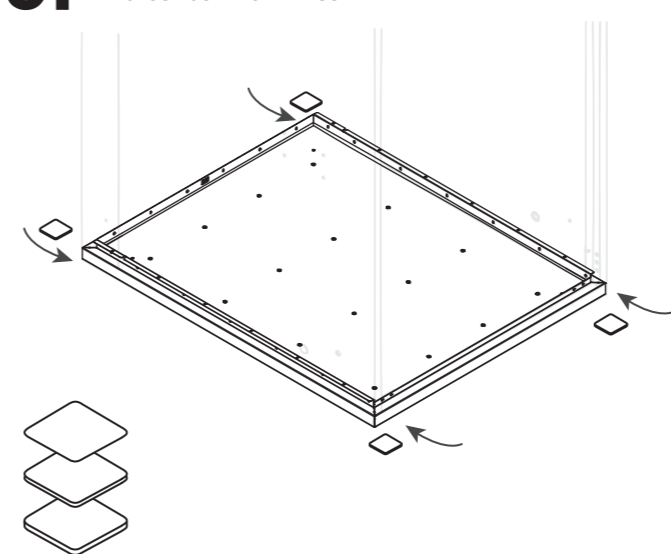


10! ONCE LEVEL, FILL FOUR FIXING HOLES WITH SILICONE SEALANT THEN SECURE LOCKER TO THE GROUND WITH 4 ZSCREW32

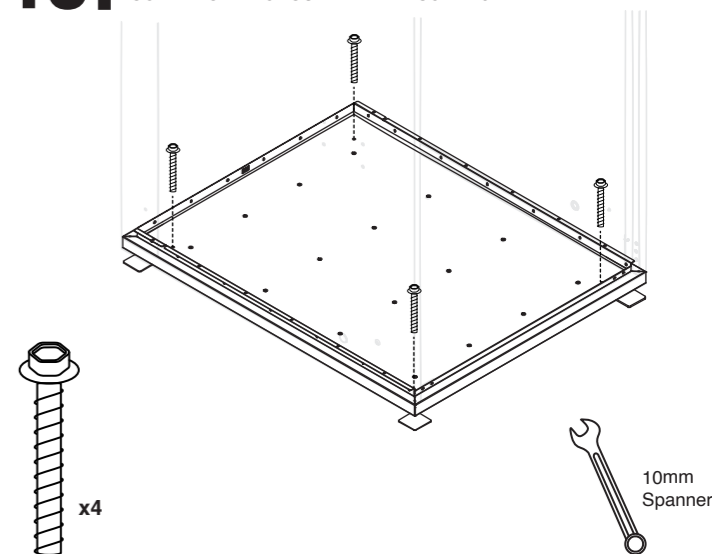


5! FIT FASCIA PANEL (V7) USING 4 ZSCREW100.

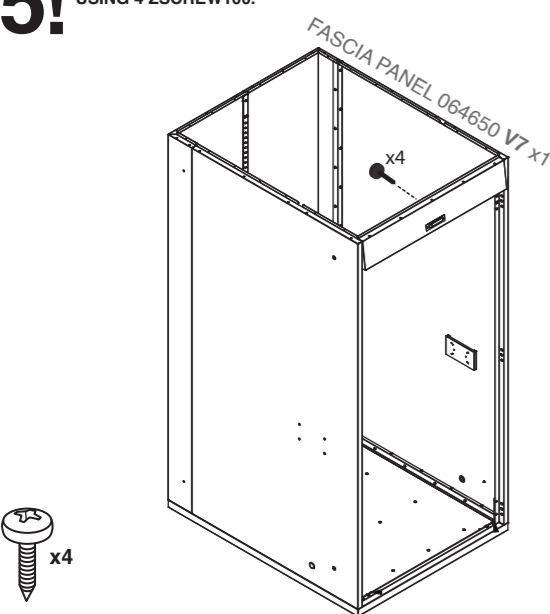

6! POSITION 1 'L' BRACKET IN EACH CORNER OF THE DOOR OPENING. SECURE WITH 16 ZHWNUT41 and 16 ZSCREW340.

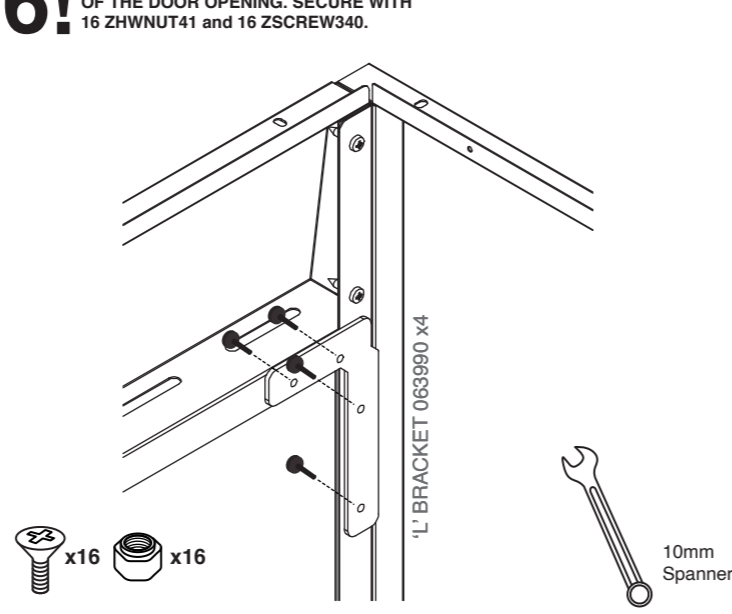

11! POSITION THE BIKE SUPPORT TO SUIT THE HEIGHT OF BIKE AND SECURE WITH 4 ZSCREW100.

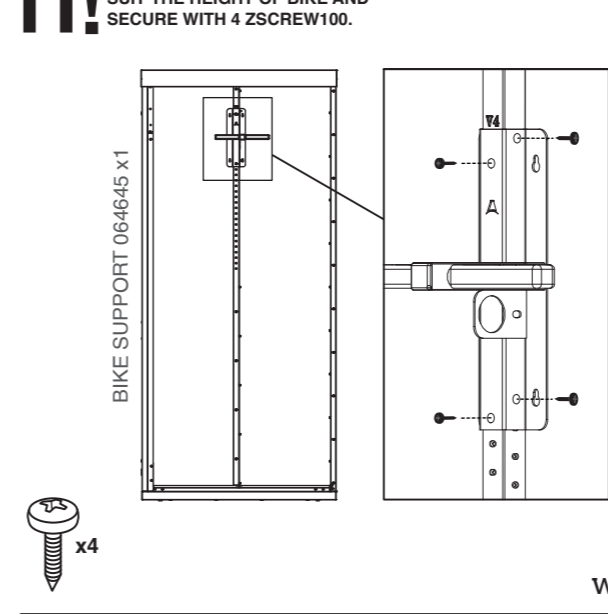

12! PLACE TOP RAIL IN 2 SIDE CUT OUTS.

