
ASGARD GROUND ANCHOR

COMPATIBILITY
All Asgard shed subfloors.


TOOLS REQUIRED
M10 Ratchet, M17 Spannzzzzzzzzzzer, Philips Screwdriver, Marker Pen, 12mm Drill, 12mm masonary drill (for fitting through metal base only).

PLEASE NOTE
Asgard will only fit the ground anchor into our wooden sub floors. If you wish for this to be fitted directly into the metal floor Asgard will not fit as part of our standard installation service. This would be a customer fit only product.

*Included within ground anchor pack

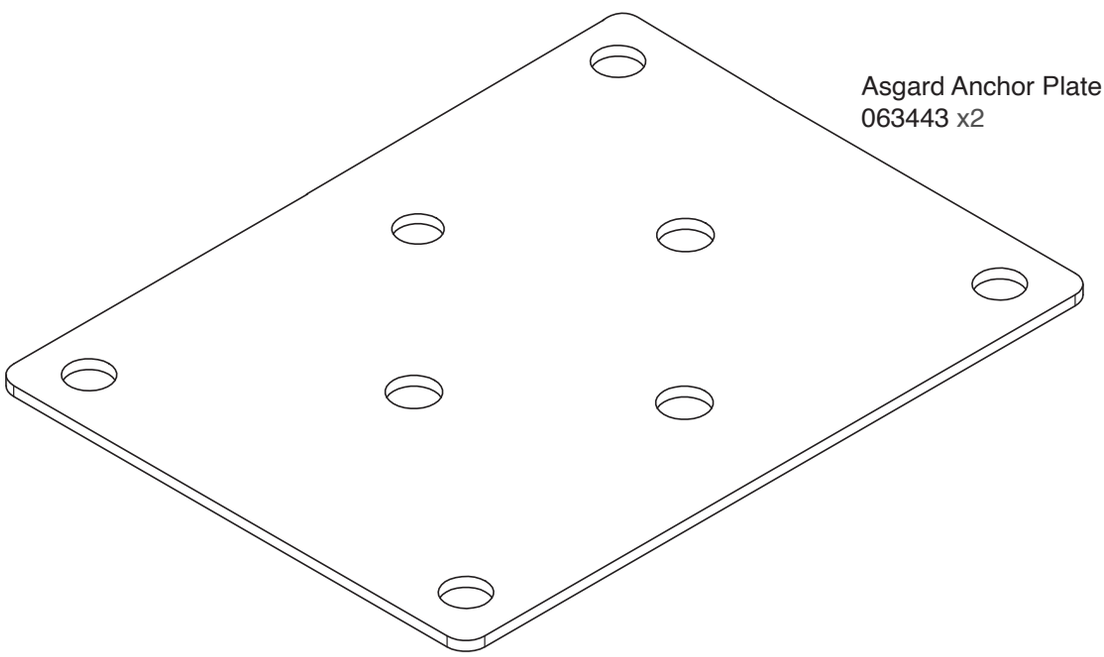

Asgard Anchor Plate
063443 x2

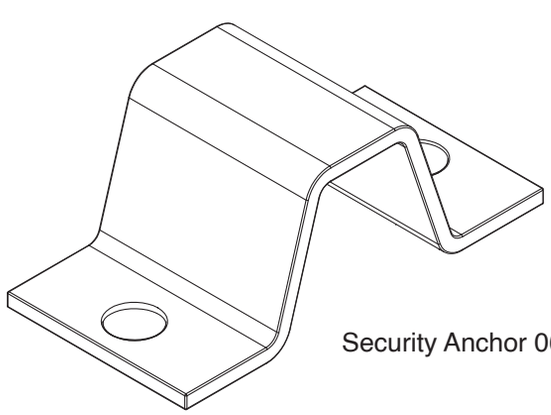

Security Anchor 067225 x1



*04 BALL BEARINGS x2




*M10x70 x2



*M10 RAWL PLUGS x2




ZSCREW465
M10x50 x2



ZSCREW442
M10x40 x4



ZHWNUT47
M10 NYLOC
NUT x4

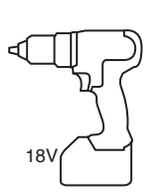





For maintenance instructions of this product visit www.asgardsss.co.uk

THROUGH SUBFLOOR INSTALLATION


1! **INSTALL PRIOR TO FITTING WOODEN SUBFLOOR, IF SUBFLOOR ALREADY INSTALLED, PLEASE REMOVE THE SUBFLOOR OUT OF THE SHED**

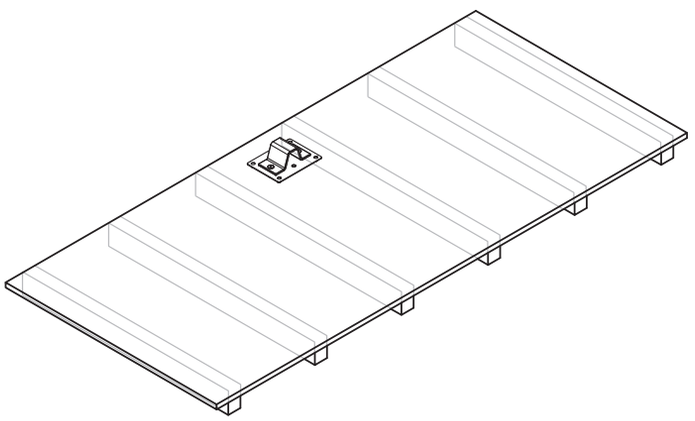


2! **USE ANCHOR PLATE AS TEMPLATE TO DRILL 6x M10 HOLES**

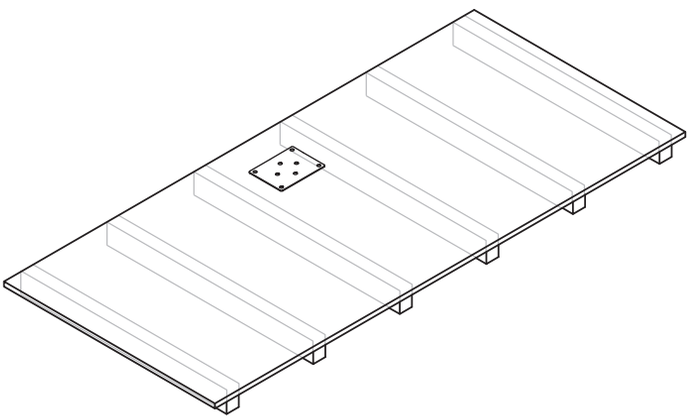


3! **PLACE ONE OF THE ANCHOR PLATES UNDER THE SUBFLOOR. ADD 2ND ANCHOR PLATE ON TOP OF SUBFLOOR & CONNECT TOGETHER**

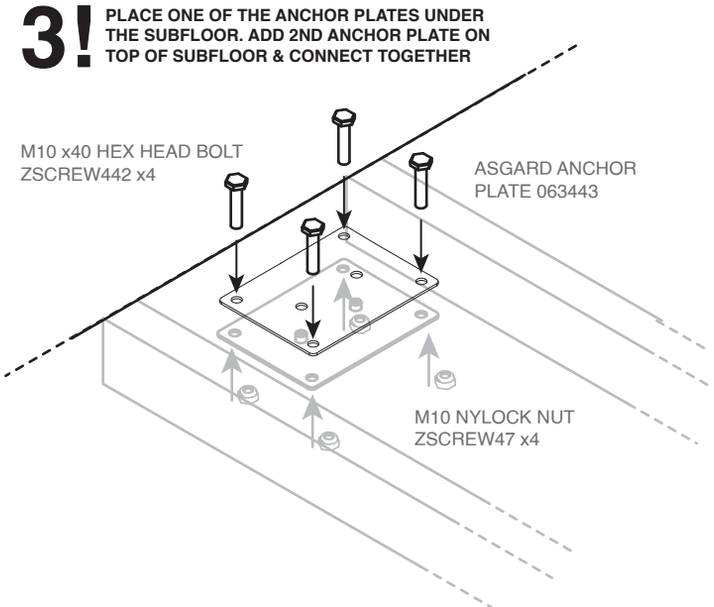

4! **CONNECT THE HOOK PLATE TO BASE PLATE USING ZSCREW453**

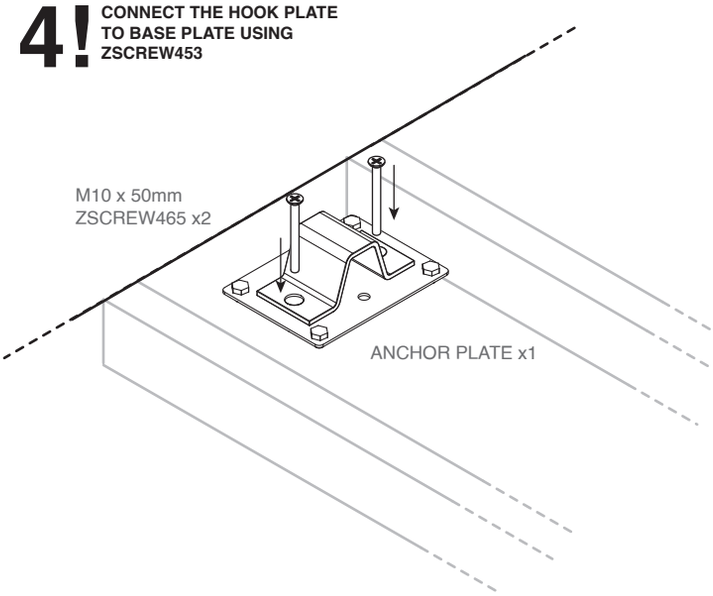


5! **INSERT BALL BEARINGS INTO ZSCREW453.**

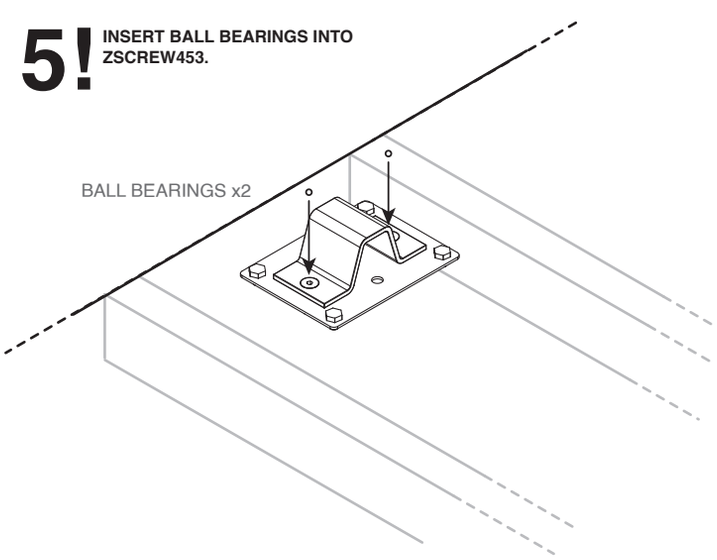


THROUGH METAL BASE INSTALLATION


1 **POSITION THE ANCHOR PLATE IN YOUR SHED AND CIRCLE THE DRILL HOLES WITH A MARKER PEN ONTO THE SHED FLOOR**

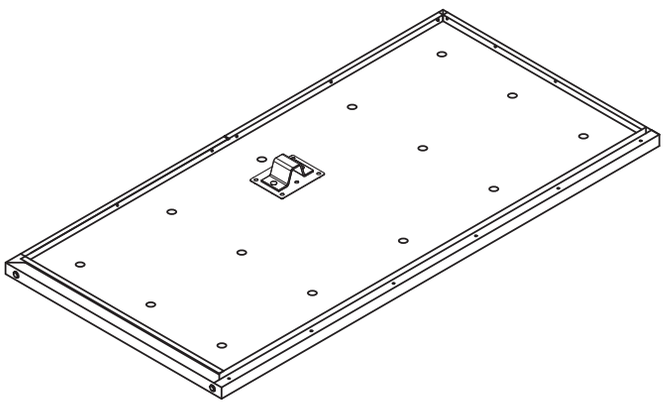


2 **DRILL 2X 12MM HOLES THROUGH THE SHED BASE INTO THE GROUND (70MM DEEP). TREAT BASE WITH RUST INHIBITOR**

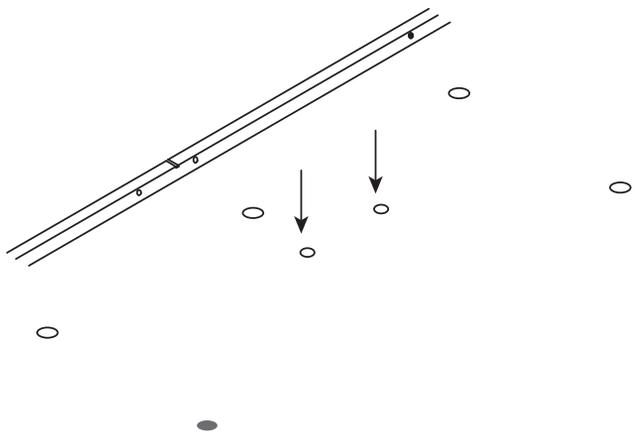

3 **DROP IN THE PLUGS INTO THE HOLE**

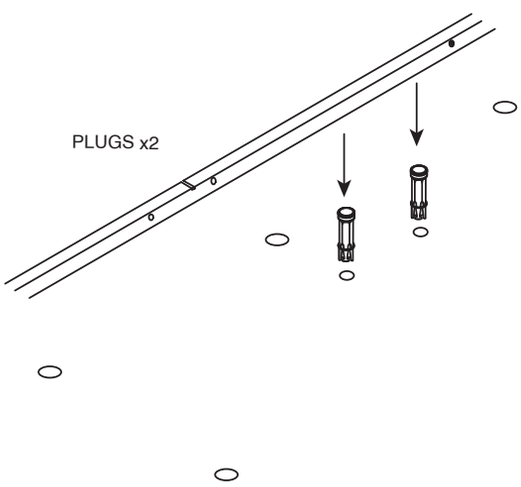

4 **CONNECT THE SECURITY ANCHOR TO BASE PLATE USING M10x70MM SCREW**

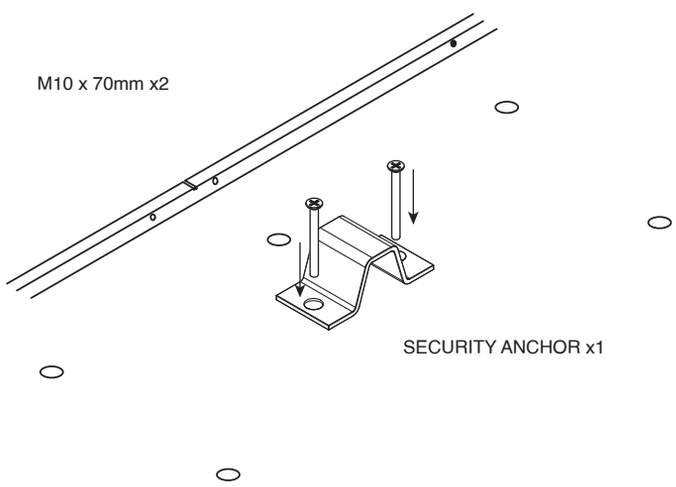

5 **INSERT BALL BEARINGS INTO SCREW HEADS**

