

ASGARD SUPPORT FRAME







COMPATIBILITY

This support frame is compatible with the Asgard Access, Access Plus, Addition, Trojan Plus, Sentry, Secure Store and Flexistore 1511 sheds. The frame dimensions and components will vary depending on the


TOOLS REQUIRED

Screwdriver, Posi-Driv Screwdriver, 10mm Spanner, 14mm Spanner, 4mm Allen Key, Spirit Level

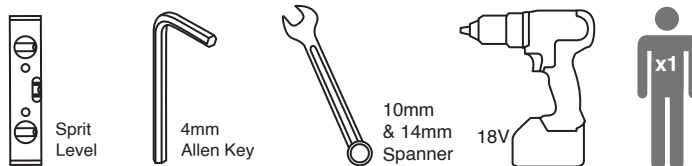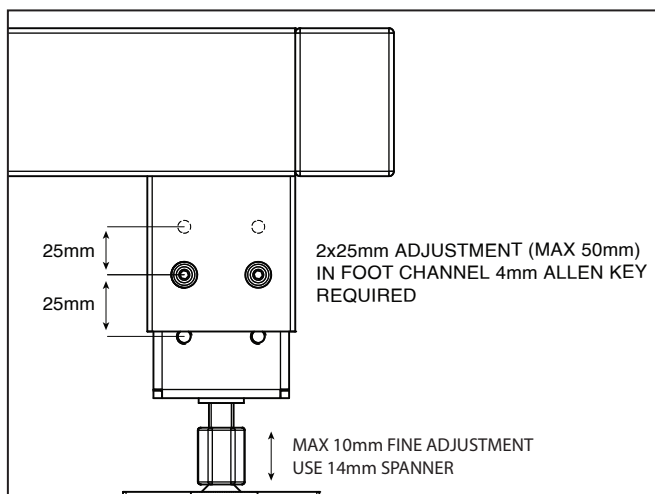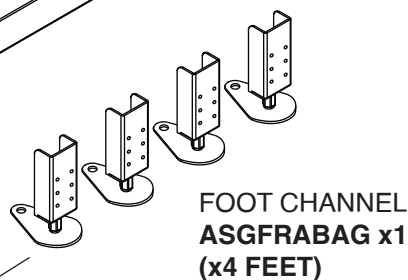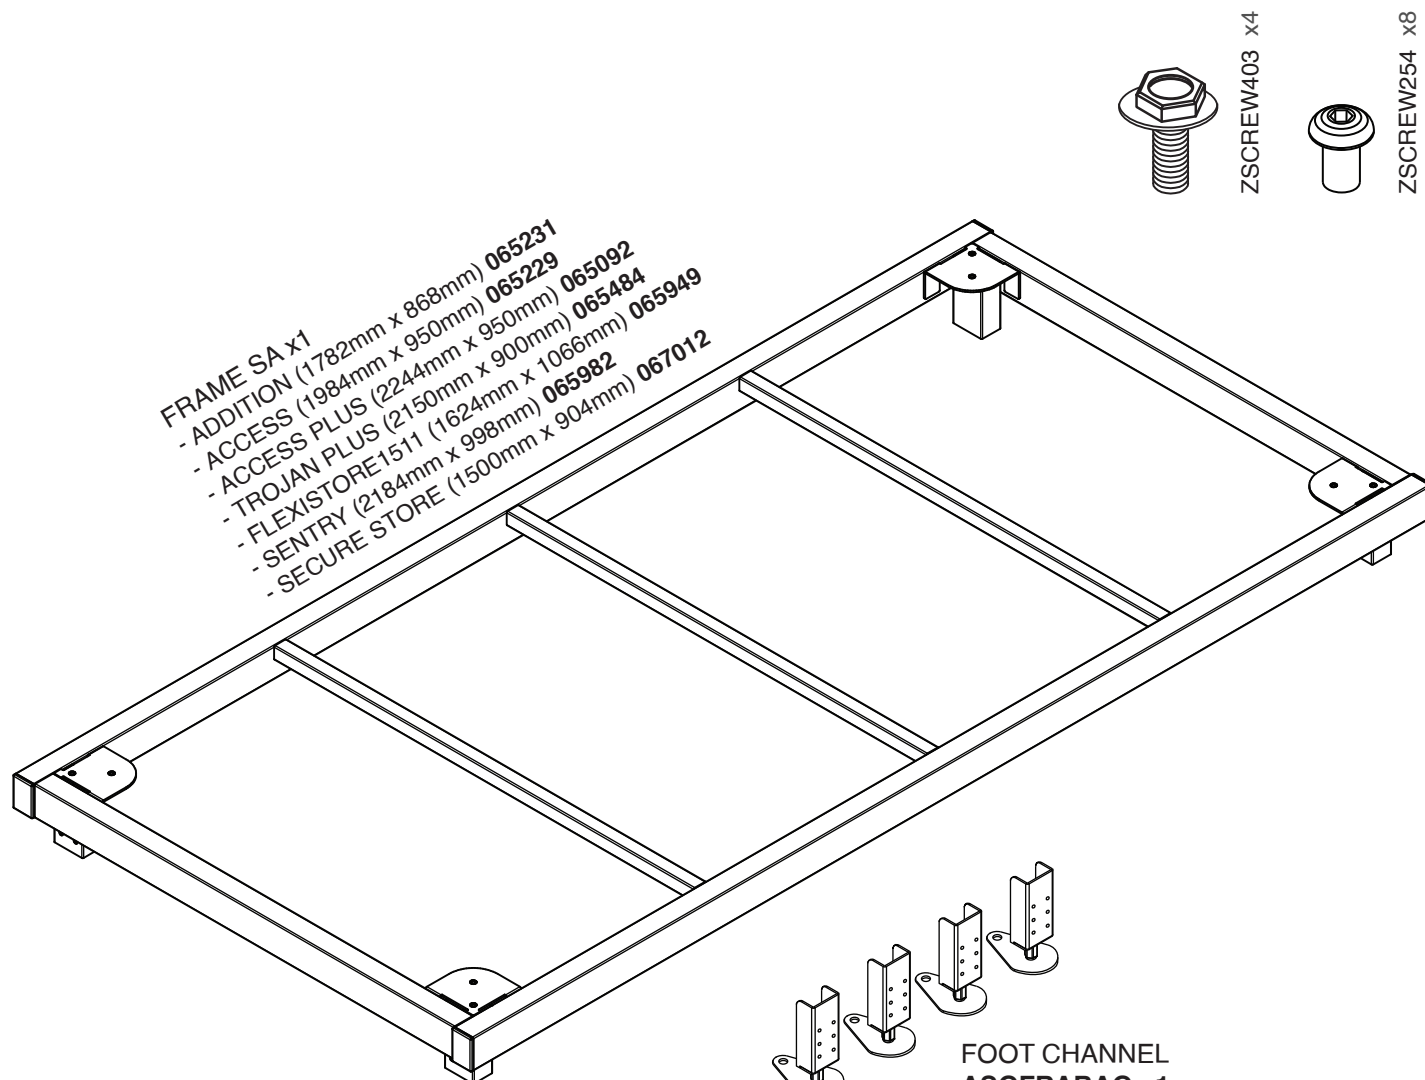


For maintenance instructions of this product visit www.asgardsss.co.uk

1! PLACE THE FOOT CHANNEL IN THE SUPPORT FRAME AND ATTACH USING 2 ZSCREW13.

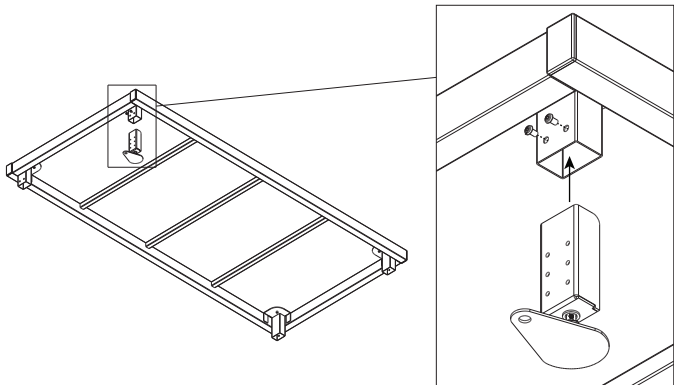


x2

2! ATTACH THE REMAINING 3 FOOT CHANNELS TO THE SUPPORT FRAME.

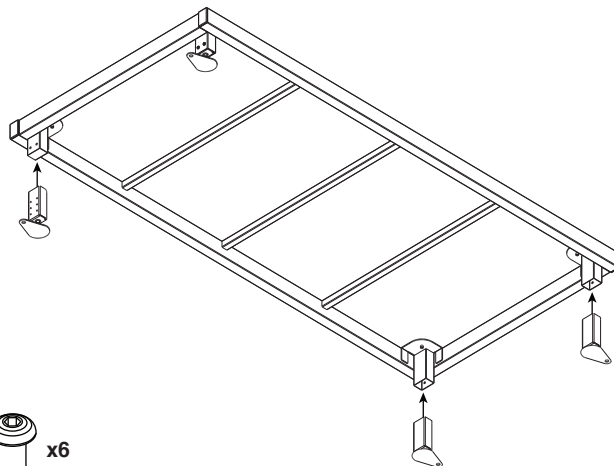


x6

3! SECURE THE SHED BASE IN POSITION USING 4 ZSCREW304 WITH A 10MM SPANNER.


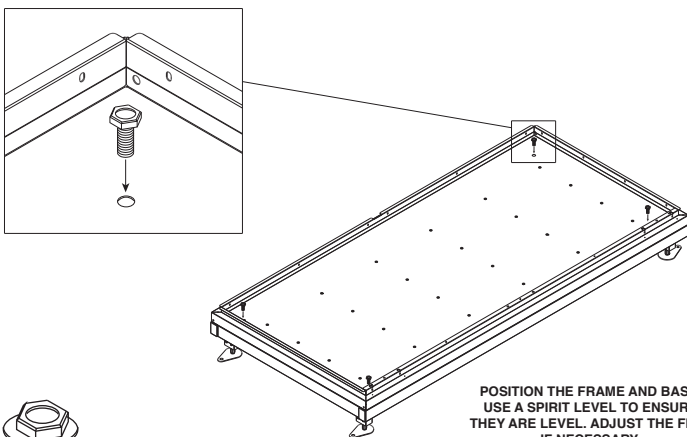


x4

POSITION THE FRAME AND BASE.
USE A SPIRIT LEVEL TO ENSURE
THEY ARE LEVEL. ADJUST THE FEET
IF NECESSARY.



4! WE ADVISE SECURING THE SUPPORT FRAME TO THE FLOOR BY USING 4 ZSCREW32 WITH A 10MM SPANNER. (THE 4 ZSCREW32 COME WITH YOUR SHED).

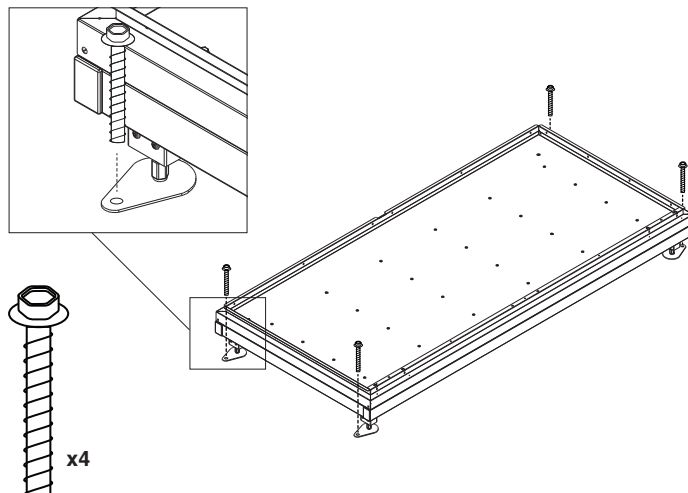

x4