SENTRY E SHED

BASE INSTRUCTIONS

Flat and firm base. Recommended: concrete, tarmac or paving flags.
Min. distance from walls/ shrubbery: 1000mm.
Min. base size (WxDxH) 2400mm x 1200mm x 50mm.

LEVELING THE UNIT

Correctly level the constructed unit using the shims (ZCOMPPLAS) provided prior to fixing the unit to the ground. Slide the packing pieces under the corners of the unit base as required until an equal gap has been achieved around the door allowing for its smooth operation and alignment.

It is always recommended to anchor the unit to the ground. Drill through the four holes in the base of the unit using 6mm dia masonry drill to a depth of 70mm. Screw in the anchor fixings. (These have a self cutting thread). If not anchoring the unit, fit the self seal plugs BEFORE BUILDING to seal the fixing holes from underneath.

TOOLS REQUIRED

Power driver POSI-DRIV screwdriver, 6mm dia. masonry drill, a 10mm socket or spanner.

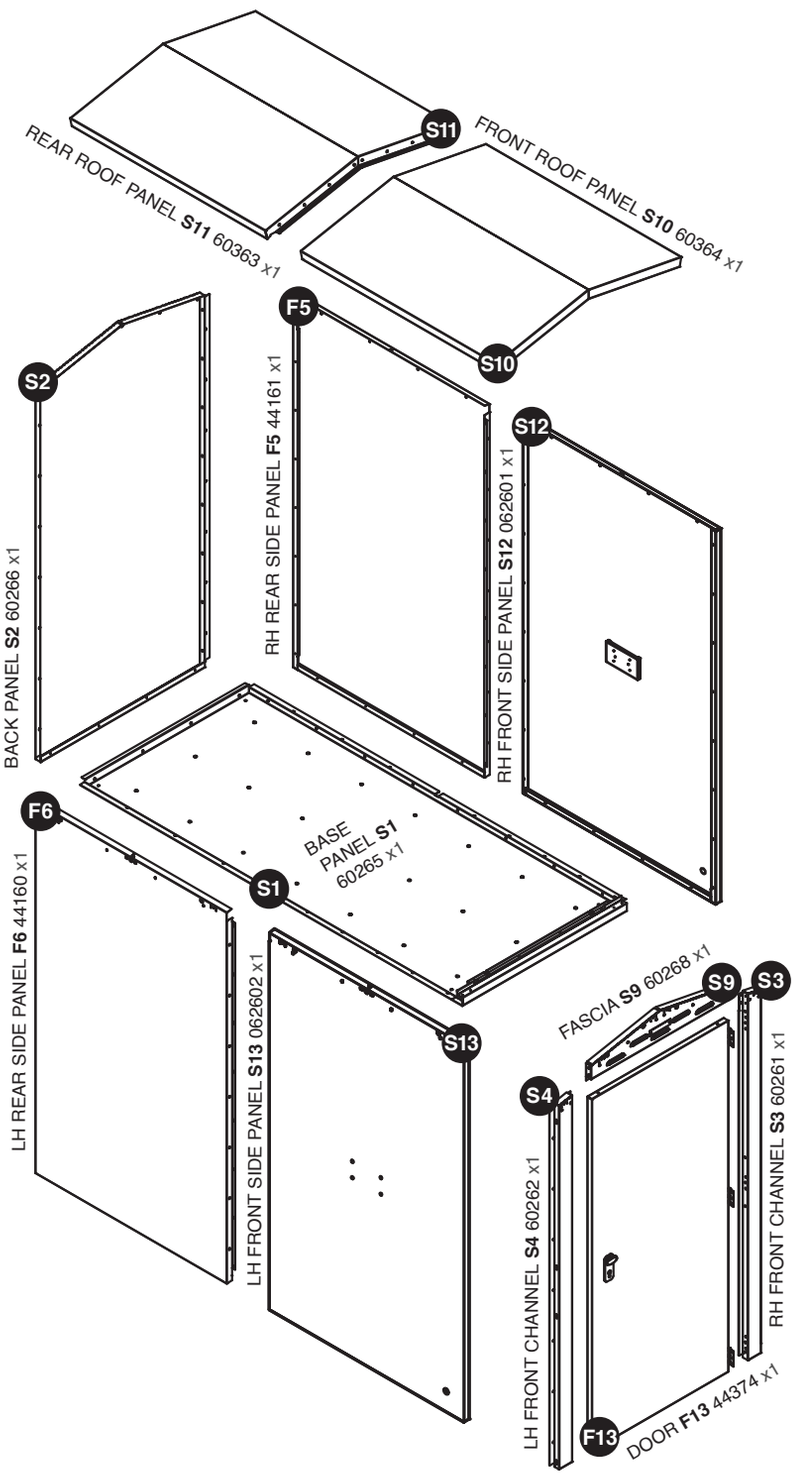

Warning: some panels may weigh over 20Kg. Beware of manual handling

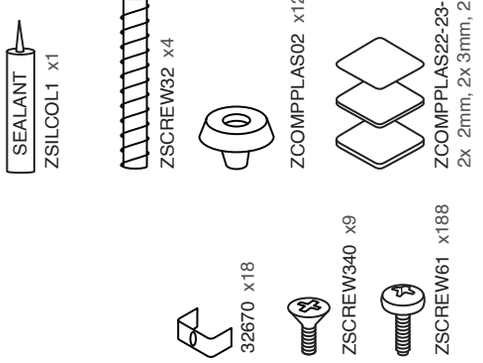



Warning: Please keep this key card safe! Refer to if replacement key is required.

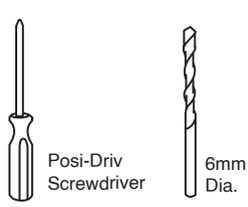

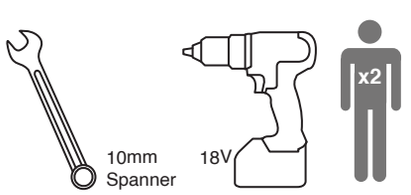

For maintenance instructions of this product visit www.asgardsss.co.uk

PLEASE NOTE ALL SCREWS ARE FIXED FROM THE INSIDE

1

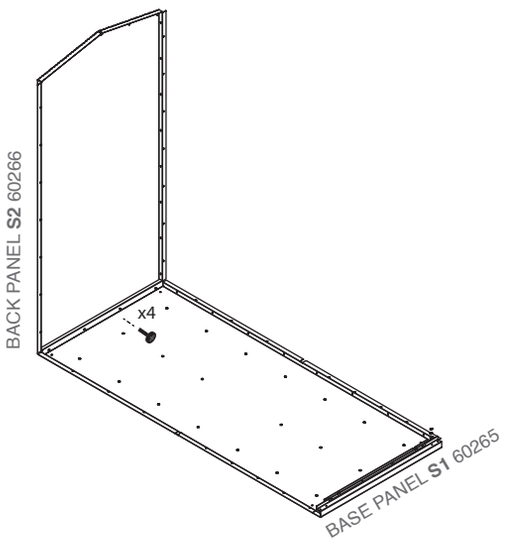

x4

2

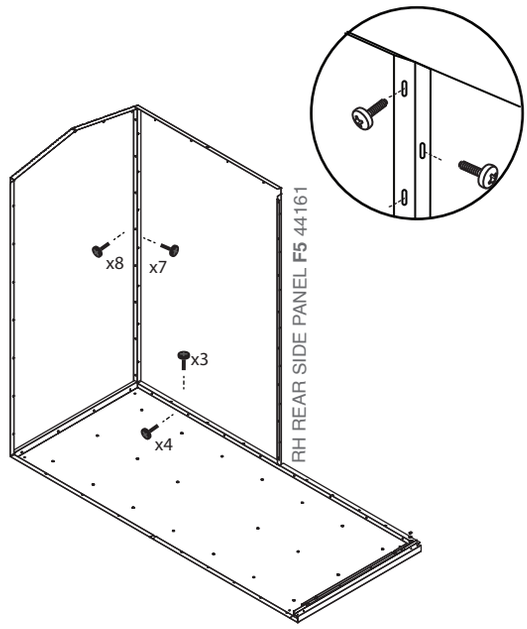

x22

3

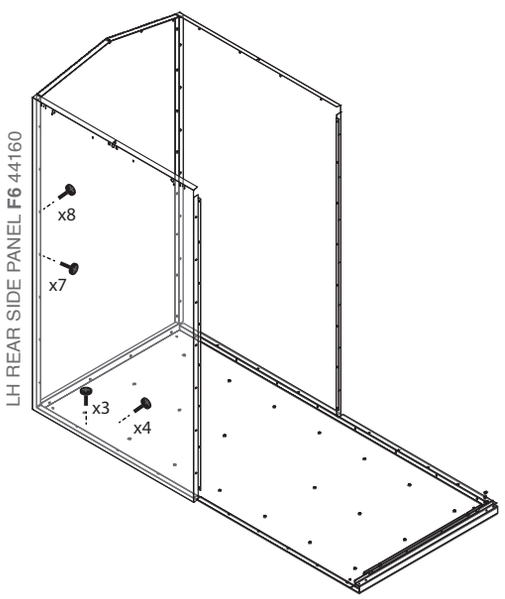

x22

4

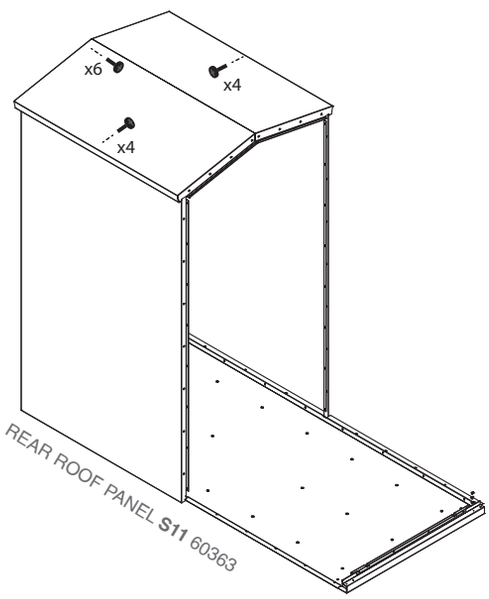

x14

5

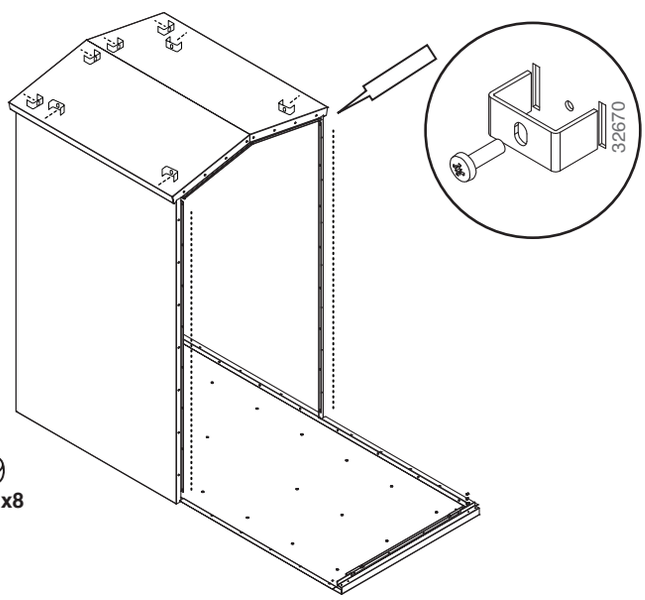

x8

6

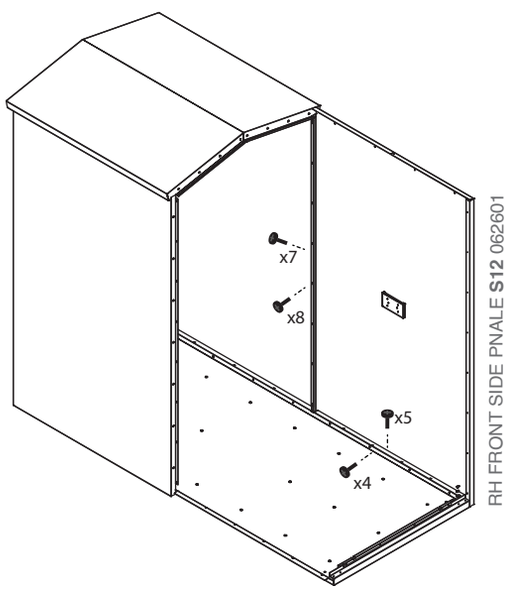

x24

7! RUN A CONTINUOUS BEAD OF SILICONE UP THE VERTICAL FRONT JOINTS & ALONG THE TOP EDGE OF BASE WHERE IN CONTACT WITH THE FRONT CHANNELS

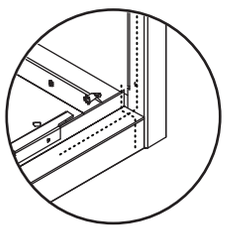

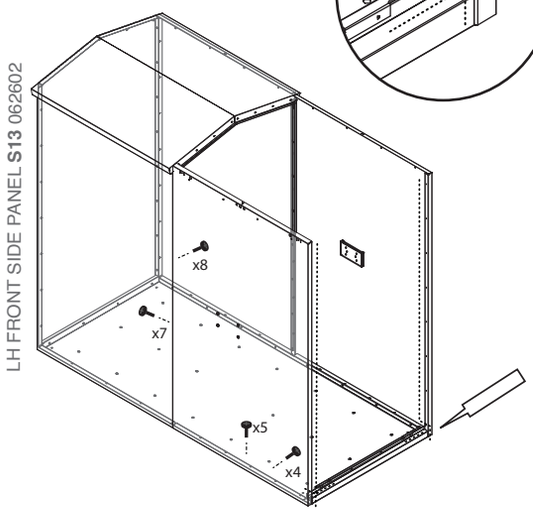

x24

8! PARTIALLY SCREW IN A ZSCREW61 INTO HOLES 1, 4, 5 & 8 ON BOTH SIDES OF THE SHED, LEAVING A GAP OF 5MM

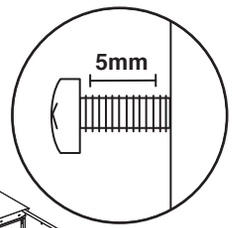



x8

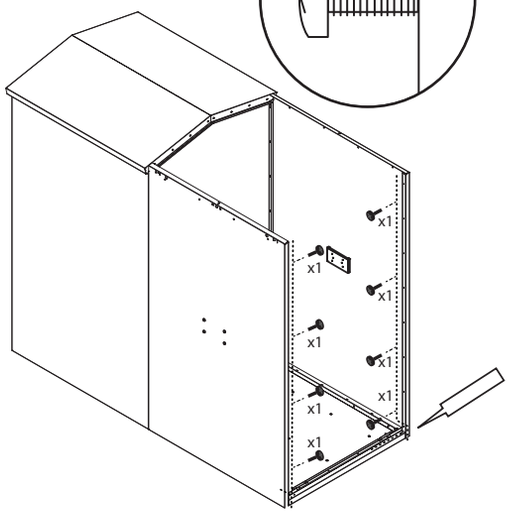

9! PLACE CHANNELS OVER SCREWS AND DROP INTO PLACE

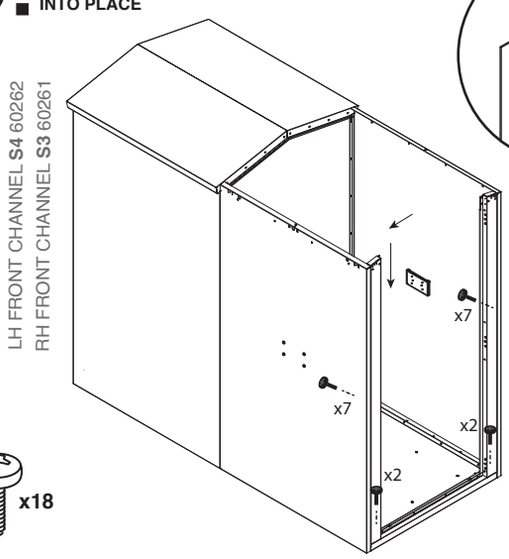

x18

10! TIGHTEN SCREWS FROM STEP 8 THROUGH THE ACCESS HOLES

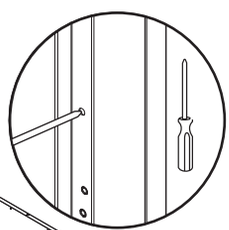

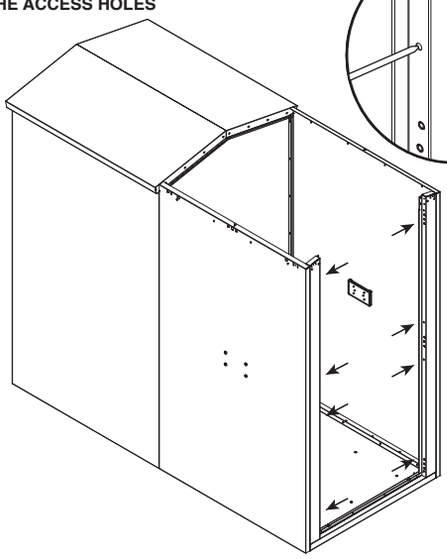

11! SEAL ACCESS HOLES WITH ZCOMPPLAS02

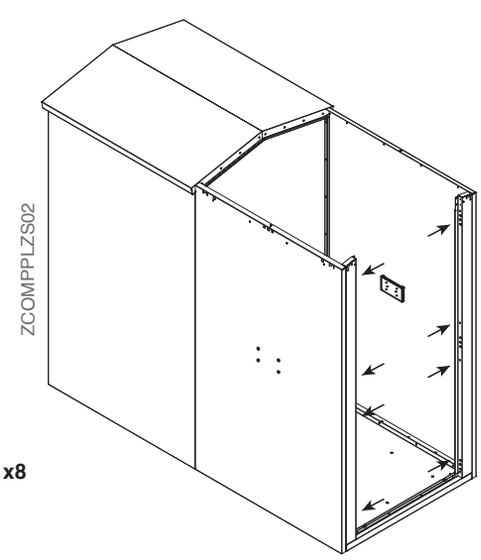

x8

12

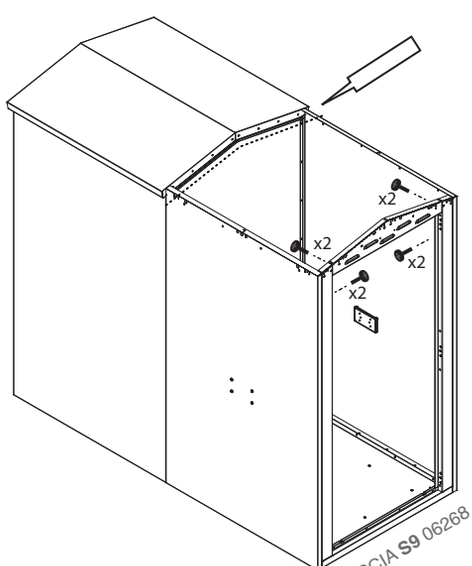

x8

13

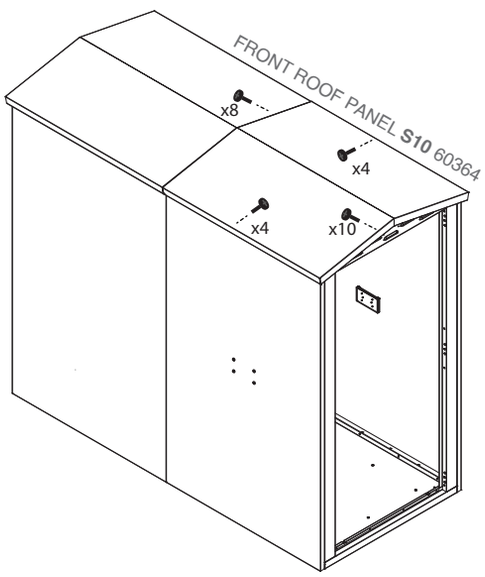

x26

14

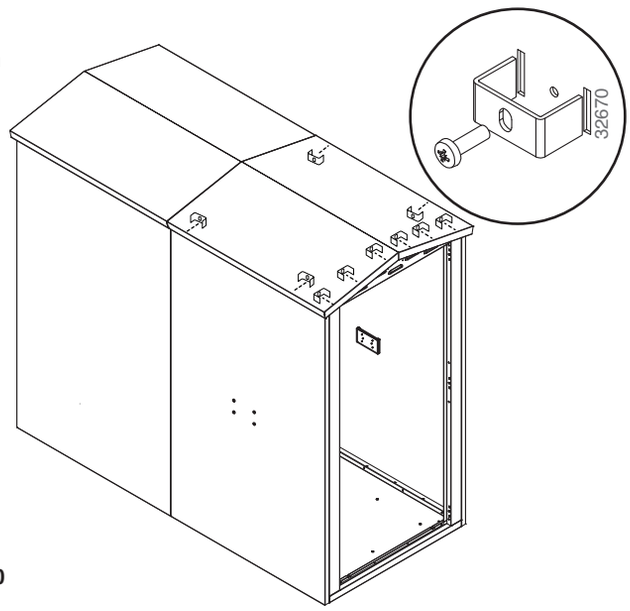

x10

15

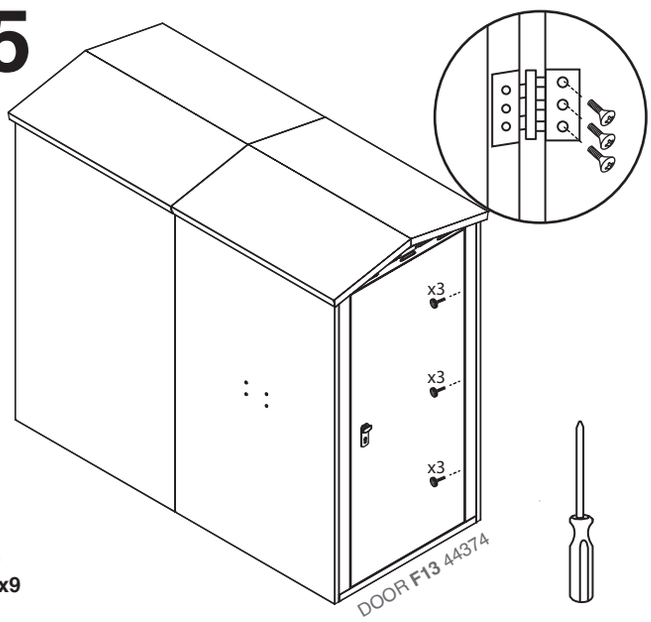

x9

16!

LEVEL SHED UNTIL DOORS ALIGN USING ZCOMPPLAS AS SUITABLE

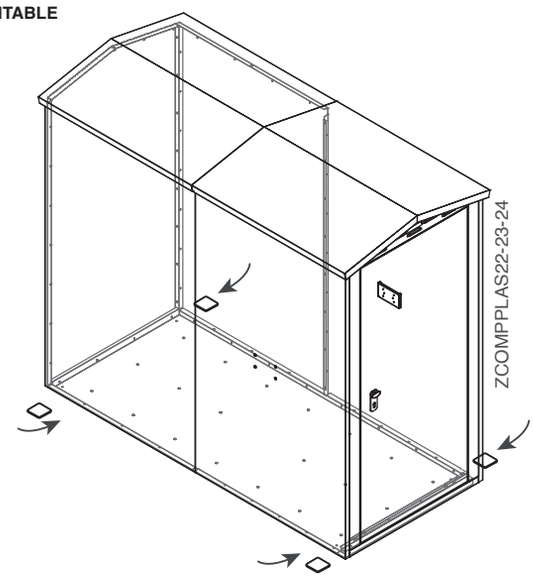



17

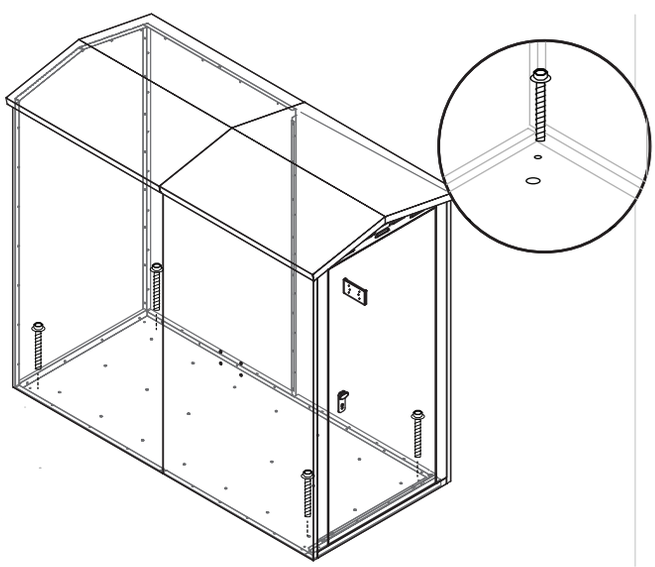

x4

18!

SEAL ALL INTERNAL CORNERS

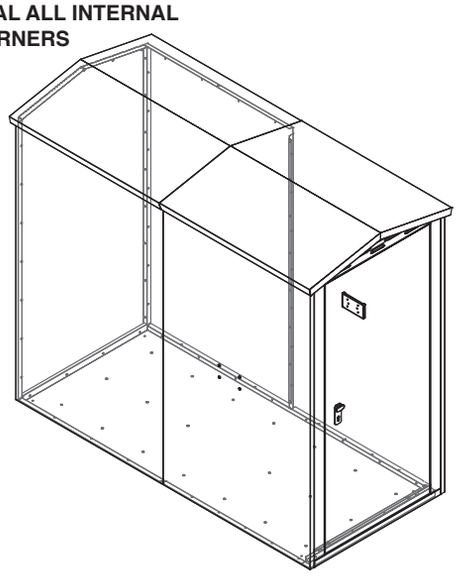

www.asgardsss.co.uk